

PIPER PARTS CATALOG

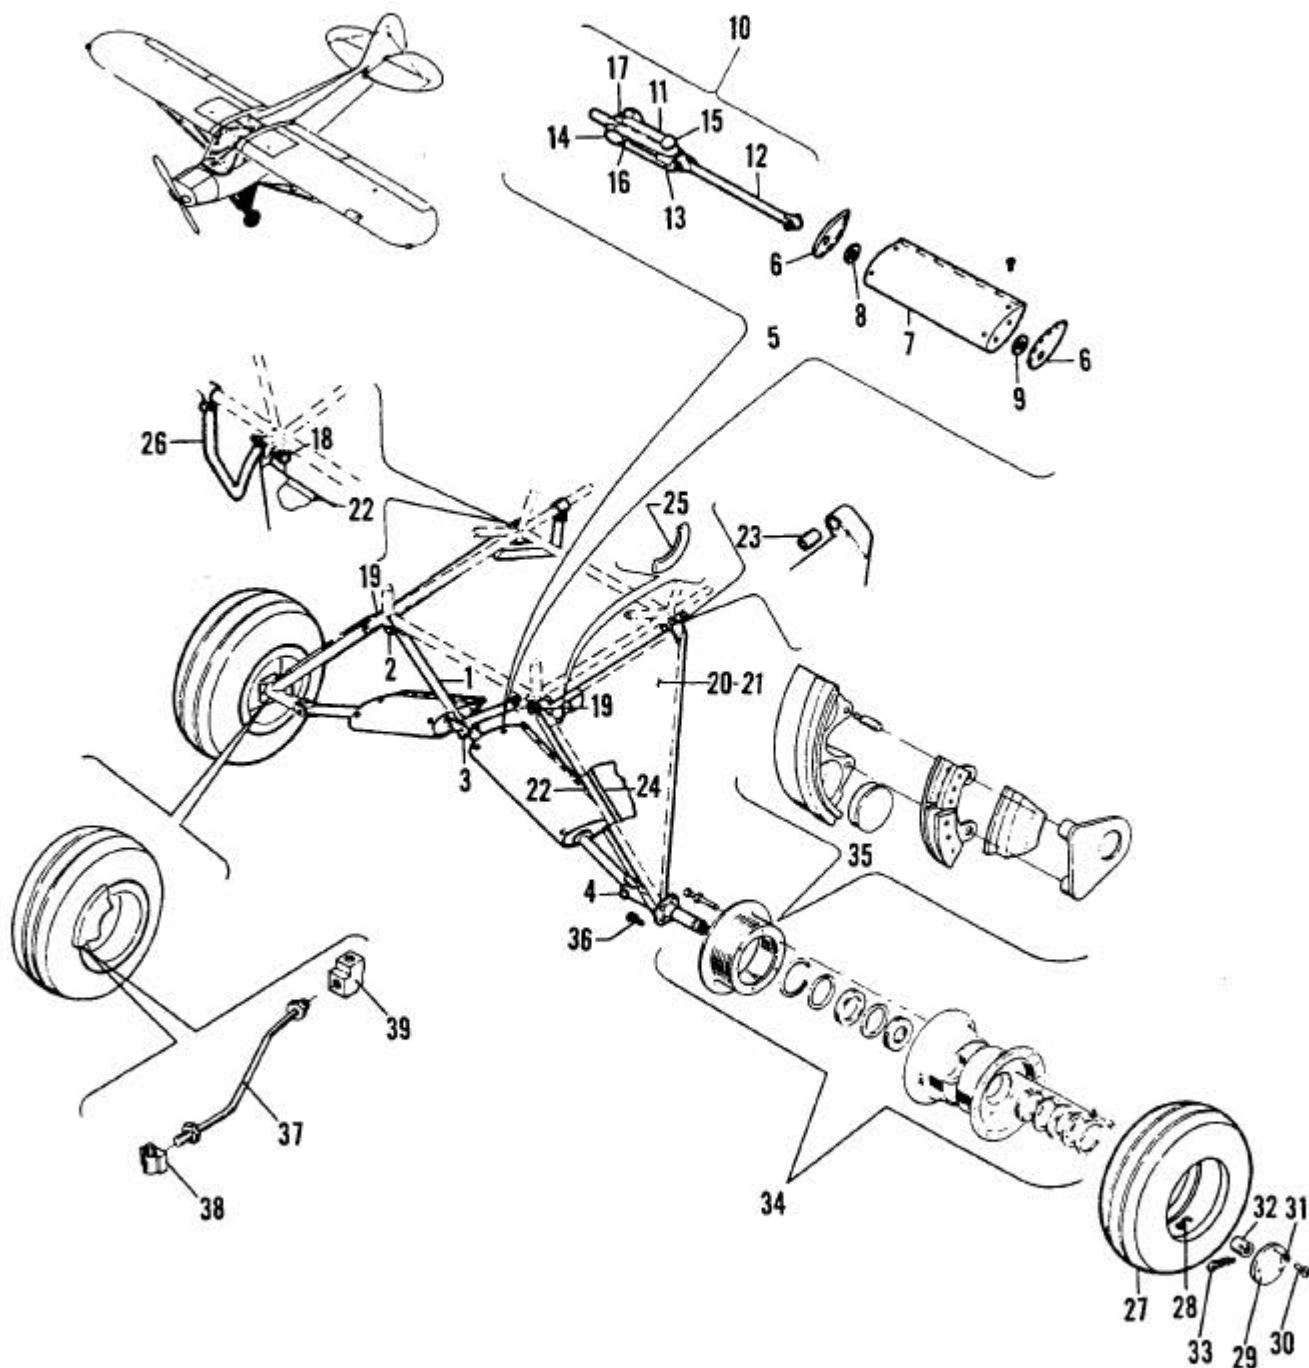


Figure 18 Landing Gear Installation