

ENGINE PUMP OR EMERGENCY PUMP WILL NOT BUILD PRESSURE IN SYSTEM.

No fluid in reservoir.	Check fluid level.	Refill reservoir.
Broken gear or door line.	Check visually.	Repair or replace hydraulic line.
Door solenoid valve jammed or sticking at mid travel.	Switch master switch on and off to free jammed valve by solenoid hammering; if this fails to dislodge valve spool, remove Power Pack for repair of jammed valve.	Repair solenoid valve.
Faulty secondary relief valve.	Refer to paragraph 5A-137.	Remove Power Pack, repair or replace secondary relief valve.