

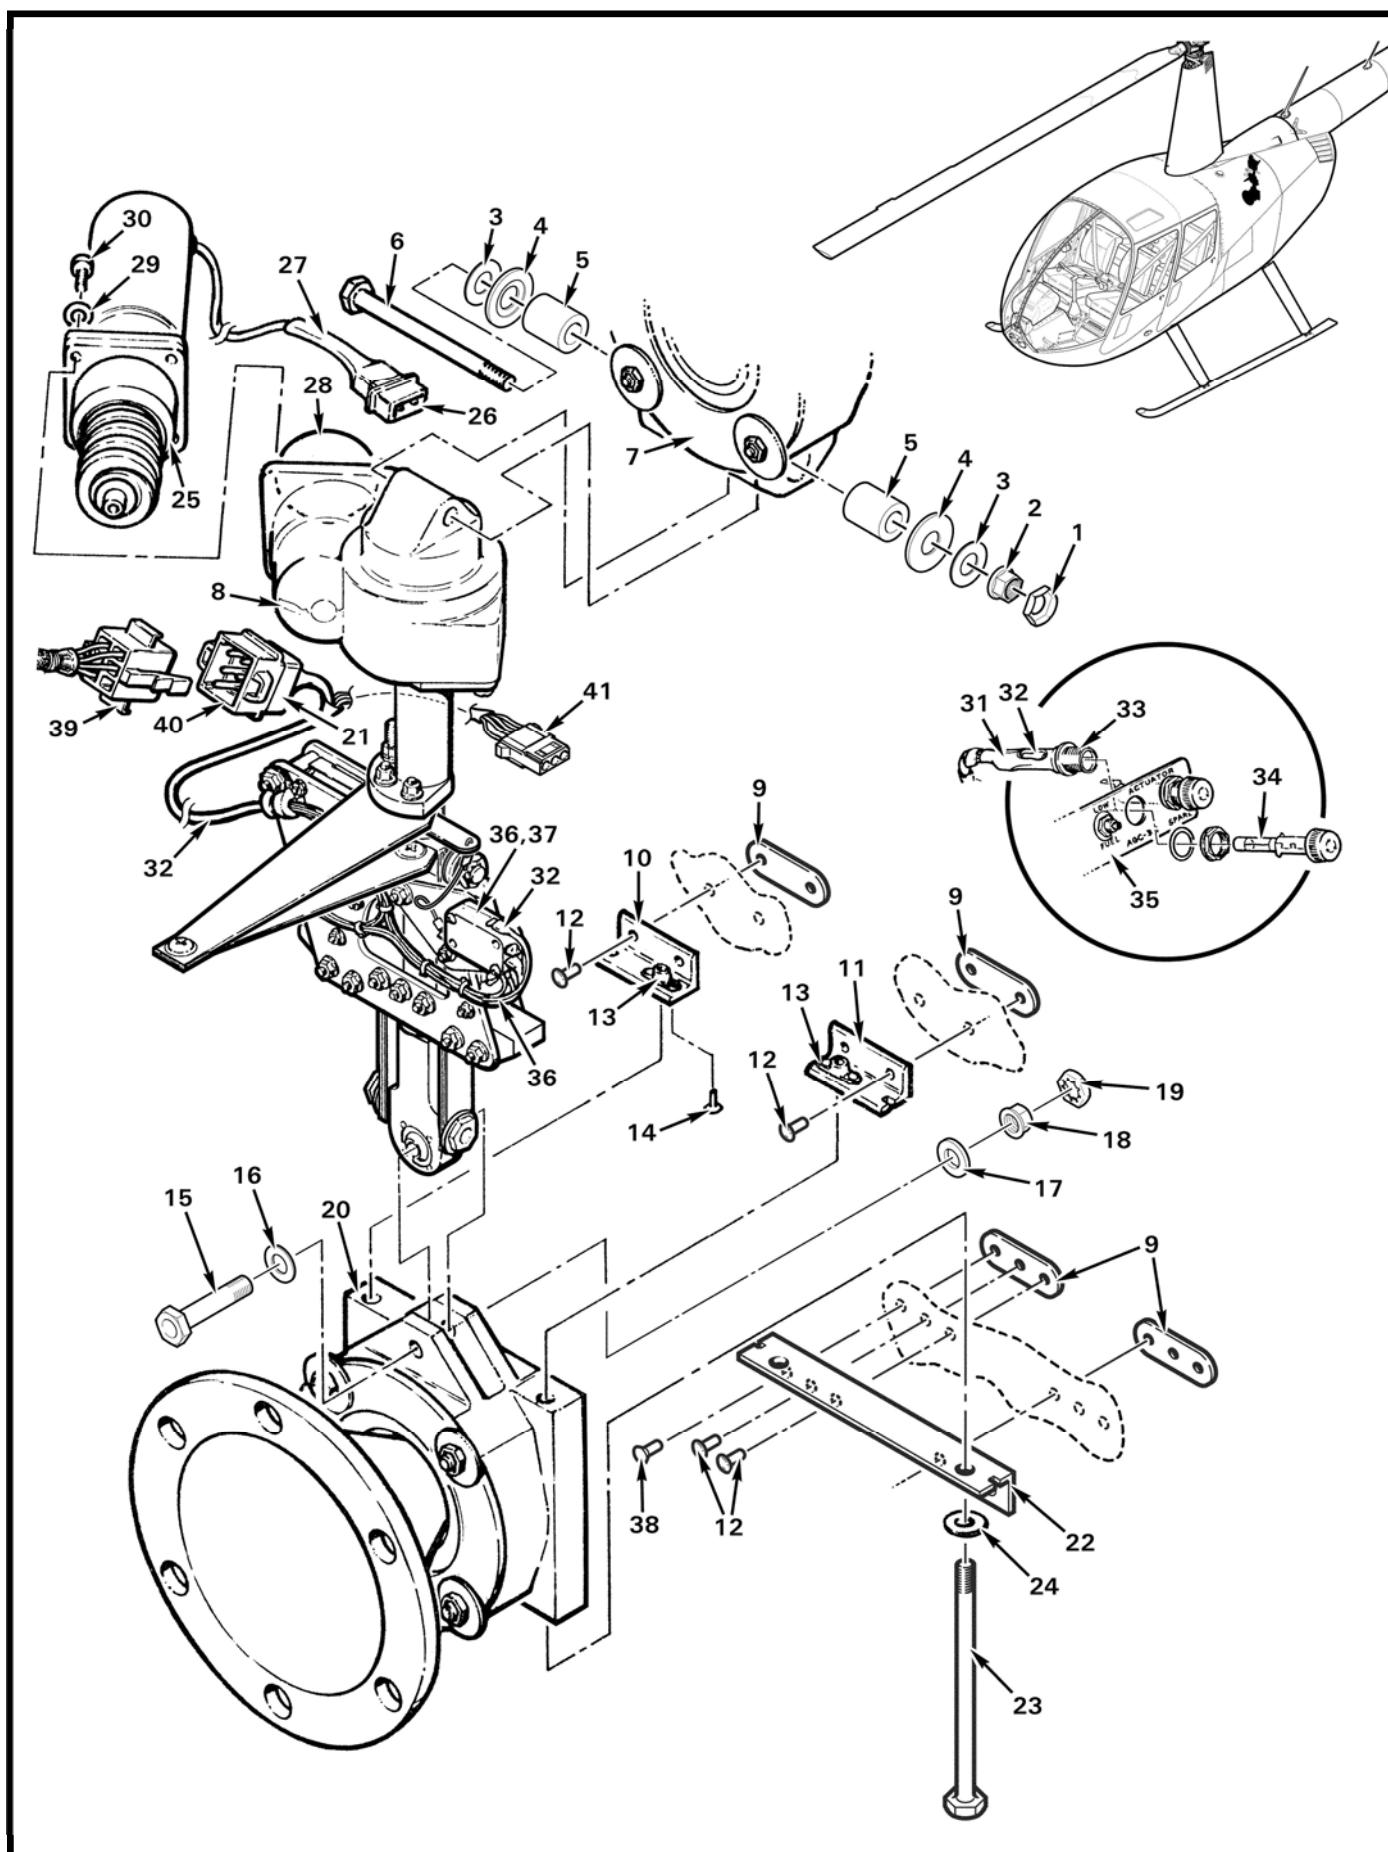


FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	QTY PER ASSY
BELT TENSION ACTUATOR INSTALLATION				
63-19-1	B330-16	Palnut	X	1
2	MS21042L5	Nut	X	1
3	NAS1149F0532P	Washer	X	2
4	D214-2	Washer (install with counterbore toward journal)	X	2
5	C105-2	Journal	X	2
6	NAS6605-38	Bolt	X	1
7	C184-2	Upper Bearing Assembly (Ref, see Figure 63-15)	X	1
8	C051-1	Actuator Assembly (14-volt ships; includes items 26 [D276-1], 29 thru 32, and 38)	X	1
	C051-1R	C051-1 Actuator Assembly (overhaul exchange)	X	1
	C051-2	Actuator Assembly (28-volt ships; includes items 26 [D276-3], 29 thru 32, and 38)	X	1
	C051-1R	C051-2 Actuator Assembly (overhaul exchange)	X	1
9	A185-3	Plate	X	4
10	A185-2	Bracket	X	1
11	A185-5	Bracket	X	1
12	MS20470AD4	Rivet	X	8
13	MS21075L3E	Nutplate	X	2
14	MS20426AD3	Rivet	X	4
15	NAS6604-13	Bolt	X	1
16	NAS1149F0432P	Washer	X	1
17	NAS1149F0463P	Washer	X	1
18	MS21042L4	Nut	X	1
19	B330-13	Palnut	X	1
20	C007-5	Shaft and Bearing Assembly (Incl C181-3 lower bearing)	X	1
	C007-5R	C007-5 Shaft and Bearing Assembly (overhaul exchange)	X	1
	C181-3	Bearing (Ref)	O	1
21	B158-12	Heat Shrink (around item 40)	X	A/R
22	A185-1	Bracket	X	1
23	AN3-41A	Bolt	X	2
24	NAS620-10L	Washer	X	2
25	D276-1	Gearmotor Assembly (14-volt ships; includes items 27 and 28)	X	1
	D276-3	Gearmotor Assembly (28-volt ships; includes items 27 and 28)	X	1
NOTES				
Continues				