

3-2. WARNING AND CAUTION INDICATORS

Warning and caution indicators are located at the top of the instrument panel (Ref. Figure 3-1).

A red warning or yellow caution indicator will illuminate and in some cases, an audible warning will sound announcing a failure or malfunction.

Audible and visual warnings are provided for:

ENGINE OUT

LOW ROTOR

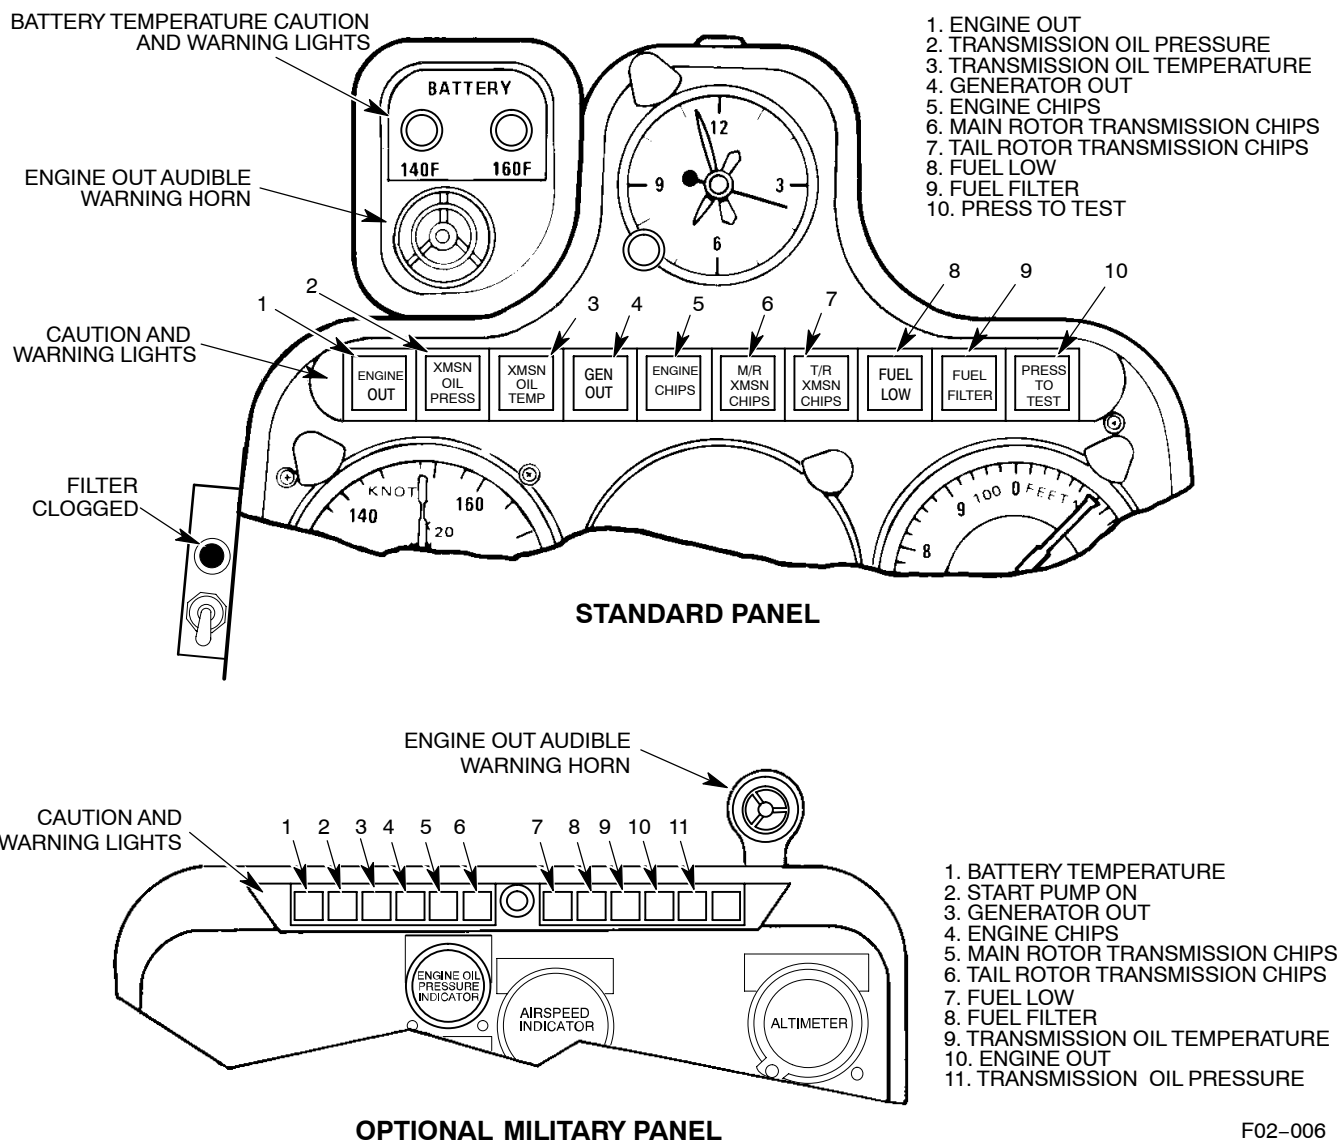


Figure 3-1. Warning and Caution Indicators

F02-006