
3-10. MAIN ROTOR AND TAIL ROTOR TRANSMISSION MALFUNCTIONS

M/R TRANSMISSION OIL PRESSURE

Indications: Red  indicator ON.

Conditions: Transmission oil pressure low.

Procedures:

- Land as soon as possible.

M/R TRANSMISSION OIL TEMPERATURE

Indications: Red  indicator ON.

Conditions: Transmission oil temperature exceeds maximum limit.

Procedures:

- Land as soon as possible.

M/R TRANSMISSION CHIP DETECTOR

Indications: Yellow  indicator ON.

Conditions: Metal contamination of oil.

Procedures:

- Land as soon as possible.

TAIL ROTOR TRANSMISSION CHIP DETECTOR

Indications: Yellow  indicator ON.

Conditions: Metal contamination of oil.

Procedures:

- Land as soon as possible.