


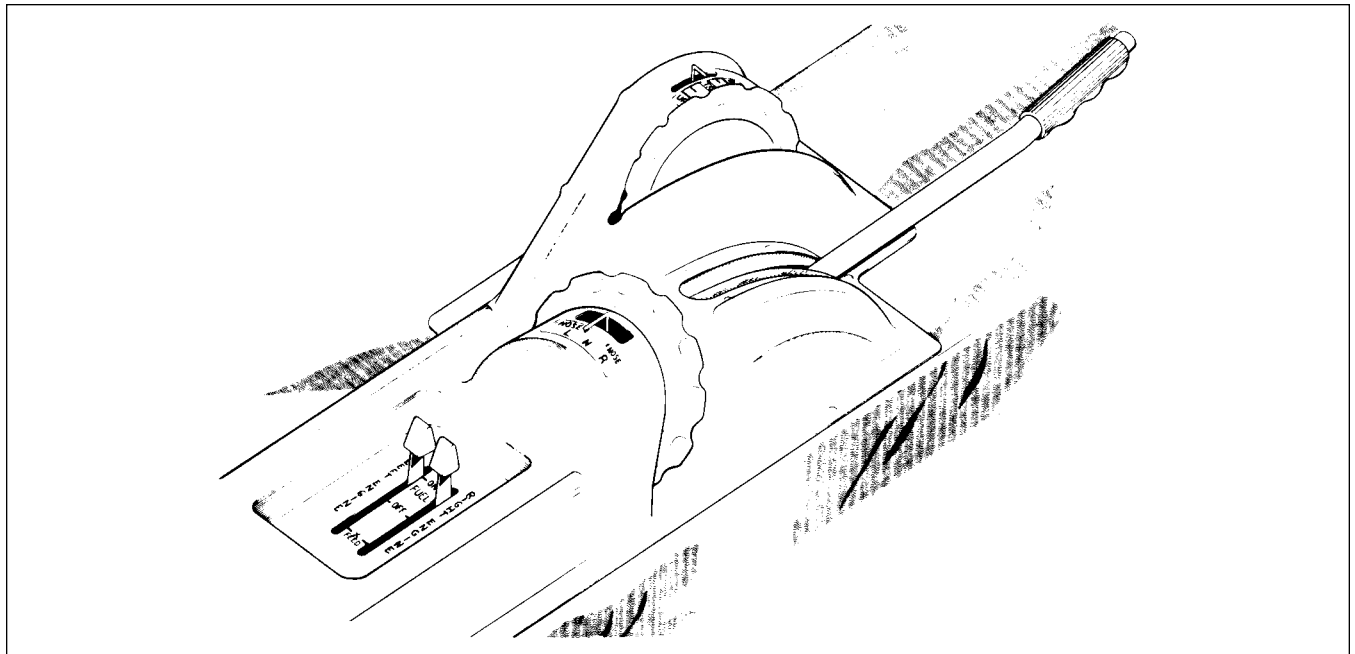

CONSOLE


Figure 7-9

The flaps are manually operated and spring loaded to return to the retracted position. A four-position flap control lever (Figure 7-9) between the front seats adjusts the flaps for reduced landing speeds and glide path control. The flaps have three extended positions - 10, 25 and 40 degrees - as well as the fully retracted position. A button on the end of the lever must be depressed before the control can be moved. A past center lock incorporated in the actuating linkage holds the flap when it is in the retracted position so that it may be used as a step on the right side. Since the flap will not support a step load except in the fully retracted position, the flaps should be retracted when people are entering or leaving the airplane.

7.15 FUEL SYSTEM

Fuel is stored in fuel tanks located in each wing. The tanks in each wing are interconnected to function as a single tank (refer to Figure 7-11). All tanks on a side are filled through a single filler in the outboard tank, and as fuel is consumed from the inboard tank, it is replenished by fuel from outboard. Only two and one half gallons of fuel in each wing is unusable, giving the Seneca II a total of 93 usable gallons with standard fuel tanks or 123 usable gallons with the optional fuel tanks installed. The minimum fuel grade is 100 or 100LL aviation grade. The fuel tank vents, one installed under each wing, feature an anti-icing design to prevent ice formation from blocking the fuel tank vent lines.

The fuel injection system is a "continuous flow" type which utilizes a vapor return line leading back to the fuel tanks. This line provides a route back to the tanks for vapor laden fuel that has been separated in the injector pump swirl chamber. Each engine has an engine driven fuel pump that is a part of the fuel injection system. An auxiliary fuel system is provided. The purpose of the electrically powered auxiliary fuel system is to supply fuel to the engine in case of engine driven fuel pump shaft failure or malfunction, for ground and inflight engine starting, and for vapor suppression. The two auxiliary fuel pump switches are located on the electrical side panel and are three position rocker switches; LO, HI and OFF. The LO auxiliary fuel pressure is selected by pushing the top of the switch. The HI auxiliary fuel pressure is selected by pushing the bottom of the switch, but this can be done only after unlatching the adjacent guard. When the HI auxiliary fuel pump is activated, an amber light near the annunciation panel is illuminated for each pump. These lights dim whenever the pump pressure reduces automatically and manifold pressure is below approximately 21 inches.

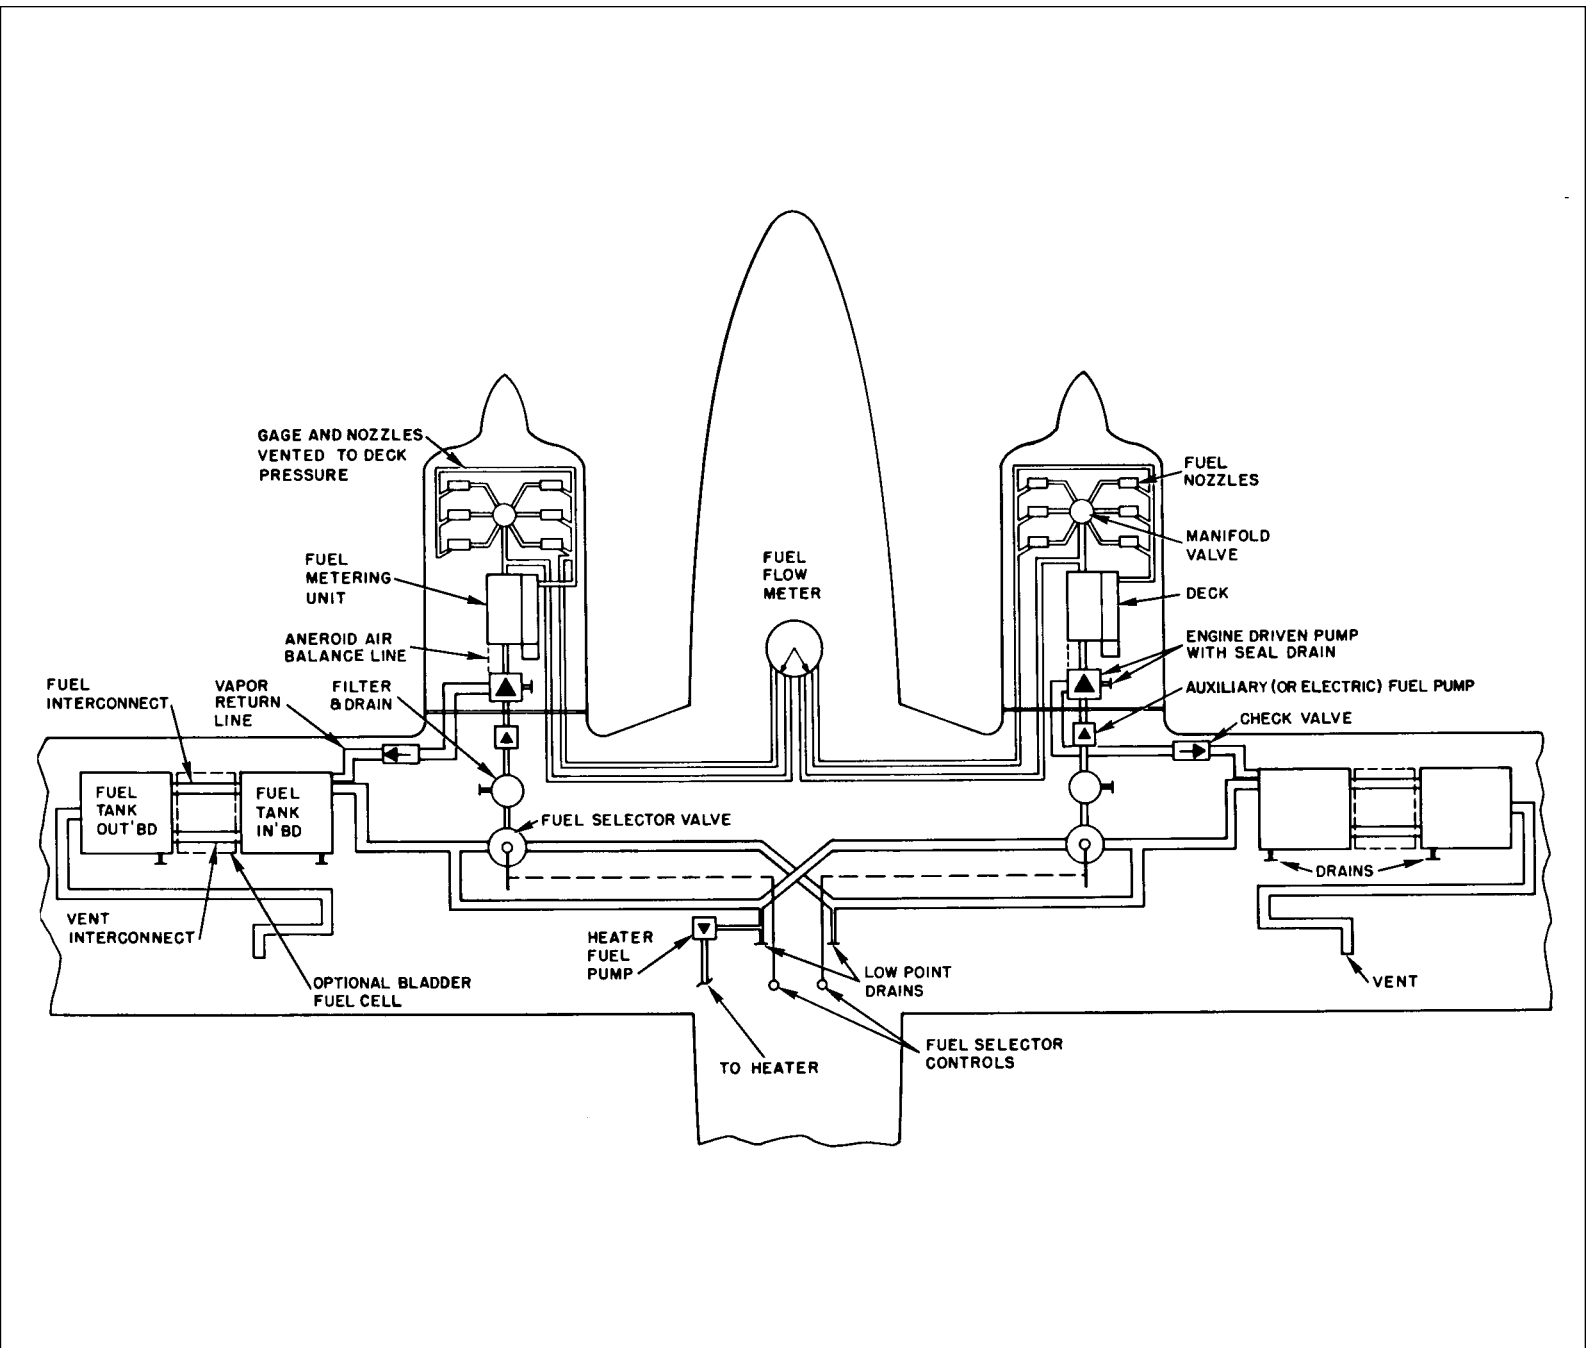

FUEL SYSTEM SCHEMATIC
Figure 7-11

In case of a failed engine-driven fuel pump, auxiliary fuel pressure should be selected. Adequate pressure and fuel flow will be supplied for up to approximately 75% power. Manual leaning to the correct fuel flow will be required at altitudes above 15,000 feet and for engine speeds less than 2300 RPM. An absolute pressure switch automatically selects a lower fuel pressure when the throttle is reduced below 21" Hg manifold pressure and the HI auxiliary fuel pump is on.

NOTE

Excessive fuel pressure and very rich fuel/air mixtures will occur if the HI position is energized when the engine fuel injection system is functioning normally.

Low auxiliary fuel pressure is available and may be used during normal engine operation both on the ground and inflight for vapor suppression should it be necessary as evidenced by unstable engine operation or fluctuating fuel flow indications during idle or at high altitudes.

Separate spring loaded OFF primer button switches, located adjacent to the starter switches are used to select HI auxiliary fuel pump operation for priming, irrespective of other switch positions. These primer buttons may be used for both hot or cold engine starts.

On airplanes equipped with an optional engine primer system (identified by Placard below starter switch shown in Figure 7-15), the primer switch location and actuation is the same as the basic airplane. However, this system does provide a separate primer system as an integral part of the engine fuel system. An electrically operated diverter valve is located in the metered fuel supply line between the air throttle valve and the manifold valve. Other components are two primer nozzles, located in the intake manifold on each side of the engine, the interconnecting fuel lines, and fine wire spark plugs. Actuation of the engine primer switch operates the auxiliary electric fuel pump on Hi and energizes the diverter valve which supplies fuel to each primer nozzle. The diverter valve does not shut off fuel flow to the manifold valve, therefore some quantity of fuel is also supplied to each cylinder nozzle during priming. Normal operation of the auxiliary fuel pump is unchanged.

Fuel management controls are located on the console between the front seats. There is a control lever for each of the engines, and each is placarded "ON" - "OFF" - "X FEED." During normal operation, the levers are in the "ON" position, and each engine draws fuel from the tanks on the same side as the engine. The two fuel systems are interconnected by crossfeed lines. When the "X FEED" position is selected, the engine will draw fuel from the tanks on the opposite side in order to extend range and keep fuel weight balanced during single-engine operation. The "OFF" position shuts off the fuel flow from a side.

NOTE

When one engine is inoperative and the fuel selector for the operating engine is on "X FEED" the selector for the inoperative engine must be in the "OFF" position. Do not operate with both selectors on "X FEED." Do not take off with a selector on "X FEED." Fuel and vapor are always returned to the tank on the same side as the operating engine.

Before each flight, fuel must be drained from low points in the fuel system to ensure that any accumulation of moisture or sediment is removed from the system. Fuel drains are provided for each fuel filter (2), each fuel tank (4), and each crossfeed line (2). The fuel filter drains are located on the outboard underside of each engine nacelle; two fuel tank drains are located on the underside of each wing; fuel crossfeed drains are located at the lowest point in the fuel system. on the underside of the fuselage, just inboard of the trailing edge of the right wing flap.