

Surface - Cross / Head / Tail Wind Calculator			
Type in the following information	Runway (i.e. 220)	Wind Direction (i.e. 270)	Wind Speed Knots
	250	350	10
Calculate Reset	The Crosswind is 10 Knots		The Head(+) / Tail(-) wind is -2 Knots

Milt Kooyman, SAIC, Shaw OWS