

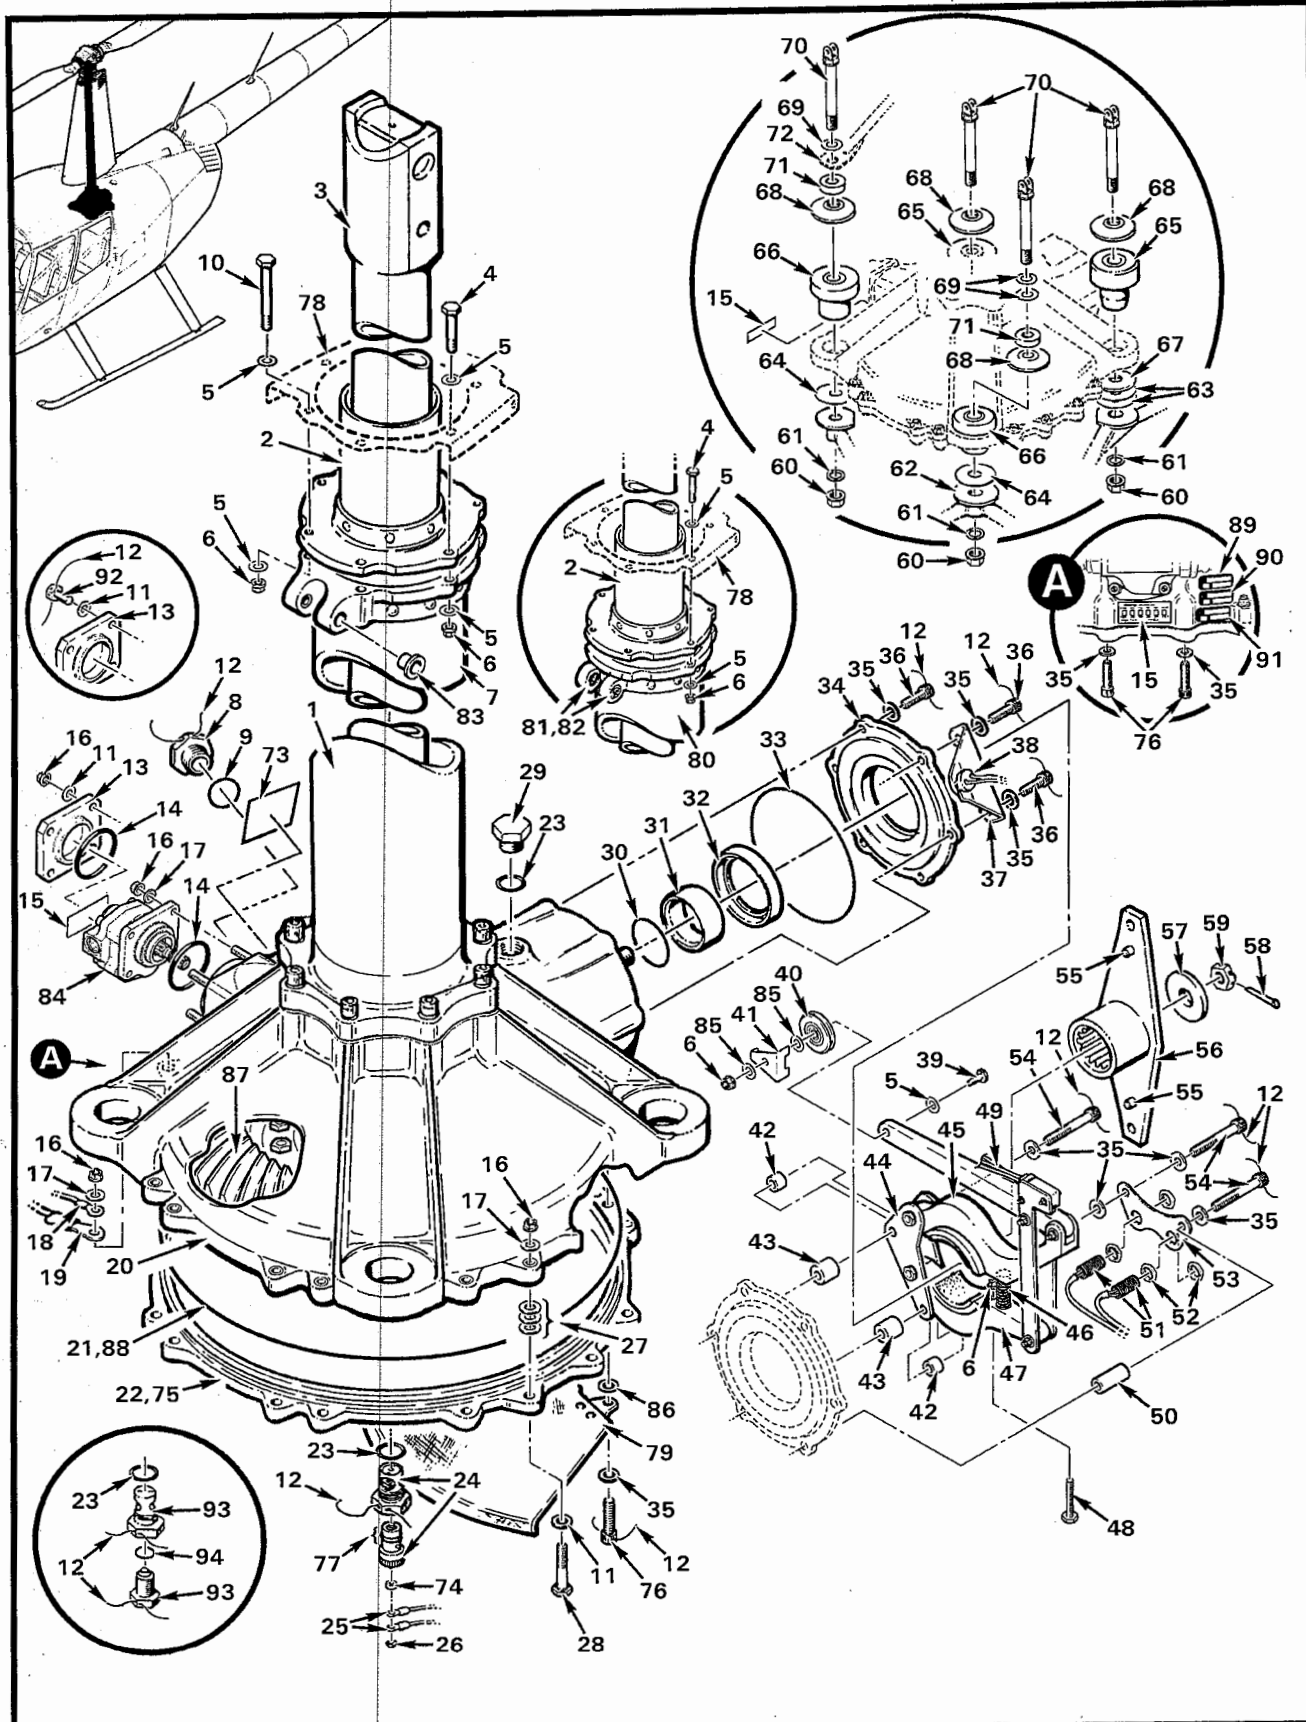


FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	QTY PER ASSY
		MAIN ROTOR GEARBOX AND MAST ASSEMBLY (Cont'd)		
63-1-51	B320-2	Sender Assembly (Incl item 52)	X	2
52	—	Nut	O	4
53	D114-1	Bracket	X	1
54	NAS1352-4-30	Screw	X	3
			X	2
56	C908-1	Yoke Assembly (Includes item 55. Coat splines of C146-2 pinion with B270-21 protectant before installing yoke assembly.)	X	1
57	C141-10	Washer	X	1
58	MS24665-283	Cotter Pin	X	1
59	AN320-8	Nut (B270-11 on threads)	X	1
60	D210-10	Nut (install with A257-9 anti-seize on threads)	X	4
61	A141-21	Washer	X	4
62	C020-1	Upper Frame (Ref)		
63	C796-2	Shim (3 maximum per aft pad)	X	A/R
64	A796-1	Shim (3 maximum per fwd pad)	X	A/R
65	C653-3*	Mount	X	2
66	A653-2*	Mount (supersedes A653-1; if replacing a -1 mount replace both forward mounts)	X	2
67	C796-3	Spacer	X	2
68	A267-1	Washer	X	4
69	NAS1149F1063P	Washer	X	A/R
70	A650-4	Fitting	X	4
71	C130-21	Spacer	X	2
72	C345-1	Strut Weldment (Ref)		
73	A654-56	Decal (Ref; main rotor gearbox fill/oil instructions. No longer available. Superseded by F654-13 decal. See Figure 11-5.)		
74	A130-14	Spacer	X	1
75	A257-2LT	Oil – Gearbox (one-liter bottle)	X	A/R
	A257-2	Oil – Gearbox (one-gallon bottle)	X	A/R
76	NAS1352-4-16	Screw	X	6
77	O12C	O-Ring	X	2
78	C261-1	Mast Fairing Assembly (Ref, see also Figure 53-11)	X	2
79	C747-1	Baffle Assembly	X	1
80	C283-1	Mast Assembly (Ref; ship S/N 0001 thru 9999; used with item 81)		
NOTES * Installed with water as lubrication or A257-8 rubber lubricant.				
				Continues