

Section IV
Normal Procedures

BEECHCRAFT
Debonair C33
Bonanza E33 and F33

DESCENT

1. Altimeter - SET
2. Power - AS REQUIRED (avoid prolonged idle settings and low cylinder head temperatures)
3. Mixture - ENRICH AS REQUIRED

BEFORE LANDING

1. Seat Belts - SECURE

NOTE

All reclining seats must be in the upright position during landing.

2. Fuel Selector Valve - SELECT TANK MORE NEARLY FULL
3. Mixture - FULL RICH (or as required by field elevation)
4. Landing Gear - DOWN and CHECK. (Observe maximum extension speed)
5. Landing Light - AS REQUIRED
6. Flaps - DOWN (Observe maximum extension speed)
7. Airspeed - ESTABLISH LANDING APPROACH SPEED.
8. Propeller - HIGH RPM
9. Electric Elevator Trim Switch - OFF (If installed)