

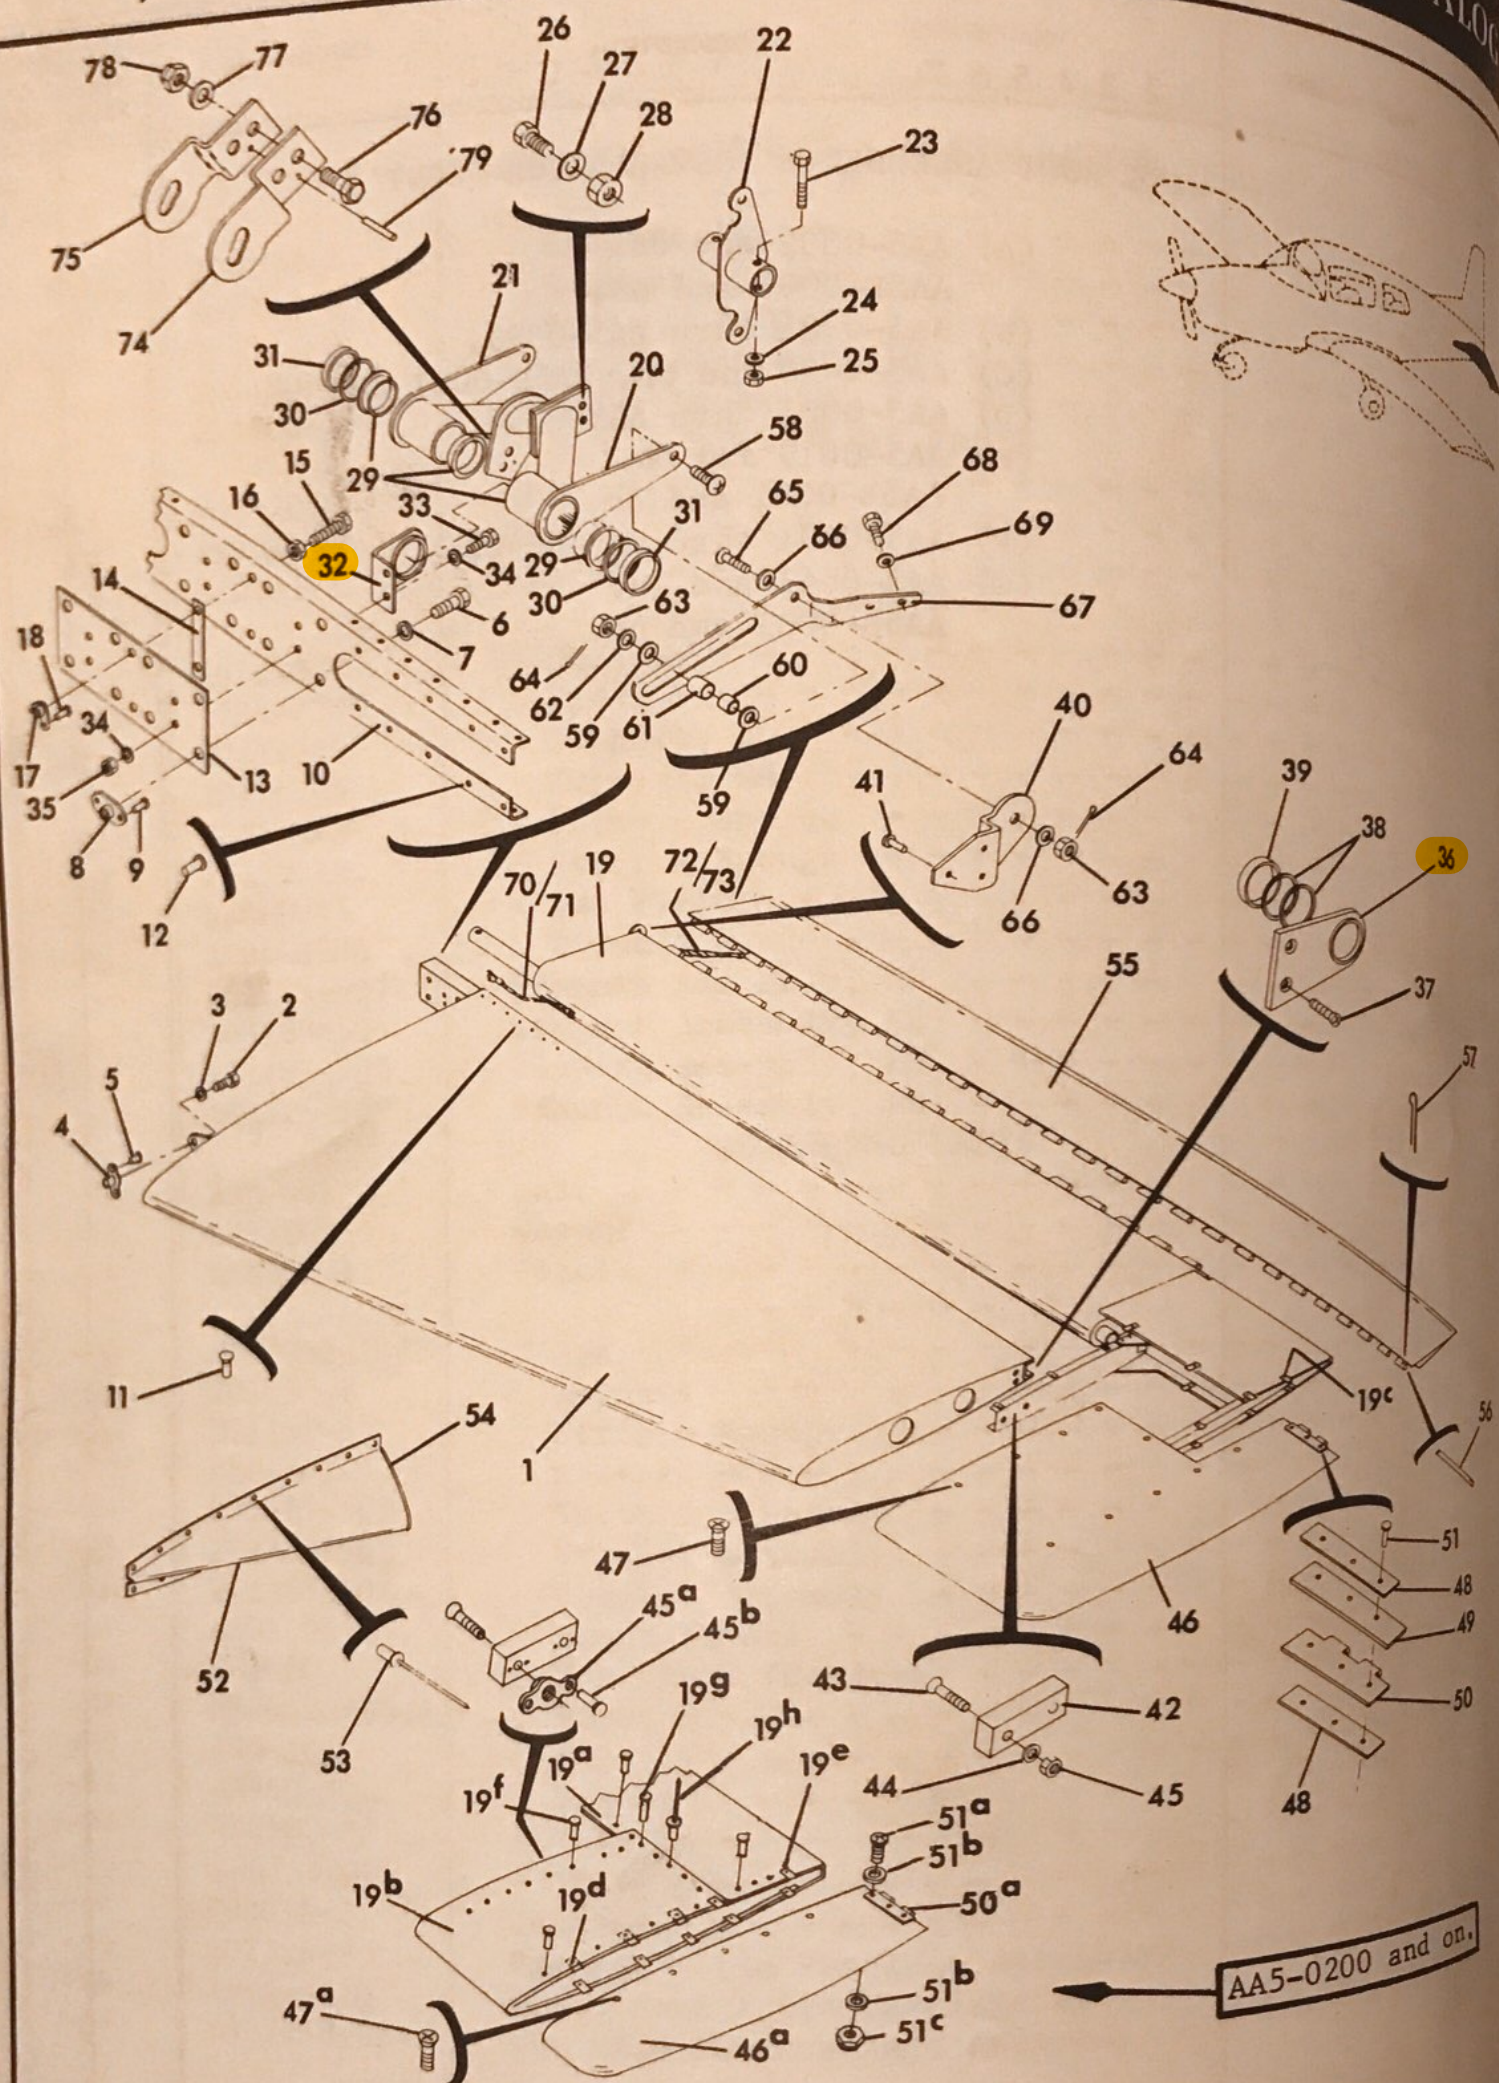


FIGURE 4. HORIZONTAL STABILIZER ASSEMBLY & INSTALLATION
(Model AA-5)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
4		HORIZONTAL STABILIZER ASSEMBLY & INSTALLATION (Model AA-5) (Cont'd)		
-29	902013-4	Bearing - - - - -	2	
-30	902014-2	Spacer - - - - -	A/R	
-31	902012-3	Spacer - - - - -	1	
-32	902010-502	Support Bearing Assembly - - - - -	1	
		ATTACHING PARTS		
-33	AN3-6A	Bolt - - - - -	2	
-34	AN960-1C	Washer - - - - -	4	
-35	MS20365-1032	Nut - - - - -	2	
		- - - * - - -		
-36	301030-501	Support Bearing Assembly - - - - -	1	
		ATTACHING PARTS		
-37	MS24694-S53	Screw - - - - -	2	
		- - - * - - -		
-38	902014-2	Spacer - - - - -	A/R	
-39	902014-3	Spacer - - - - -	A/R	
-40	302043-1	Bracket - - - - -	1	
		ATTACHING PARTS		
-41	1601-0410	Rivet (Avex) - - - - -	3	
		- - - * - - -		
-42	302043-3	Mass Balance - - - - -	1	
		ATTACHING PARTS		
-43	MS24694S66	Screw - - - - -	2	
-44	AN960-10	Washer - - - - -	2	C
-45	MS20365-1032	Nut - - - - -	2	C
-45a	NAS680A3	Nut Plate - - - - -	2	D
-45b	1204-0306	Rivet (Avdel) - - - - -	4	D
		- - - * - - -		
-46	5302032-501	Elevator Tip Assembly, LH - - - - -	1	C
	5302032-502	Elevator Tip Assembly, RH - - - - -	1	C
-46a	5302032-5	Elevator Tip, LH - - - - -	1	D
	5302032-6	Elevator Tip, RH - - - - -	1	D
		ATTACHING PARTS		
-47	AES1021Z6-6	Screw - - - - -	20	C
-47a	AES1021Z6-8	Screw - - - - -	10	D
		- - - * - - -		
-48	5901034-3	Plate - - - - -	2	
-49	5302032-3	Spacer - - - - -	A/R	
-50	5901034-1	Hinge-Half (When Exhausted Use -4 Hinge-Half)	1	E
-50a	5901034-4	Hinge-Half - - - - -	1	F
-51	MS20470A4-9	Rivet - - - - -	3	C
-51a	AN526-832R10	Screw - - - - -	3	D
-51b	AN960-8	Washer - - - - -	6	D
-51c	MS20364-832	Nut - - - - -	3	D
-52	5302036-1	Fillet - - - - -	2	D
		ATTACHING PARTS		

(Continued on Next Page)