

Beechcraft®

Bonanza®

36 *and* A36

(Serials E-1 thru E-926)

Pilot's Operating Handbook *and* FAA Approved Airplane Flight Manual

FAA Approved in Utility Category based on CAR 3. This document must be carried in the airplane at all times and be kept within reach of the pilot during all flight operations.

This handbook includes the material required to be furnished to the pilot by CAR 3.

Airplane Serial Number: _____

Airplane Registration Number: _____

FAA Approved: _____

Beech Aircraft Corporation
DOA CE-2

This handbook supersedes all BEECH published owner's manuals, flight manuals, and check lists issued for this airplane with the exception of FAA Approved Airplane Flight Manual Supplements.

COPYRIGHT © BEECH 1994

P/N 36-590002-19C
Reissued: August, 1982

P/N 36-590002-19C3
Revised: July, 1994

**Section III
Emergency Procedures**

**BEEHCRAFT Bonanza 36, A36
E-1 thru E-926**

ENGINE FAILURE

DURING TAKE-OFF GROUND ROLL

1. Throttle - CLOSED
2. Braking - MAXIMUM
3. Fuel Selector Valve - OFF
4. Battery and Alternator Switches - OFF

AFTER LIFTOFF AND IN FLIGHT

Landing straight ahead is usually advisable. If sufficient altitude is available for maneuvering, accomplish the following:

1. Fuel Selector Valve - SELECT OTHER TANK (Check to feel detent)
2. Auxiliary Fuel Pump - ON
3. Mixture - FULL RICH, then LEAN as required
4. Magnetos - CHECK LEFT and RIGHT, then BOTH
5. Alternate Air T-handle - PULL AND RELEASE

NOTE

The most probable cause of engine failure would be loss of fuel flow, improper functioning of the ignition system or blockage of the induction system.

If No Restart

1. Select most favorable landing site.
2. See EMERGENCY LANDING procedure.
3. The use of landing gear is dependent on the terrain where landing must be made.