

Textron Documentation

NTSB Investigation: ERA22LA215, C414, N46TA

SECTION 6
ELEVATOR AND TRIM CONTROL SYSTEMS

Table Of Contents

	<u>Page</u>	<u>Fiche/ Frame</u>
ELEVATORS	6-2A	3 J18
Removal	6-2A	3 J18
Installation	6-4	3 J22
ELEVATOR TORQUE TUBE	6-4	3 J22
Removal	6-4	3 J22
Installation	6-4	3 J22
ELEVATOR TRIM TAB	6-4A	3 J24
Removal	6-4A	3 J24
Disassembly and Assembly	6-4A	3 J24
Installation	6-4A	3 J24
ELEVATOR CONTROL SYSTEM	6-4A	3 J24
Troubleshooting	6-4A	3 J24
Removal of Elevator Control Cables	6-5	3 K1
Removal of Elevator Control Quadrant	6-5	3 K1
Installation of Elevator Control Quadrant	6-5	3 K1
Installation of Elevator Control Cables	6-5	3 K1
Removal of Elevator Bell Crank	6-5	3 K1
Installation of Elevator Bell Crank	6-5	3 K1
Removal of Elevator Arm	6-5	3 K1
Installation of Elevator Arm	6-5	3 K1
Removal and Installation of Elevator Downspring	6-6	3 K2
Removal and Installation of Aft Elevator Push-Pull Tube	6-6	3 K2
Rigging	6-6	3 K2
ELEVATOR TRIM TAB CONTROL SYSTEM	6-6A	3 K3
Troubleshooting	6-6A	3 K3
Removal of Elevator Trim Control Cables and Chains	6-6B	3 K4
Installation of Elevator Trim Control Cables and Chains	6-6B	3 K4
Removal/Installation Trim Tab Actuator Screw Assembly	6-6B	3 K4
Removal of Elevator Trim Tab Actuator	6-7	3 K5
Disassembly of Trim Tab Actuator	6-10	3 K8
Installation of Elevator Trim Tab Actuator	6-10	3 K8
Removal of Elevator Trim Control Wheel, Sprocket and Indicator	6-10	3 K8
Assembly	6-10	3 K8
Installation of Elevator Trim Control Wheel, Sprocket and Indicator Assembly	6-10	3 K8
Rigging (Airplanes -0001 to A0001)	6-10A	3 K9
Rigging (Airplanes A0001 and On)	6-10A	3 K9
ELECTRIC ELEVATOR TRIM CONTROL	6-10C	3 K11
Removal of Elevator Trim Actuator Assembly	6-14	3 K16
Disassembly and Assembly of Elevator Trim Actuator Assembly (Airplanes -0001 to -0801)	6-14	3 K16
Removal of Elevator Trim Tab Actuator Assembly (Airplanes A0801 and On)	6-14	3 K16
Installation of Elevator Trim Actuator Assembly (Airplanes A0801 and On)	6-14	3 K16
Installation of Elevator Trim Actuator Assembly (Airplanes -0001 to -0801)	6-15	3 K17

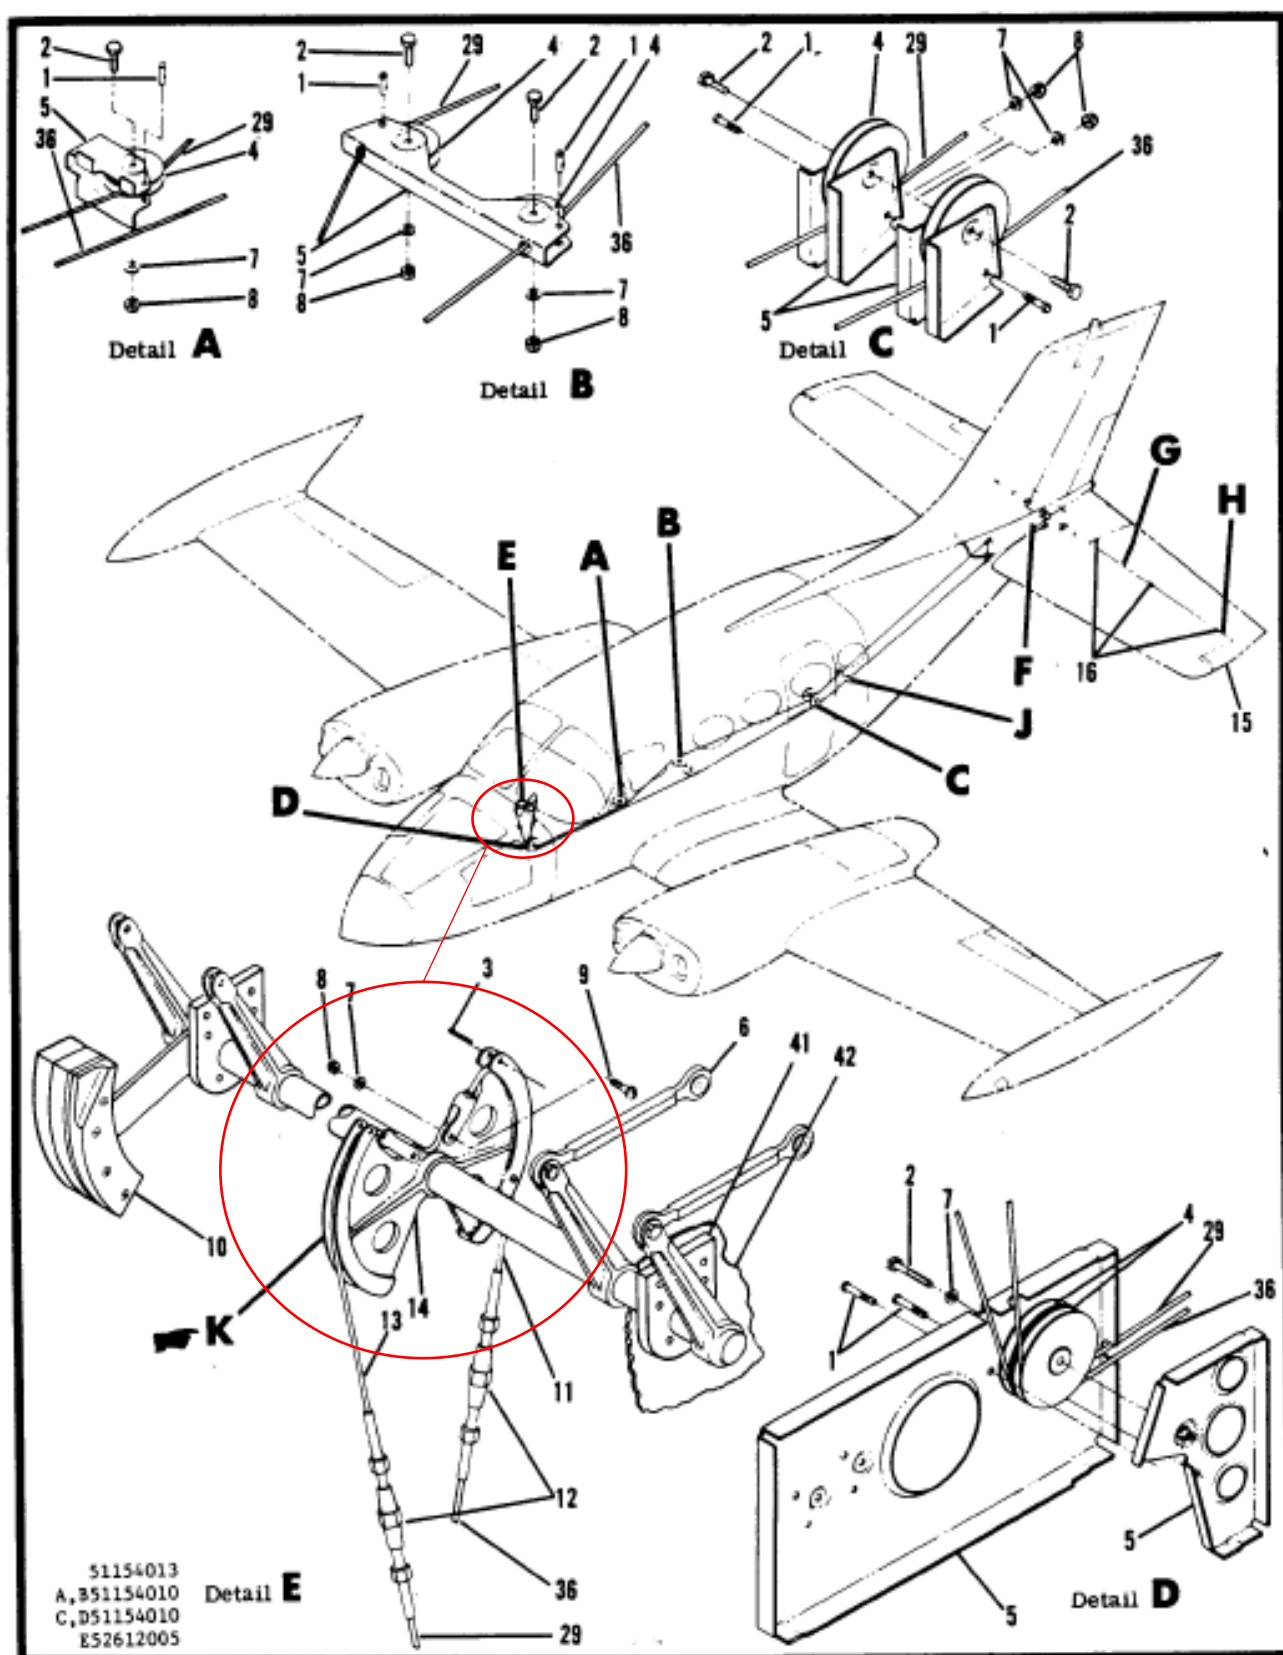



Figure 6-1. Elevator and Elevator Bellcrank (Sheet 1 of 2)

STATIONARY-INSTRUMENT PANEL STRUCTURE INSTALLATION

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY		UNITS PER ASSY
		1	2	3	4	5	6	7	FROM	TO	
-		STATIONARY-INSTRUMENT PANEL STRUCTURE INSTALLATION							0351	& ON	
1	5117145-8	.						BRACE ASSY LH			1
2	5117145-9	.						BRACE ASSY RH			1
		ATTACHING PARTS									
3	MS27039-1-07	.						SCREW LOWER			1
4	MS27039-1-06	.						SCREW UPPER			1
5	5217145-9	.						CLIP ASSY LOWER RH			1
6	5117145-2	.						CLIP ASSY LOWER LH			1
		---*									
7	5117145-5	.						BRACKET ASSY MOUNTING LH	0351	0382	1
-	7A 5117145-13	.						BRACKET ASSY MOUNTING LH	0383	0600	1
-	7B 5117145-17	.						BRACKET ASSY MOUNTING LH	0601	& ON	1
-	7C 5117145-4	.						BRACKET ASSY MOUNTING RH	0351	0382	1
-	7D 5117145-14	.						BRACKET ASSY MOUNTING RH	0383	0600	1
-	7E 5117145-18	.						BRACKET ASSY MOUNTING RH	0601	& ON	1
8	5114145-2	.						PANEL ASSY STATIONARY INSTRUMENT	0351	0450	1
-	8A 5114145-26	.						PANEL ASSY STATIONARY INSTRUMENT	0451	0462	1
-	8B 5114145-31	.						PANEL ASSY STATIONARY INSTRUMENT	0463	0600	1
-	8C 5114145-47	.						PANEL ASSY STATIONARY INSTRUMENT	0601	0800	1
-	8D 5114145-51	.						PANEL ASSY STATIONARY INSTRUMENT	0801	0900	1
-	8E 5114145-54	.						PANEL ASSY STATIONARY INSTRUMENT	0901	A0001	1
-	8F 5114145-56	.						PANEL ASSY STATIONARY INSTRUMENT	A0001	A0200	1
-	8G 5114162-2	.						PANEL ASSY STATIONARY INSTRUMENT	A0201	A0800	1
-	8H 5114162-9	.						PANEL ASSY STATIONARY INSTRUMENT	A0801	& ON	1

Figure 02 : Sheet 1 : STATIONARY-INSTRUMENT PANEL STRUCTURE INSTALLATION

A56544

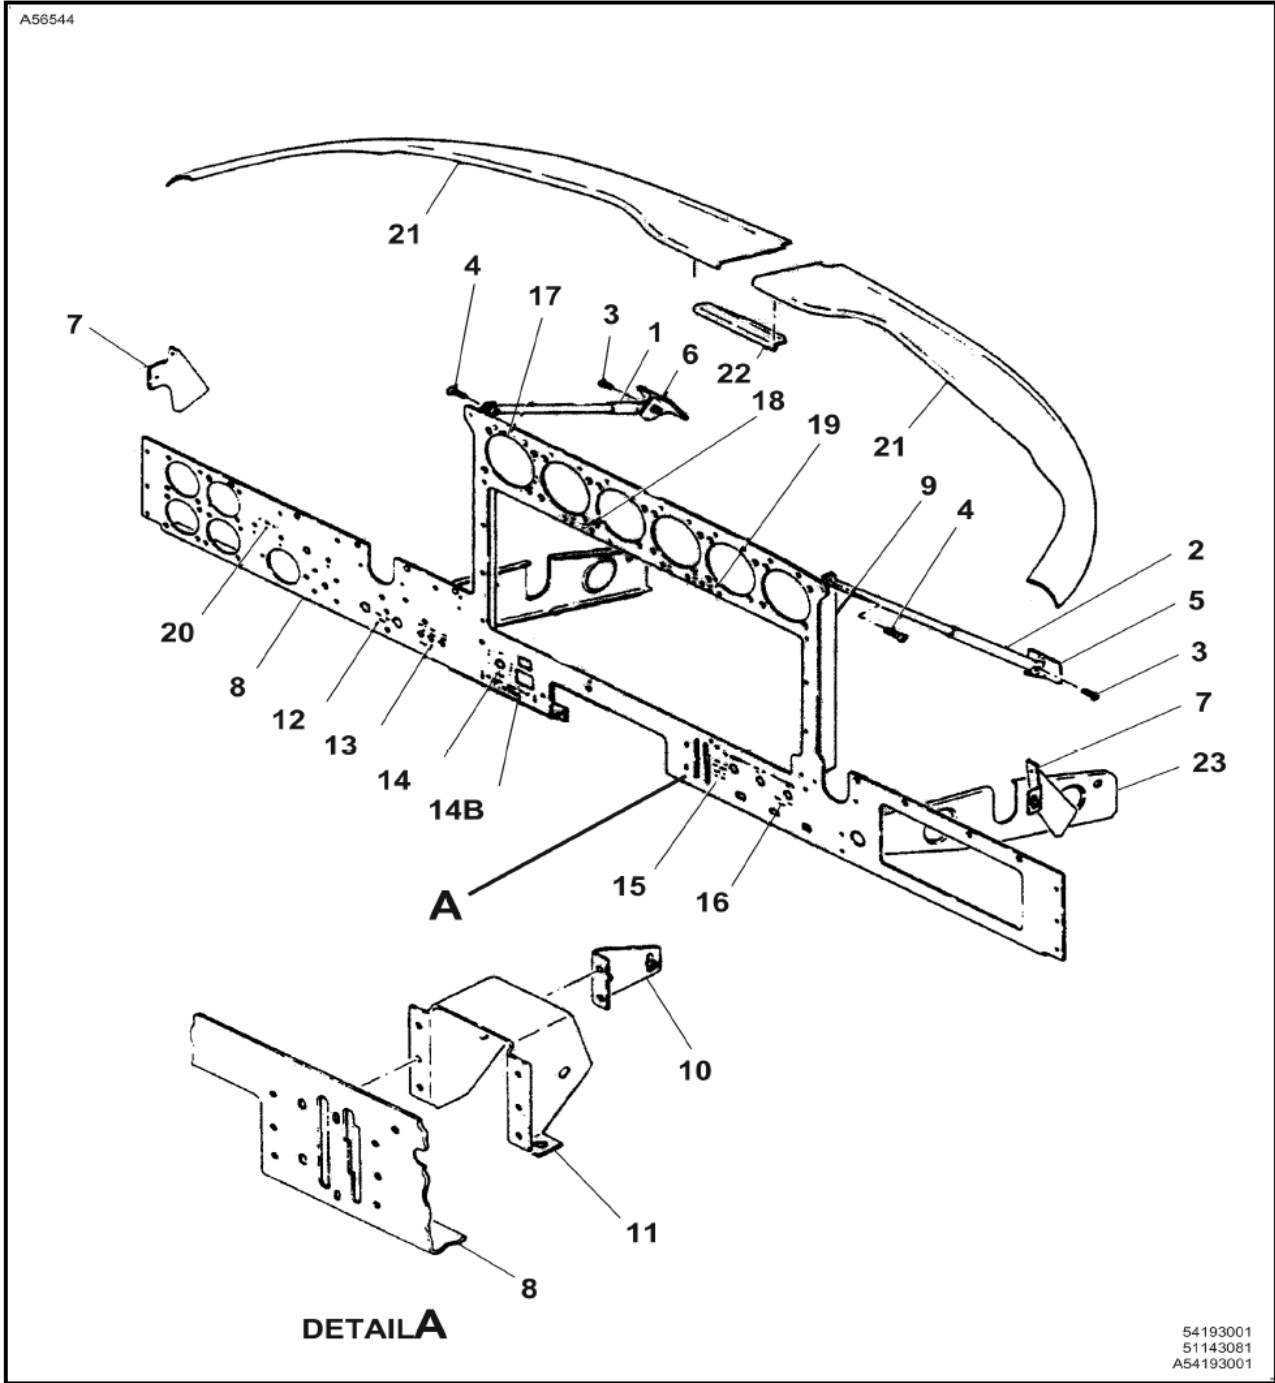

54193001
51143081
A54193001