


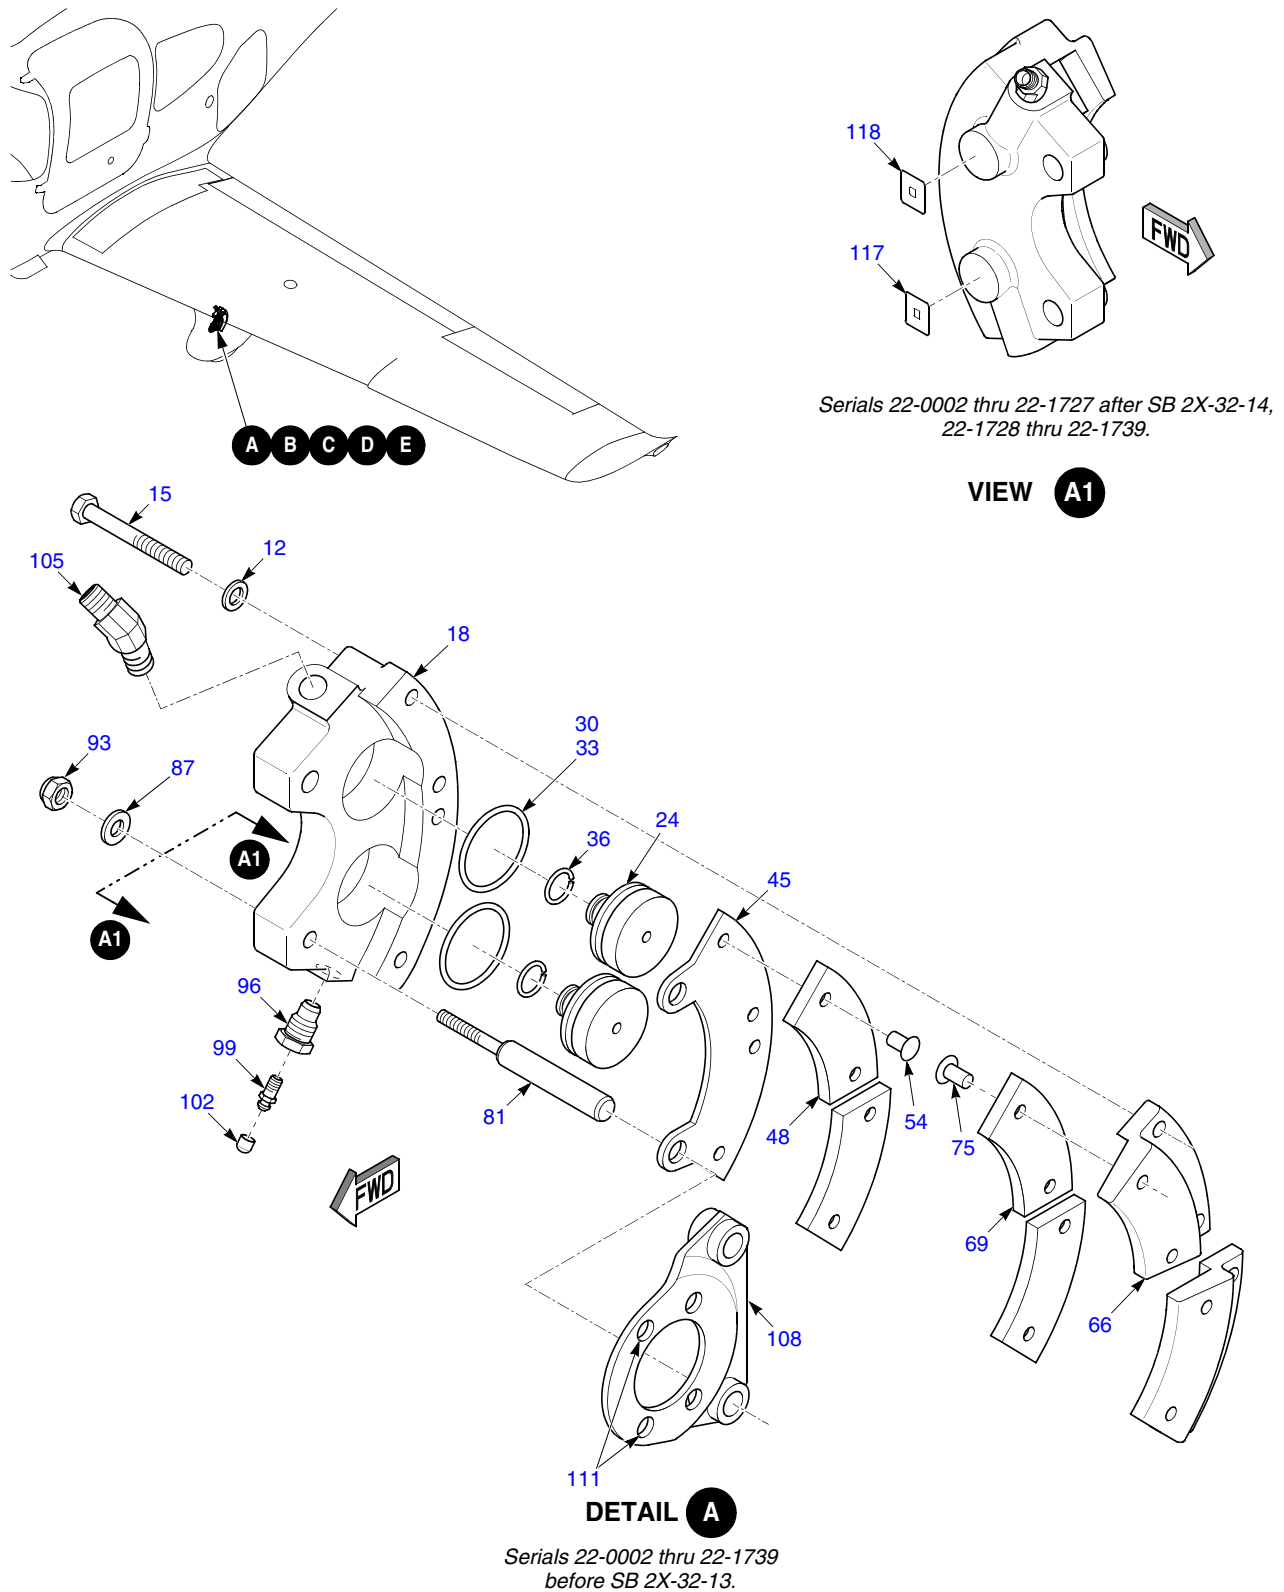


SR22_PC32_1188G

Figure-02

Brake Assembly - Serials 22-0002 - 22-1739 before SB2X-32-13 (1 of 5)

EFFECTIVITY:
Serials 22-0002 - 22-1739 before SB2X-32-13

32-42-02
Page 1
15 Dec 2014

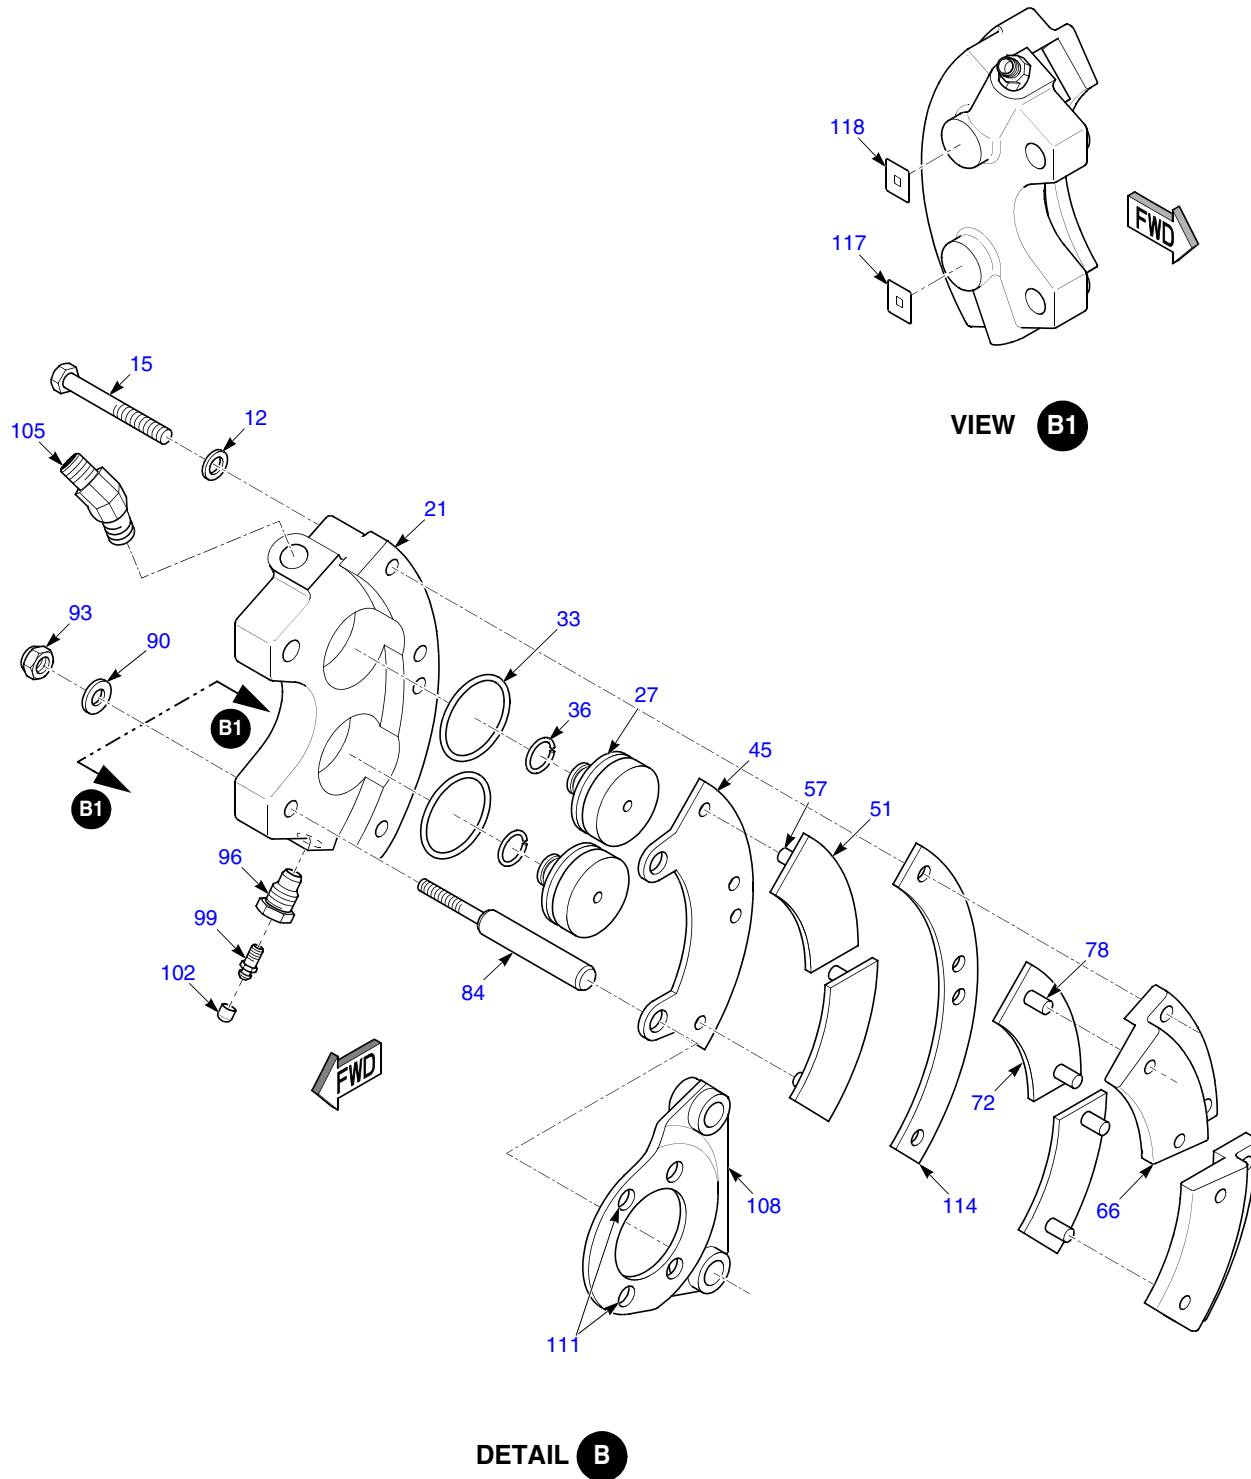

Serials 22-0002 thru 22-1739 after SB2X-32-13,
22-1740 thru 22-4045 before SB2X-32-21,
22T-0001 thru 22T-0689 before SB2X-32-21.

SR22_PC32_1998C


Figure-02

Brake Assembly - Serials 22-0002 - 22-1739 after SB2X-32-13, 22-1740 - 22-4045, 22T-0001 - 22T-0689 (2 of 5)

32-42-02

Page 2
15 Dec 2014

EFFECTIVITY:
All

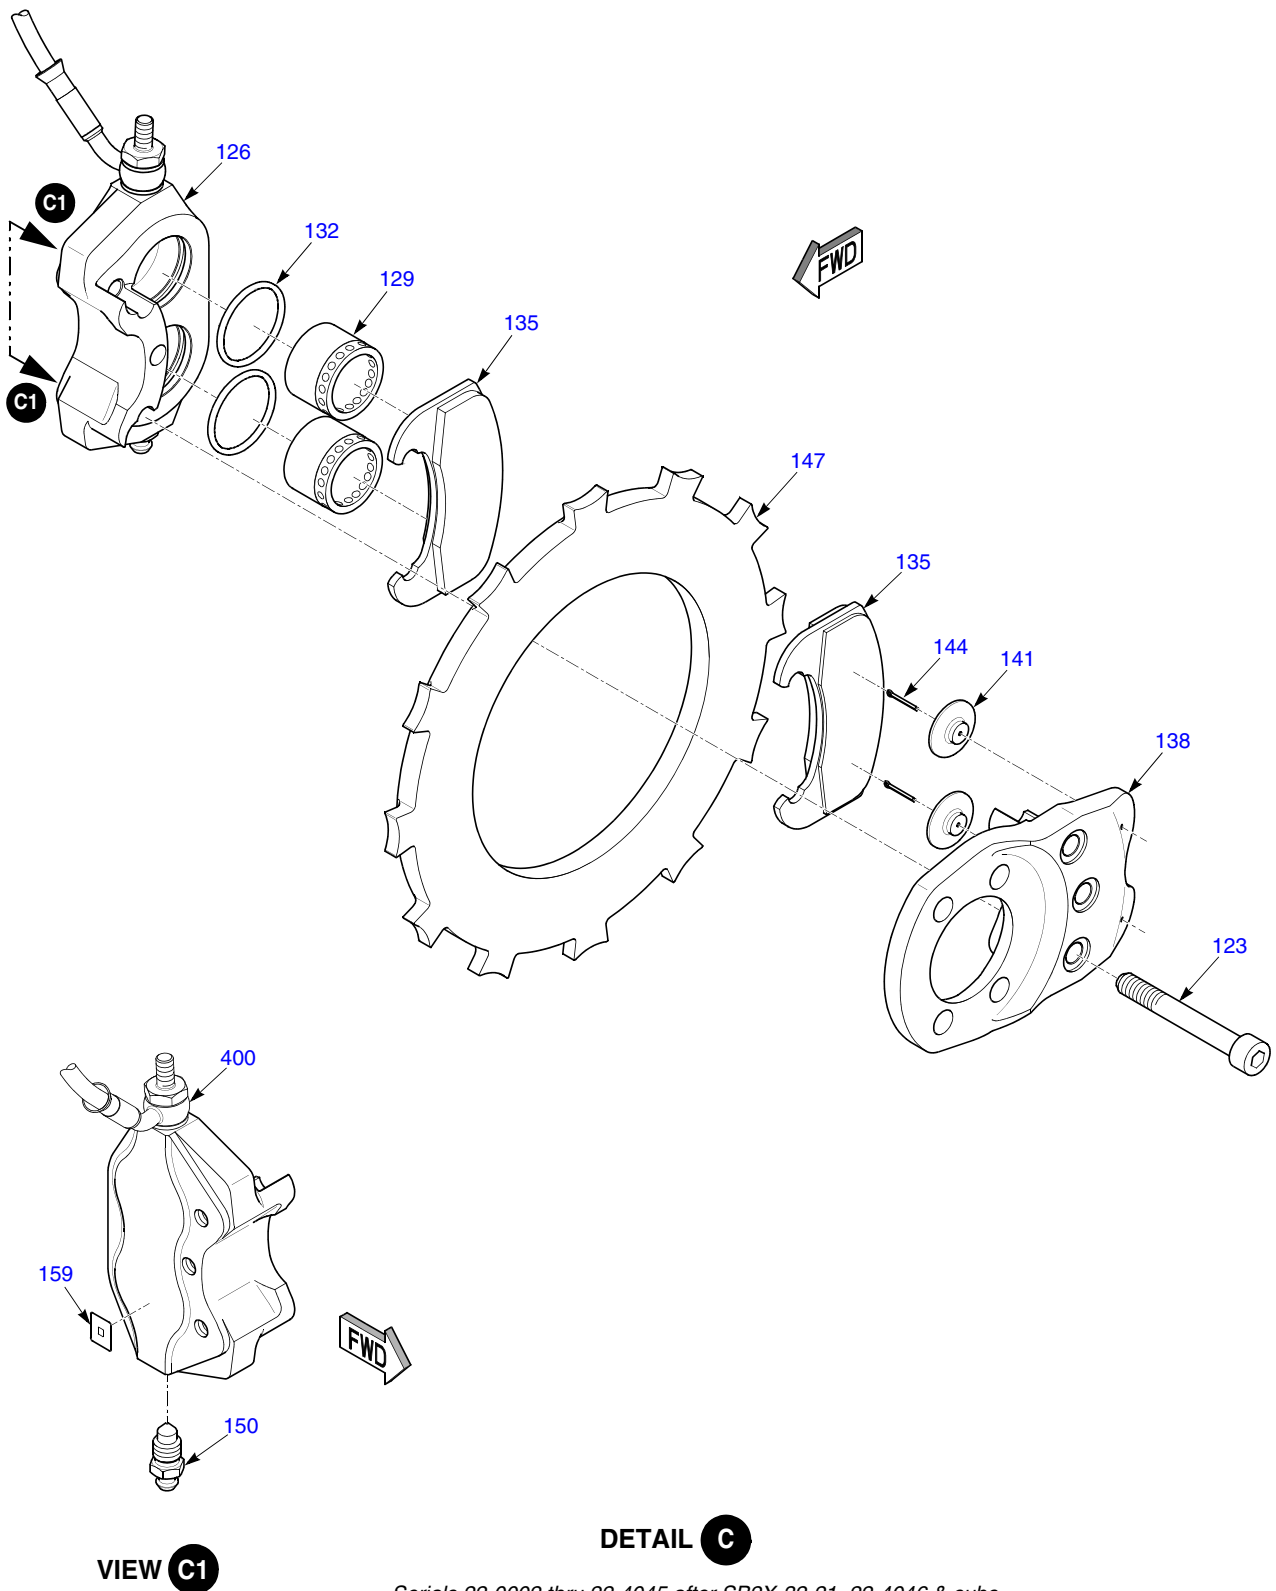

Serials 22-0002 thru 22-4045 after SB2X-32-21, 22-4046 & subs,
22T-0001 thru 22T-0689 after SB2X-32-21, 22T-0690 & subs.

SR22_PC32_2125B

Figure-02

Brake Assembly - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (3 of 5)

EFFECTIVITY:
All

32-42-02
Page 3
15 Dec 2014




D

SR22_PC32_1806D

Brake Assembly - Serials 22-3026 - 22-4045 before SB2X-32-21, 22T-0001 - 22T-0689 before SB2X-32-21 (4 of 5)

Page 4
15 Dec 2014

EFFECTIVITY:
All

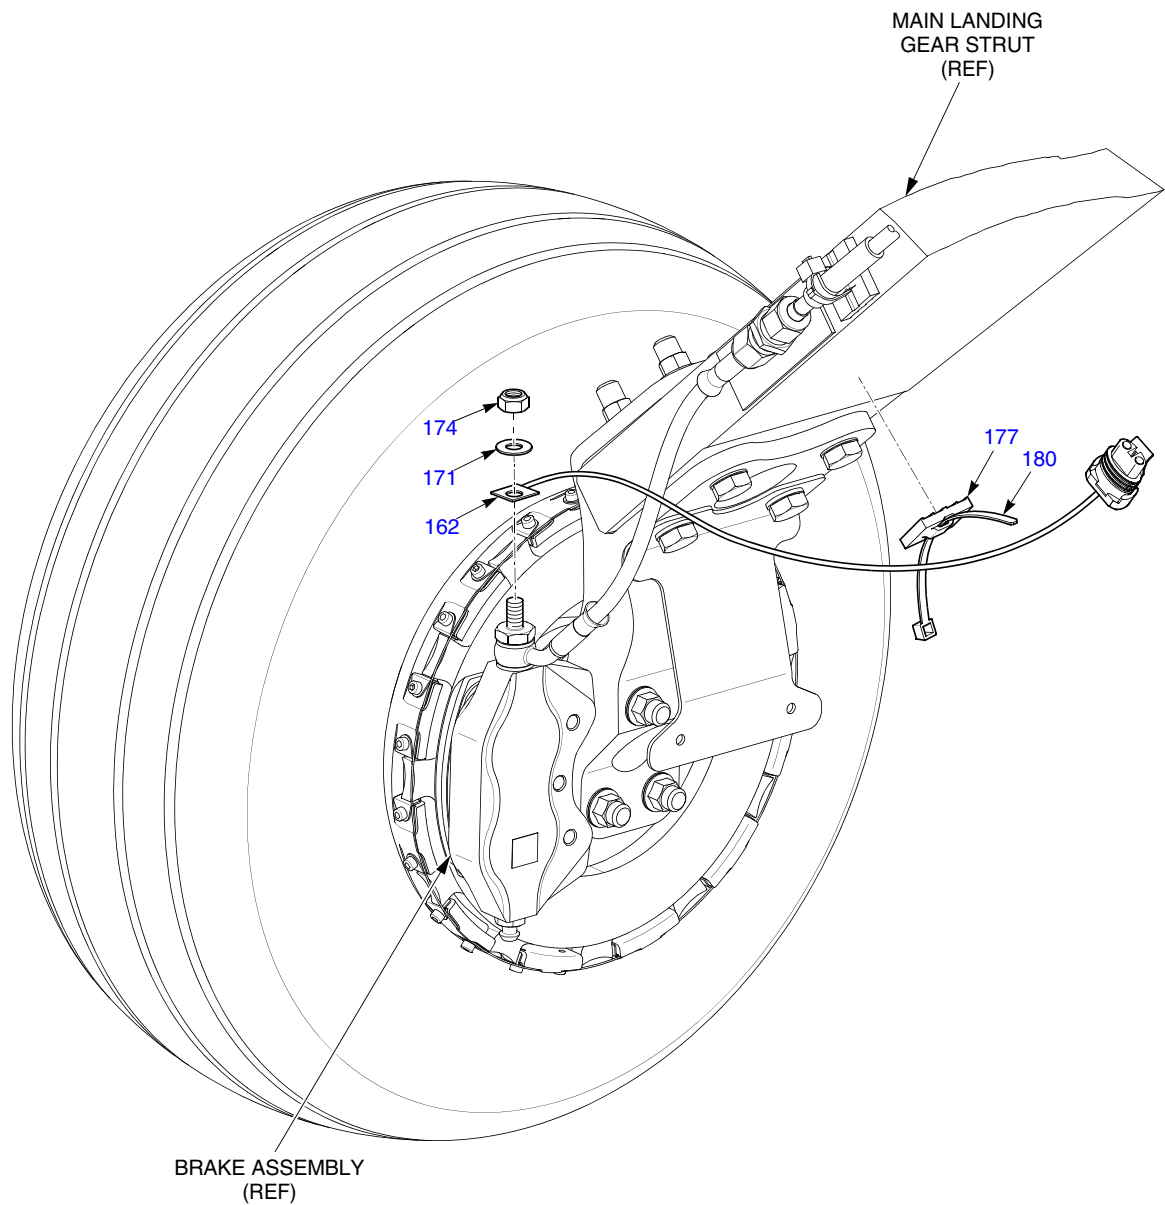

DETAIL E

Serials 22-0002 thru 22-4045 after SB2X-32-21,
22-4046 & subs,
22T-0001 thru 22T-0689 after SB2X-32-21,
22T-0690 & subs.

SR22_PC32_2126B

Figure-02

Brake Assembly - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (5 of 5)

EFFECTIVITY:
All

32-42-02
Page 5
15 Dec 2014

N O P I C	ITEM	PART NUMBER	S Y M B O L	A T T A C H	NOMENCLATURE	EFFECTIVE		U N I T S
						FROM	TO	
					12345678	22 / 22T	22 / 22T	
-	1	FIGURE NO 02	**		BRAKE ASSEMBLY INSTALLATION	0002	1739	AR
-	3	13399-103	**		BRAKE ASSEMBLY	0002	1739	AR
-	4	17122-103			BRAKE ASSEMBLY	1740 / 0001	4045 / 0689	AR
					AFTER SB2X-32-13	0002	1739	
-	6	091-02100			·CYLINDER ASSEMBLY	0002	1739	1
-	9	091-21202			·CYLINDER ASSEMBLY	1740 / 0001	4045 / 0689	1
	12	095-10400	A		·WASHER	0002 / 0001	4045 / 0689	4
	15	103-11800	A		·BOLT	0002 / 0001	4045 / 0689	4
	18	061-01800			··CYLINDER	0002	1739	1
	21	061-01802			··CYLINDER	1740 / 0001	4045 / 0689	1
	24	062-01500			··PISTON	0002	1739	2
	27	062-01800			··PISTON	1740 / 0001	4045 / 0689	2
	30	101-02700			··O-RING	0002	1739	2
					FOR SPARES USE P/N 101-34500			
	33	101-34500			··O-RING	1740 / 0001	4045 / 0689	2
	36	082-02000			··SPRING, FRICTION	1740 / 0001	4045 / 0689	2
-	39	073-01000			··PRESSURE PLATE ASSEMBLY	0002	1739	1
-	42	073-02700			··PRESSURE PLATE ASSEMBLY	1740 / 0001	4045 / 0689	1
	45	063-01100			···PRESSURE PLATE	0002 / 0001	4045 / 0689	1
	48	066-10500			···LINING	0002	1739	2
	51	066-06200			···LINING	1740 / 0001	4045 / 0689	2
	54	105-00200	A		···RIVET	0002	1739	4
	57	PRT OF ITM 51	A		···PIN	1740 / 0001	4045 / 0689	4
-	60	074-01000			··BACK PLATE ASSEMBLY	0002	1739	1
-	63	074-03000			··BACK PLATE ASSEMBLY	1740 / 0001	4045 / 0689	1
	66	064-01500			···BACK PLATE	0002 / 0001	4045 / 0689	2
	69	066-10500			···LINING	0002	1739	2
	72	066-06200			···LINING	1740 / 0001	4045 / 0689	2
	75	105-00200	A		···RIVET	0002	1739	4
	78	PRT OF ITM 72	A		···PIN	1740 / 0001	4045 / 0689	4
	81	069-00400			·ANCHOR BOLT	0002	1739	2
	84	069-01900			·ANCHOR BOLT	1740 / 0001	4045 / 0689	2
	87	095-10200	A		·WASHER	0002	1739	2
	90	095-10400	A		·WASHER	1740 / 0001	4045 / 0689	2
	93	094-10300	A		·NUT	0002 / 0001	4045 / 0689	2
	96	081-00100			·SEAT, BLEEDER	0002 / 0001	4045 / 0689	1
	99	079-00300			·SCREW, BLEEDER	0002 / 0001	4045 / 0689	1
	102	183-00100			·CAP, BLEEDER	0002 / 0001	4045 / 0689	1
	105	104-00500			·FITTING	0002 / 0001	4045 / 0689	1
	108	075-01500			·TORQUE PLATE ASSEMBLY	0002 / 0001	4045 / 0689	1
	111	145-01000			·BUSHING	0002 / 0001	4045 / 0689	2
	114	068-01100			·SHIM	1740 / 0001	4045 / 0689	1
	117	51698-001			·TEMPERATURE INDICATOR	1728	3450	1
					AFTER SB2X-32-14	0002	1727	
	118	51698-003			·TEMPERATURE INDICATOR	3451 / 0001	4045 / 0689	1
					AFTER SB2X-05-01	0002	3450	
-	120	31392-001	~		BRAKE ASSEMBLY	4046 / 0690	/	AR
	123	31392-104	~ A		·SCREW	4046 / 0690	/	3
	126	31392-102	~		·CYLINDER	4046 / 0690	/	1
	129	31392-103	~		·PISTON	4046 / 0690	/	2
	132	31392-107	~		·SEAL	4046 / 0690	/	2
	135	31392-105	~		·BRAKE PAD	4046 / 0690	/	2
	138	31392-101	~		·BACK PLATE	4046 / 0690	/	1

32-42-02

Page 6

15 Dec 2014

EFFECTIVITY:

All

N O P I C	ITEM	PART NUMBER	S Y M B O L	A T T A C H	NOMENCLATURE	EFFECTIVE		U N I T S
						FROM	TO	
					12345678	22 / 22T	22 / 22T	
	141	31392-109	~		·BACK STOP	4046 / 0690	/	2
	144	31392-110	~	A	·COTTER PIN	4046 / 0690	/	2
	147	31392-108	~		·DISC	4046 / 0690	/	1
	150	31392-106	~		·BLEEDER	4046 / 0690	/	1
	159	51698-004	~		·TEMPERATURE INDICATOR	4046 / 0690	/	1
	162	24649-001			·TEMPERATURE SENSOR W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	165	NAS6204-29		A	··BOLT	3026 / 0001	4045 / 0689	1
	168	NAS1149C0432R		A	··WASHER	3026 / 0001	4045 / 0689	2
	171	NAS1149F0432P	~	A	··WASHER	4046 / 0690	/	1
	174	MS21042-4	~	A	··NUT	4046 / 0690	/	1
	177	50132-001			··CABLE TIE ANCHOR	3026 / 0001	/	AR
	180	50239-020			··CABLE TIE	3026 / 0001	/	AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 32-42-01 DET			BRAKE SYSTEM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBERS 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBERS 22-4031, 22-4033 THRU 22-4044; REFER TO 22-4046 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0657; REFER TO 22T-0690 FOR PART IDENTIFICATION.			
			~		SERIAL NUMBER 22-0002 THRU 22-4030, 22-4032, 22- 4045, 22T-0001 THRU 22T-0656, 22T-0658 THRU 22T- 0689 AFTER SB2X-32-21			

EFFECTIVITY:
All

Intentionally Left Blank