

TAKE-OFF

Just before take-off the following items should be checked:

- | | |
|-------------------------------|--------------------------|
| 1. Fuel on proper tank | 7. Flaps set |
| 2. Electric fuel pump ON | 8. Trim tab set |
| 3. Engine gauges checked | 9. Controls free |
| 4. Carburetor heat OFF | 10. Door latched |
| 5. Mixture RICH | 11. Fasten belts/harness |
| 6. Quadrant friction knob set | |

In the conventional take-off procedure set the trim control slightly aft of neutral. Allow the airplane to accelerate to 50 to 60 miles per hour, then ease back on the wheel enough to let the airplane fly itself from the ground. Premature or excessive raising of the nose will result in a delayed take-off. After take-off let the aircraft accelerate to the desired climb speed by lowering the nose slightly.

Short Field, Obstacle Clearance:

Lower the flaps to 25° (second notch), accelerate to 55-60 miles per hour and ease back on the control wheel to rotate. After breaking ground, accelerate to the best angle of climb speed, 74 miles per hour. Slowly retract the flaps when the obstacle has been cleared and continue climb at 85 miles per hour.

Short Field, No Obstacles:

Lower the flaps to 25° (second notch) accelerate to 55-60 miles per hour. Ease back on the control wheel to rotate and accelerate to best rate of climb speed, 85 miles per hour. Slowly retract the flaps while climbing out.

Soft Field, No Obstacle:

Lower the flaps to 25° (second notch), accelerate aircraft and pull nose gear from the ground as soon as possible, lift off at lowest possible airspeed. Accelerate just above the ground to best rate of climb speed, 85 miles per hour. Climb out while slowly retracting the flaps.

SECTION IV

CHEROKEE 140 "D"

1. STARTER - CONTINUE TO CRANK ENGINE
2. THROTTLE - OPEN
3. MIXTURE - IDLE CUT-OFF
4. ELECTRIC FUEL PUMP - OFF
5. FUEL SELECTOR - OFF (if time allows)
6. ABANDON AIRCRAFT IF FIRE CONTINUES

TAKE-OFF

ENGINE POWER LOSS DURING TAKE-OFF

The proper action to be taken if loss of power occurs during take-off will depend on circumstances.

1. If sufficient runway remains for a normal landing, land straight ahead.

2. If insufficient runway remains, maintain a same airspeed and make only a shallow turn to avoid obstructions. Use of flaps depends on circumstances. Normally, flaps should be fully extended for touchdown.

3. If you have gained sufficient altitude to attempt a restart, proceed as follows:

- a. MAINTAIN SAFE AIRSPEED
- b. FUEL SELECTOR - SWITCH TO ANOTHER TANK CONTAINING FUEL
- c. ELECTRIC FUEL PUMP - CHECK ON
- d. MIXTURE - CHECK RICH
- e. CARBURETOR HEAT - ON

NOTE

If engine failure was caused by fuel exhaustion, power will not be regained after tanks are switched until empty fuel lines are filled, which may require up to ten seconds.

If power is not regained, proceed with the POWER OFF LANDING procedure.

SECTION IV

EMERGENCY PROCEDURES

Introduction	24
Ground Operations	24
Take-Off	25
In Flight	26
Power Off Landing	27
Fire	28
Loss of Oil Pressure	28
Loss of Fuel Pressure	29
High Oil Temperature	29
Alternator Failure	29
Engine Roughness	30
Spins	31
Open Door	31

IN FLIGHT

ENGINE POWER LOSS IN-FLIGHT

Complete engine power loss is usually caused by fuel flow interruption, and power will be restored shortly after fuel flow is restored. If power loss occurs at low altitude, the first step is to prepare for an emergency landing (See POWER OFF LANDING). Maintain an airspeed of at least 80 MPH IAS, and if altitude permits, proceed as follows:

1. Fuel Selector - switch to another tank containing fuel.
2. Electric Fuel Pump - On
3. Mixture - Rich
4. Carburetor Heat - On
5. Engine Gauges - check for an indication of the cause of Power Loss.
6. Primer - Check Locked
7. If no fuel pressure is indicated, check tank selector position to be sure it is on a tank containing fuel.

When Power is Restored:

8. Carburetor Heat - Off
9. Electric Fuel Pump - Off

If the above steps do not restore power, prepare for an emergency landing. If time permits:

1. Ignition Switch - "L" then "R" then back to "BOTH".
2. Throttle and Mixture - Different settings. (This may restore power if problem is too rich or too lean a mixture, or partial fuel system restriction).
3. Try another fuel tank - (Water in the fuel could take some time to be used up, and allowing the engine to windmill may restore power. If power loss is due to water, fuel pressure indications will be normal).