

BRP-Rotax
MAINTENANCE MANUAL LINE

Points of Inspection	Interval Operating hours							Chapter Reference	Signature
* no periodic maintenance (requirement after the first 25 hours of operation)	25*	50	100	200	400	600	1000		
Checking the propeller gearbox without overload clutch. ⁽³⁾ only for engine type 912 UL/ULS /ULSFR						X ⁽³⁾		05-50-00 Checking the overload clutch; 12-20-00 Checking the propeller gearbox	
12) Checking the cooling system									
Inspect the expansion tank for damage and abnormalities. Check coolant level, replenish as necessary. Inspect radiator cap. Inspect protection rubber on expansion tank base for correct fit.	X		X					12-20-00 Expansion tank, radiator cap	
Flush the cooling system if large deposits on the expansion tank or radiator cap and/or if the coolant manufacturer required a change interval.	when replacing the coolant							12-20-00 Flushing the cooling system	
13) Engine cleaning									
Engine cleaning.	X		X					12-20-20 Engine cleaning	
14) Checking the air intake system									
Checking the air filter	X		X					12-20-20 Checking air intake system	
Measure heat up of air intake (without activated carburetor heat) with closed cowling.	X			X				12-20-20 Checking air intake system	
15) Liquid level check									
Verify liquid level, replenish as necessary.	X		X					12-10-00 Fluid capacities	