


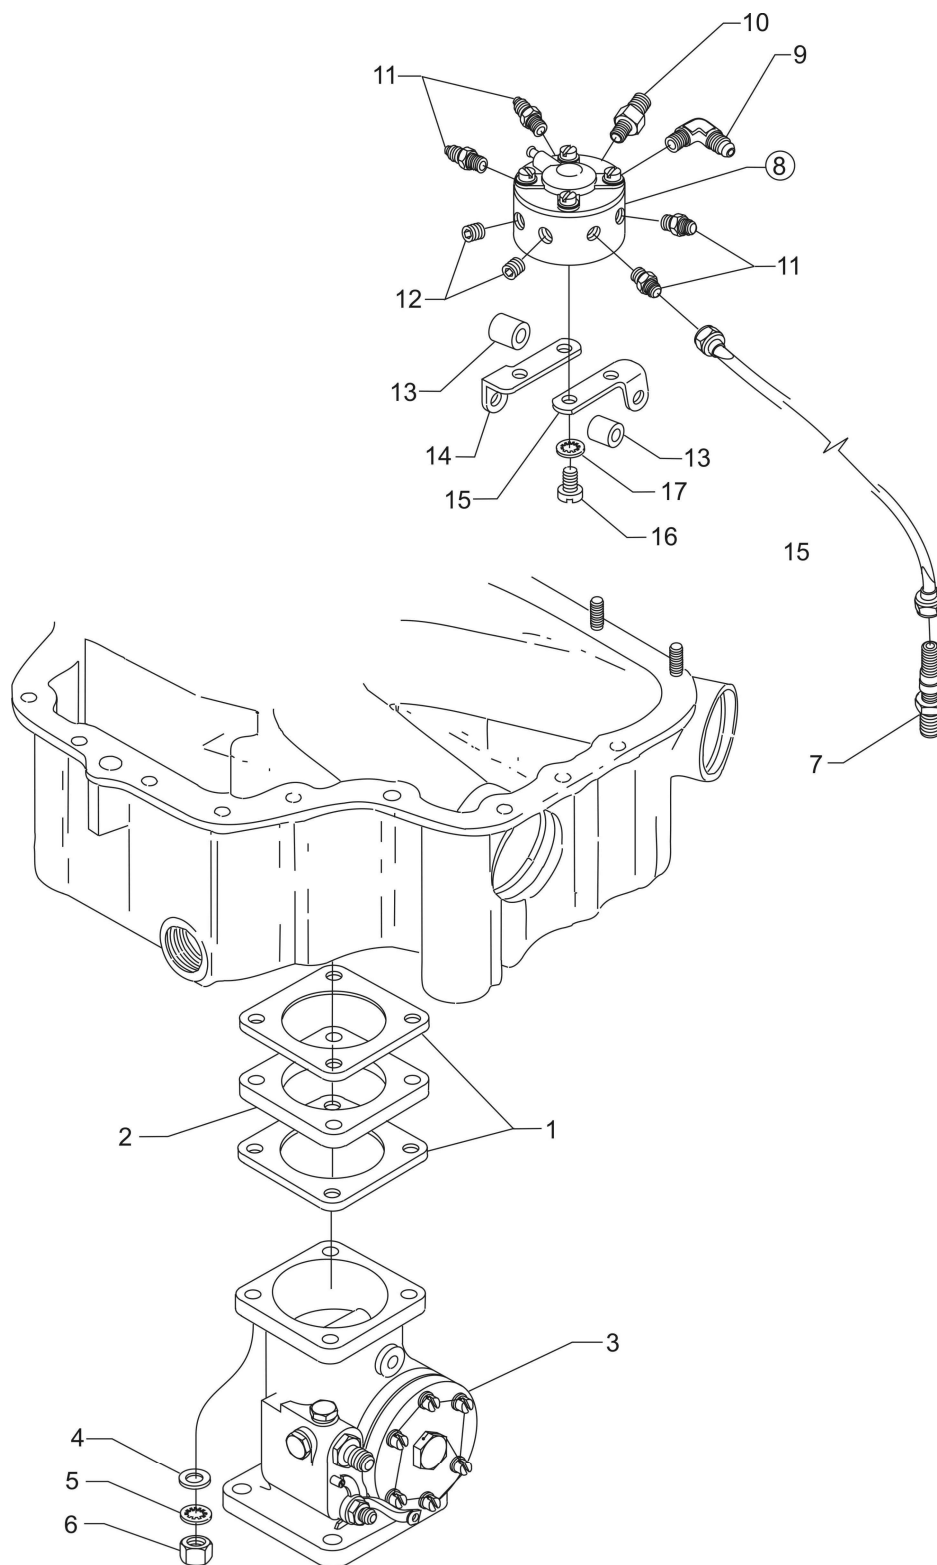

Fuel Injector, Fuel Manifold and Brackets
Figure 21

FUEL DISTRIBUTION**FIGURE 21 – FUEL INJECTOR, FUEL MANIFOLD AND BRACKETS**

Figure Item	Code	Part Number	Description	Units per Assembly
1		66224	GASKET, Fuel injector	2
2		73161	SPACER, Fuel injector	1
3	V	61M23264	FUEL INJECTOR, RSA-5AD1, V AV 2576562-2	1
4		STD-35	WASHER, 5/16 plain	4
5		STD-475	WASHER, 5/16 lock, internal teeth	4
6		STD-1410	NUT, 5/16-18 plain	4
7		63C26450	NOZZLE, Injection	4
8		63B26586	MANIFOLD ASSEMBLY, Fuel	1
9		MS20822-4	ELBOW, 1/4 tube, 1/8 NPT, 90°	1
10		02G21382	NIPPLE, Nozzle pressure gage	1
11		STD-148	NIPPLE, Union, 1/8 NPT	4
12		1102	PLUG, 1/8-27 NPT, allen head	2
13		75966	SPACER, Fuel manifold	2
14		07A22995	BRACKET, Fuel manifold	1
		07A23031	BRACKET, Fuel manifold	1
15		07A22996	BRACKET, Fuel manifold	1
		07A23032	BRACKET, Fuel manifold	1
16		STD-82	SCREW, No. 10-24 x 1/2 long, fill. Head	4
17		STD-251	WASHER, No. 10 lock, internal teeth	4