

ILLUSTRATED PARTS CATALOG

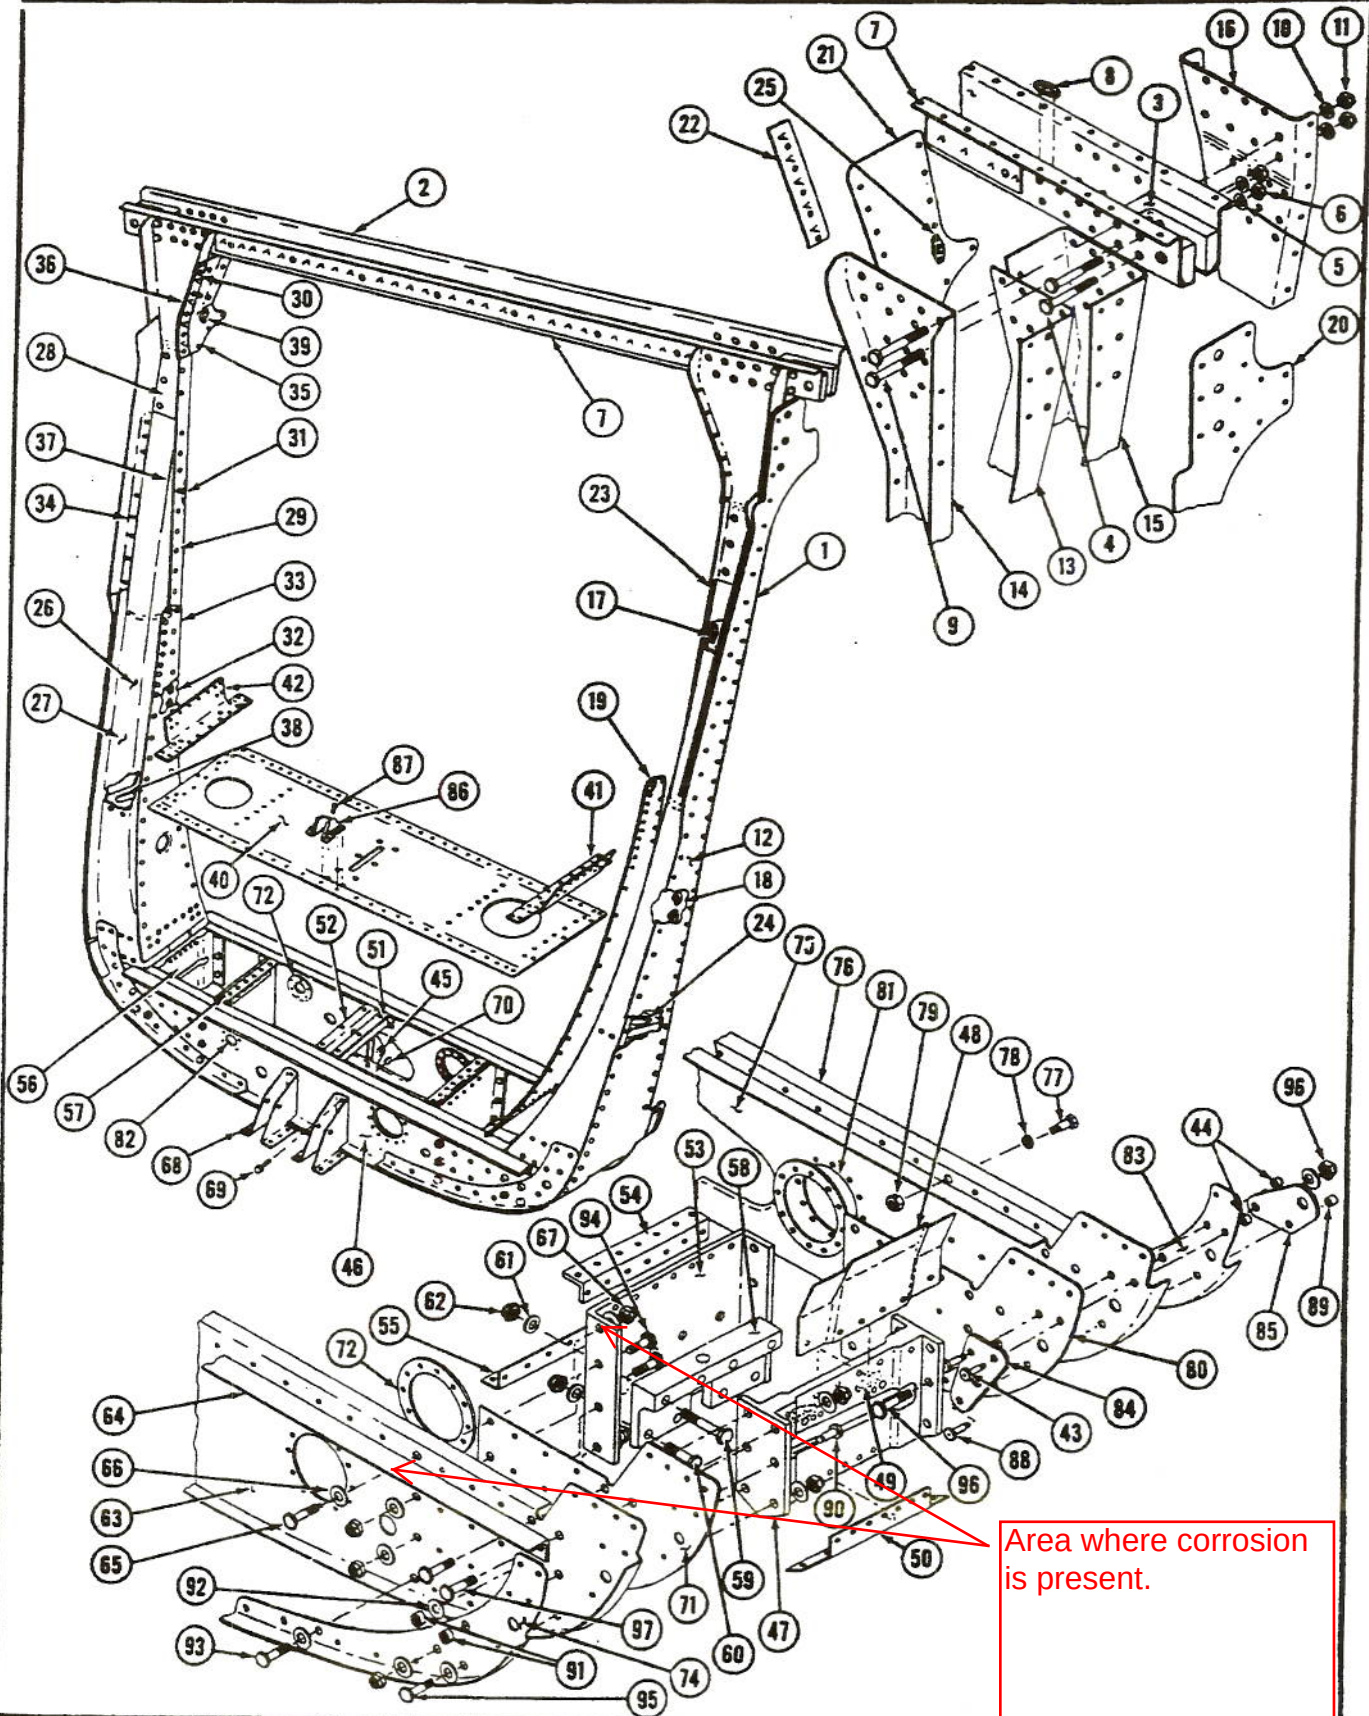


FIGURE 21. LANDING GEAR BULKHEAD ASSEMBLY

ILLUSTRATED PARTS CATALOG

FIGURE AND INDEX NO.	PARTS NUMBER	DESCRIPTION	UNITS PER ASS'Y
21-1	0591300-6	Bulkhead Assembly - Door posts and landing gear support (see figure 19 & 20 for NHA)	Ref
-2	0511182-5	Spar Assembly - Fuselage center section forward	1
-3	0411129	Block - Fuselage spar bearing	2
-4	AN3-20A	Bolt - (Attach block outboard)	4
-5	AN960-10L	Washer - (Attach block outboard)	4
-6	AN365-1032	Nut - (Attach block outboard)	4
-7	0412496	Retainer - Upholstery	1
-8	AN366-1032	Nutplate - (Attach sunvisor)	2
-9	AN3-21A	Bolt - (Attach block inboard)	4
-10	AN960-10L	Washer - (Attach block inboard)	4
-11	AN365-1032	Nut - (Attach block inboard)	4
-12	0591300-1	Door Post Assembly - Fuselage left	1
	0513006-44	Bulkhead Assembly - Left door post forward	1
-13	0513006-3	Bulkhead - Left door post forward	1
-14	0513006-40	Bracket - Left door post upper forward	1
	0513006-110	Bulkhead Assembly - Left door post aft	1
-15	0513006-34	Bulkhead - Left door post aft	1
-16	0513006-38	Bracket - Left door post	1
-17	AN366F1032	Nutplate - (Attach lower end of assist strap)	2
-18	AN366F1032	Nutplate - (Attach door stop)	1
-19	0513006-8	Plate - Left door splice	1
-20	0591300-3	Skin - Left door post outer	1
-21	0513006-42	Reinforcement - Left door post inboard	1
-22	0513006-25	Retainer - Headlining left	1
-23	0513006-16	Retainer - Windshield left	1
-24	0713496-1	Bracket - Stiffener LH	1
-25	AN366F1032	Nutplate - (Attach upper end of assist strap)	1
-26	0591300-2	Door Post Assembly - Fuselage right	1
	0513006-45	Bulkhead Assembly - Right door post forward	1
-27	0513006-21	Bulkhead - Right door post forward	1
-28	0513006-41	Bracket - Right door post upper forward	1
	0513006-111	Bulkhead Assembly - Right door post aft	1
-29	0513006-35	Bulkhead - Right door post aft	1
-30	0513006-39	Bracket - Right door post upper aft	1
-31	AN366F1032	Nutplate - (Attach lower end of assist strap)	2
-32	AN366F1032	Nutplate - (Attach door stop)	1
-33	0513006-22	Plate - Right door post splice	1
-34	0591300-4	Skin - Right door post outer	1
-35	0513006-43	Reinforcement - Right door post upper inboard	1
-36	0513006-26	Retainer - Headlining right	1
-37	0513006-17	Retainer - Windshield right	1
-38	0713496-2	Bracket - Stiffener RH	1
-39	AN366F1032	Nutplate - (Attach upper end of assist strap)	1
-40	0513006-11	Floorboard - Landing gear support	1
-41	0713495-53	Angle - Landing gear bulkhead splice LH	1
-42	0713495-54	Angle - Landing gear bulkhead splice RH	1
-43	NAS178-8-7	Rivet - Hi-Shear	4
-44	NAS179-8	Collar	4
-45	0510183	Bracket - Flap return fuselage lower pulley	1
	AN520-10R7	Screw - (Attach bracket)	1
	AN365-1032	Nut - (Attach bracket)	1
-46	0513006-151	Bulkhead Assembly - Landing gear support	1
	0713495-19	Bracket Assembly - Landing gear support left outboard	1
-47	0713495-3	Bracket - Landing gear support left outboard	1
-48	0713495-57	Angle - Landing gear support outboard left	2
-49	22A17-048	Nutplate - Essna	1
-50	0713495-5	Angle - Landing gear support lower outboard	1
-51	0510112	Bracket - Elevator bellcrank left	1
-52	0510112-1	Bracket - Elevator bellcrank right	1
	0713495-51	Bracket Assembly - Landing gear support left inboard	1
-53	0713495-7	Bracket - Landing gear support left inboard	1
-54	0713495-26	Angle - Landing gear support upper inboard	1
-55	0713495-18	Angle - Landing gear support lower inboard	1
-56	0713495-20	Bracket Assembly - Landing gear support right outboard	1
	0713495-4	Bracket - Landing gear support	1
	0713495-58	Angle - Landing gear support upper right outboard	2
	22A17-048	Nutplate - Essna	1
	0713495-5	Angle - Landing gear support lower outboard	1
-57	0713495-52	Bracket Assembly - Landing gear support right inboard	1
	0713495-8	Bracket - Landing gear support	1
	0713495-25	Angle - Landing gear support upper inboard	1

ORDER BY PART NUMBER AND NAME SERIAL NUMBER AND COLOR IF APPLICABLE

ILLUSTRATED PARTS CATALOG

FIGURE AND INDEX NO.	PARTS NUMBER	DESCRIPTION	UNITS PER ASS'Y
21-	0713495-18	Angle - Landing gear support lower inboard	1
-58	0713495-6	Angle - Landing gear attachment	2
-59	AN5-15A	Bolt - (Attach angles)	8
-60	AN5-7A	Bolt - (Attach angles)	12
-61	AN960-516	Washer - (Attach angles)	20
-62	AN365-524	Nut - (Attach angles)	20
	0513006-104	Bulkhead Assembly - Landing gear support forward	1
-63	0513006-9	Bulkhead - Landing gear support forward	1
-64	0513006-23	Angle - Forward bulkhead reinforcement	1
-65	AN3-5A	Bolt - (Attach angle)	4
-66	AN960-10	Washer - (Attach angle)	4
-67	AN365-1032	Nut - (Attach angle)	4
-68	0510110	Bracket - Control pulley	2
-69	AN3-4A	Bolt - (Attach pulley bracket)	2
-70	AN365-1032	Nut - (Attach pulley bracket)	2
-71	0713495-15	Plate - Forward bulkhead left reinforcement	1
	0713495-16	Plate - Forward bulkhead right reinforcement	1
-72	0513006-61	Doubler	1
-73	0513006-62	Doubler	1
-74	0713495-11	Stiffener - Bulkhead forward left	1
	0713495-12	Stiffener - Bulkhead forward right	1
	0513006-105	Bulkhead Assembly - Landing gear support aft	1
-75	0513006-103	Bulkhead - Landing gear support aft	1
-76	0513006-24	Angle - Aft bulkhead reinforcement	1
-77	AN3-5A	Bolt - (Attach angle)	2
-78	AN960-10	Washer - (Attach angle)	2
-79	AN365-1032	Nut - (Attach angle)	2
-80	0713495-13	Plate - Aft bulkhead reinforcement left	1
	0713495-14	Plate - Aft bulkhead reinforcement right	1
-81	0513006-61	Doubler	1
-82	0513006-62	Doubler	1
-83	0713495-9	Stiffener - Bulkhead aft left	1
	0713495-10	Stiffener - Bulkhead aft right	1
-84	0713495-55	Spacer - Wing strut fitting forward	4
-85	0713495-17	Plate - Wing strut fitting	2
-86	0713497-1	Bracket Assembly - Forward elevator stop	1
-87	0431141-1	Bolt	1
-88	NAS178-8-7	Rivet - (Hi-Shear)	2
-89	NAS179-8	Collar	2
-90	NAS178-10-6	Rivet - (Hi Shear)	4
-91	NAS179-10	Collar	4
-92	AN960-516L	Washer	2
-93	AN5-6A	Bolt	4
	AN960-516L	Washer	4
	AN365-524	Nut	4
-94	AN6-6A	Bolt	10
	AN960-816L	Washer	10
	AN365-624	Nut	10
-95	AN5-7A	Bolt	20
	AN960-516	Washer	20
	AN365-524	Nut	20
-96	AN6-10A	Bolt	2
	AN960-616	Washer	2
	AN365-624	Nut	2
-97	AN6-7A	Bolt	8
	AN960-616	Washer	8
	AN365-624	Nut	8