

Revised Jul 1/05	761001	Engine Controls and Linkage - Examine the general condition and freedom of movement through the full range. Complete a check for the proper travel, security of attachment, and for evidence of wear. Complete a check of the friction lock and vernier adjustment for proper operation. Complete a check to make sure the throttle, fuel mixture, and propeller governor arms operate through their full arc of travel. The maximum linear freeplay is 0.050 inch.	A	05-12-01	120, 225
Revised Aug 1/00	781001	Exhaust System - Inspect for cracks and security. Special check in area of heat exchanger. Refer to Chapter 78, Exhaust system - Maintenance Practices.	A	05-12-01	120
Revised Feb 15/02	791001	Engine Oil - Drain oil sump and oil cooler. Check for metal particles or foreign material in filter, on sump drain plug, and on engine suction screen. Replace filter, and refill with recommended grade aviation oil.	L	05-12-13	120
	792001	Oil Cooler - Check for obstructions, leaks, and security of attachment.	A	05-12-01	120
Revised May 3/99	801001	Starter and Electrical Connections - Check security and condition of starter, electrical connection, and cable.	B	05-12-02	120
Revised Feb 15/02	801002	Bendix Drive Starter Assembly - Clean and lubricate starter drive assembly.	A	05-12-01	120