

MAIN GEAR RETRACTION LINKAGE INSTALLATION - FIGURE 01

ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECTIVITY FROM TO	UNITS PER ASSY
		MAIN GEAR RETRACTION LINKAGE INSTALLATION		
1	0843415-1	· TUBE ASSY-RH INTERMEDIATE PUSH-PULL FSO 0843415-3		NP
- 1A	0843415-3	· TUBE ASSY-RH INTERMEDIATE PUSH-PULL		1
2	NAS464P5A28	· BOLT		1
3	S1450-5H12-032	· WASHER		2
4	NAS72-5-005	· SPACER		2
5	MS21042L5	· NUT		1
6	MR5	· · BEARING-ROD END FSO SM5-8C		NP
- 6A	SM5-8C	· · BEARING-ROD END		2
- 7	AN316-8R	· · NUT-CHECK		2
8	5045003-4	· BELLCRANK ASSY-IDLER		1
9	NAS6604-40	· BOLT		1
10	0843400-129	· SPACER		1
11	NAS1149F0432P	· WASHER		1
12	NAS43DD4-32FC	· SPACER		1
13	AN970-4	· WASHER		1
14	MS21042L4	· NUT		1
15	S1004-14A	· · BEARING		2
16	S1004-51A	· · BEARING		2
17	0843406-1	· TUBE ASSY-RH INBD PUSH-PULL FSO 0843406-3		NP
- 17A	0843406-3	· TUBE ASSY-RH INBD PUSH-PULL		1
18	NAS464P5A13	· BOLT		1
- 19	NAS1149F0563P	· WASHER		1
- 20	MS21042L5	· NUT		1
21		· ACTUATOR ARM-GEAR BOX-REFER TO 32-30-00 FIGURE 04		RF
22	0843414-3	· TUBE ASSY-LH INBD PUSH-PULL FSO 0843414-5		NP
- 22A	0843414-5	· TUBE ASSY-LH INBD PUSH-PULL		1
23	NAS464P5A15	· BOLT		2
24	NAS43HT5-8	· SPACER-LH ONLY		2
- 25	NAS1149F0563P	· WASHER		2
- 26	MS21042L5	· NUT		2
27	S2049-5FG	· · ROD END V73134		1

- item not illustrated

ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECTIVITY FROM TO	UNITS PER ASSY
- 28	AN316-6R	· · NUT-CHECK		1 R
29		· BELLCRANK-REFER TO 32-30-00 FIGURE 02		RF
30	5045213-3	· TUBE ASSY-OUTBD PUSH-PULL		2
31	NAS464P5A14	· BOLT		1
- 32	NAS1149F0563P	· WASHER		1
- 33	MS21044N5	· NUT		1
34	NAS464P5A15	· BOLT		1
- 35	NAS1149F0532P	· WASHER		1
- 36	MS21044N5	· NUT		1
37	MS21223-5GH	· · ROD END		2
- 38	AN316-7R	· · NUT-CHECK		2
39	5045010-25	· TORQUE TUBE ASSY-LH FSO 5045010-33		NP R
- 39A	5045010-33	· TORQUE TUBE ASSY-LH REFER TO NOTE 1		1 R
- 40	5045010-24	· TORQUE TUBE ASSY-RH FSO 5045010-32		NP R
- 40A	5045010-32	· TORQUE TUBE ASSY-RH REFER TO NOTE 1		1 R
41	NAS146-40	· BOLT		1
42	MS20002-6C	· WASHER		1
- 43	NAS1149F0632P	· WASHER		1
- 44	NAS1149F0663P	· WASHER		AR
45	MS21044N6	· NUT		1
46	NAS464P5LA10	· BOLT		1
- 47	NAS1149F0563P	· WASHER		2 R
48	MS21044N5	· NUT		1
NOTE 1: AIRPLANES R0001 THRU R2140 INCORPORATING MEB09-2.				
49	NAS77A5-007	· · BUSHING		2
50	5141052-1	· · FORK BOLT		1
51	AN316-10R	· · NUT-CHECK		1
52	0840125-15	· TUBE ASSY-AFT PUSH-PULL		2
53	AN25-16	· BOLT-CLEVIS		1
54	NAS464P5-14	· BOLT		1
- 55	NAS1149F0563P	· WASHER		2
- 56	AN320-5	· NUT		2
- 57	MS24665-134	· COTTER PIN		2
58	REM5S2	· · ROD END-INBD	V99528	1
- 59	AN316-7R	· · NUT-CHECK		1
60	COM-5-9	· BEARING-OUTBD	V73134	1
61	5041001-5	· BELLCRANK ASSY-LH FSO 5041001-9	R0001 R1205	NP

- item not illustrated


ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECTIVITY		UNITS PER ASSY
			FROM	TO	
- 61A	5041001-9	· BELLCRANK ASSY-LH FSO 5041001-11	R1206	R1208	NP
- 61B	5041001-11	· BELLCRANK ASSY-LH	R1209	R2140	1
- 62	5041001-6	· BELLCRANK ASSY-RH FSO 5041001-10	R0001	R1205	NP
- 62A	5041001-10	· BELLCRANK ASSY-RH FSO 5041001-12	R1206	R1208	NP
- 62B	5041001-12	· BELLCRANK ASSY-RH	R1209	R2140	1
63	NAS464P4-26	· BOLT			1
64	S133-4P1.000	· SPACER			1
- 65	NAS1149F0463P	· WASHER			1
- 66	AN320-4	· NUT			1
- 67	MS24665-132	· COTTER PIN			1
68	NAS77-6-040	· · BUSHING			2
69	S1004-11B	· · BEARING	R0001	R1208	2
- 69A	CM3763-1	· · BEARING	R1209	R2140	2
70	0841110-2	· LOCK ASSY-LWR SIDE BRACE FSO 0841110-3	R0001	R0823	NP
- 70A	0841110-3	· LOCK ASSY-LWR SIDE BRACE	R0824	R2140	2
71	5041018-1	· PIN-DOWNLOCK			1
72	MS35265-46	· SCREW-DOWNLOCK PIN RETAINER			1
73	0841235-3	· · BRACKET-SWITCH SUPPORT			1
74	0841113-2	· · ADJUSTING SCREW			2
75	0841111-1	· · END FITTING ASSY	R0001	R0823	2
- 75A	0841111-3	· · END FITTING ASSY	R0824	R2140	2
76	AN25-28A	· · BOLT			1
77	0841004-5	· · WASHER			1
- 78	AN122583	· · WASHER			2
79	NAS1149D0516K	· · WASHER			AR
80	NAS1149F0532P	· · WASHER			AR
- 81	MS21042L5	· · NUT			1
82	KWB5G	· · · BEARING	V97613		2
- 83	WC5-2	· · · BEARING-ALT FOR KWB5G	V56644		2
- 84		· · · DELETED-NOT USED			
85	5141001-33	· BRACE ASSY-LH REFER TO NOTE 1			1
- 86	5141001-34	· BRACE ASSY-RH REFER TO NOTE 1			1
87	5041011-1	· BOLT			1
- 88	NAS1149F0732P	· WASHER			2
89	5041004-1	· SPACER-UPLOCK			2
90	5041003-2	· SPACER			1
91	AN363-720	· NUT			1
92	NAS464P7-29	· BOLT			1

- item not illustrated

ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECTIVITY FROM TO	UNITS PER ASSY
93	0841202-1	· SPACER		1
- 94	NAS1149F1063P	· WASHER-USED AS SHIM		AR
- 95	NAS1149F1032P	· WASHER-USED AS SHIM		AR
- 96	NAS1149F0732P	· WASHER		1
97	AN320-7	· NUT		1
- 98	MS24665-285	· COTTER PIN		1
NOTE 1: BOTH THE LH & RH BRACE ASSEMBLIES MUST BE ORDERED AS A MATCHED SET				
99	1646B1	· · FITTING-LUBE	V84971	1
100	S132-10P17	· · BUSHING		1
101	NAS76A6-108	· · BUSHING		1
102	1736	· · FITTING-LUBE	V57733	1
103	NAS77-10-045	· · BUSHING		2
104	5041103-4	· · BUSHING		1
105	5041003-3	· · BUSHING	V57733	1
106	3019	· · FITTING-LUBE		1
107	NAS464P7-28	· · BOLT		1
108	5041003-1	· · SPACER		1
- 109	NAS1149F0732P	· · WASHER		1
- 110	AN320-7	· · NUT		1
- 111	MS24665-285	· · COTTER PIN		1
112	0841142-1	· UPLOCK ASSY-PUSH-PULL		2
113	AN24-15	· BOLT-CLEVIS		1
114	AN24-13	· BOLT-CLEVIS		1
- 115	NAS1149F0432P	· WASHER		2 R
116	AN320-4	· NUT		2
- 117	MS24665-132	· COTTER PIN		2 R
118	HM4	· · ROD END	V73134	2
- 119	AN316-4R	· · NUT-CHECK		2
120	5041023-7	· HOOK ASSY-UPLOCK LH FWD		1
121	5041023-8	· HOOK ASSY-UPLOCK LH AFT		1
- 122	5041023-5	· HOOK ASSY-UPLOCK RH FWD		1
- 123	5041023-6	· HOOK ASSY-UPLOCK RH AFT		1
- 124	NAS1149F0432P	· WASHER		2
125	MS21044N4	· NUT		2
126	5041022-19	· BELLCRANK ASSY-LH FWD		1
127	5041022-20	· BELLCRANK ASSY-LH AFT		1
- 128	5041022-15	· BELLCRANK ASSY-RH FWD		1
- 129	5041022-16	· BELLCRANK ASSY-RH AFT		1
130	NK507-428R10	· SCREW	V02615	2
131	5041005-1	· SPRING-DOWNLOCK		2
132		· DOOR RETRACTION LINKAGE-REFER TO 32-30-00 FIGURE 02		RF

- item not illustrated


A56224

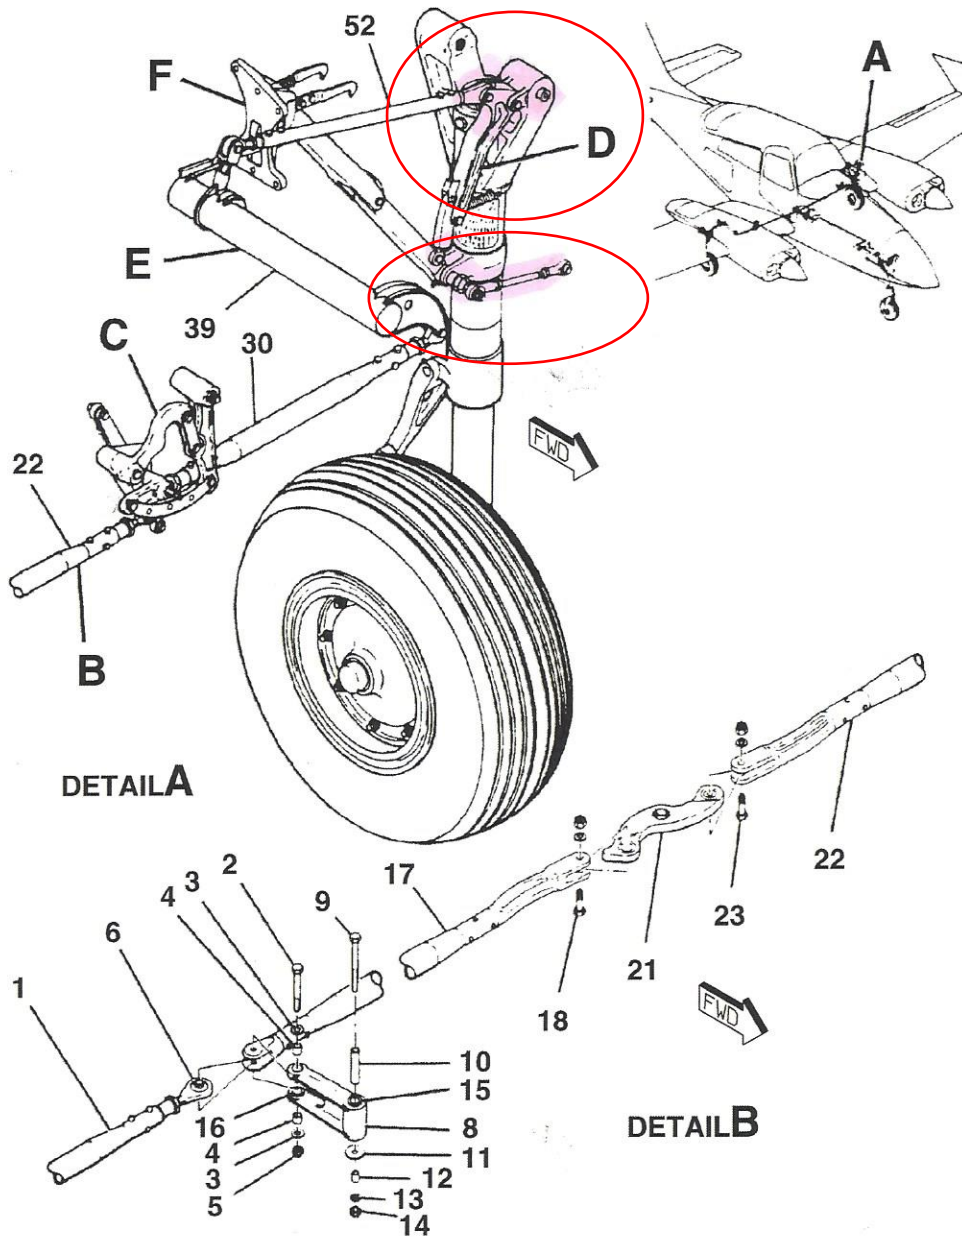

10403001
A10413007
B10413005

Sheet 1 of 2

A56225

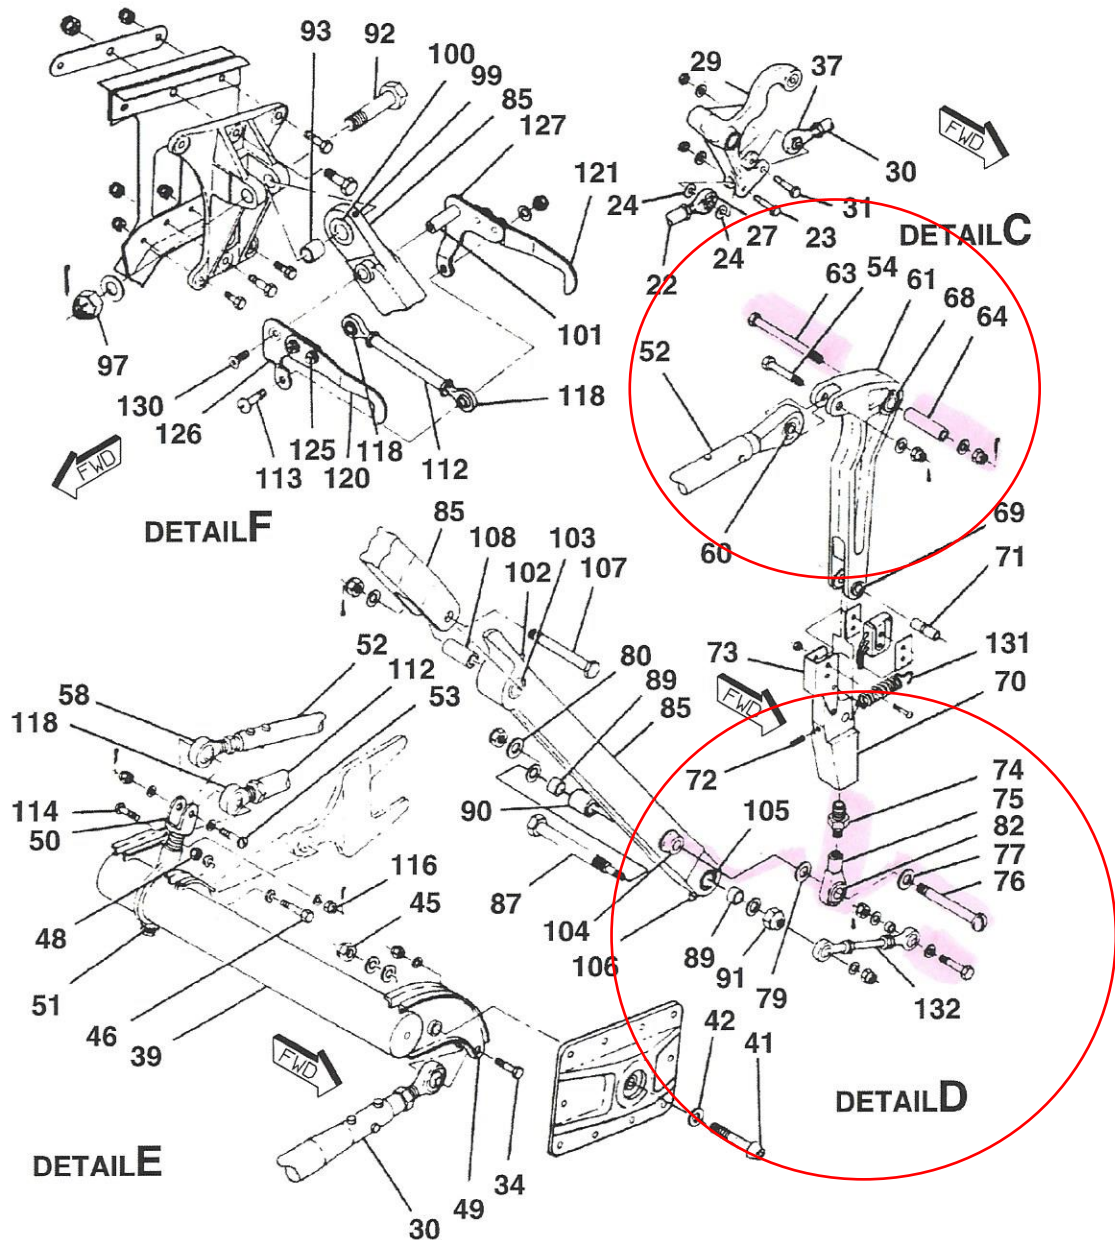

C10413005
D14413003
E52412001
F14411001


Sheet 2 of 2

MAIN LANDING GEAR INSTALLATION - FIGURE 01

ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECTIVITY FROM TO	UNITS PER ASSY
		MAIN LANDING GEAR INSTALLATION		
1		· MAIN GEAR RETRACTION LINKAGE INSTL-REFER TO 32-30-00 FIGURE 01		RF
2		· MAIN GEAR DOORS RETRACTION LINKAGE INSTL-REFER TO 32-30-00 FIGURE 02		RF
3		· MAIN GEAR WHEEL INSTL-REFER TO 32-40-00 FIGURE 01		RF
- 4		· MAIN GEAR BRAKE INSTL-REFER TO 32-41-00 FIGURE 03		RF
5		· MAIN GEAR STRUT ASSY-REFER TO 32-10-00 FIGURE 02		RF
6	0841011-1	· PIN-TRUNNION ATTACH REFER TO NOTE 1		2
6A	0841012-1	· FITTING ASSY-LUBRICATION		2
7	NAS561P4-28	· PIN-SLOTTED		2
8	0841004-1	· WASHER-THICKNESS 0.063		AR
- 9	0841004-2	· WASHER-THICKNESS 0.035		AR
- 10	0841004-3	· WASHER-THICKNESS 0.028		AR
11	0822180-7	· FORGING-GEAR SUPPORT LH		1
- 11A	0822180-207	· FORGING-GEAR SUPPORT LH ALT FOR 0822180-7		1 R
- 12	0822180-8	· FORGING-GEAR SUPPORT RH		1
- 12A	0822180-208	· FORGING-GEAR SUPPORT RH ALT FOR 0822180-8		1 R
13	AN3-6A	· BOLT		2
14	MS21044N7	· NUT		2 R
15	AN4-10A	· BOLT		3
16	MS21044N4	· NUT		3 R
17	AN5-10A	· BOLT		1
18	MS21044N5	· NUT		1 R
NOTE 1: ON INITIAL FIELD INSTALLATION ORDER 0841012-1 LUBRICATION FITTING				

- item not illustrated

A56222

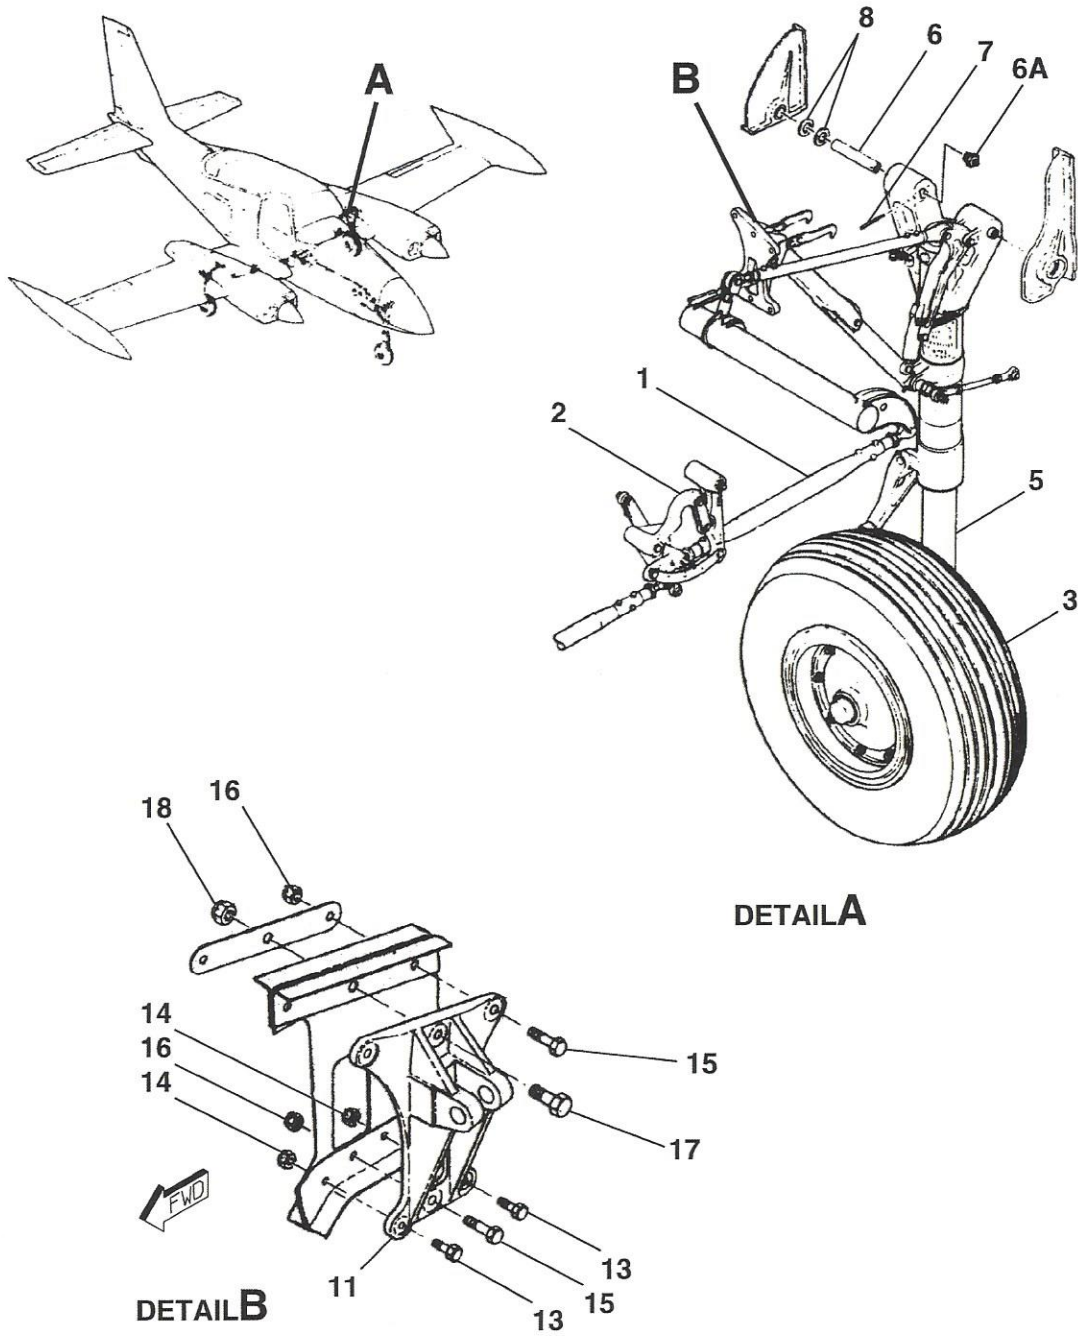

Sheet 1 of 1