

B E E C H C R A F T
B O N A N Z A 3 3 T H R U E 3 3
I L L U S T R A T E D P A R T S C A T A L O G

FIGURE 48
EXHAUST SYSTEM
CD-1 AND AFTER

BEECHCRAFT
 BONANZA 33 THRU E33
 ILLUSTRATED PARTS CATALOG

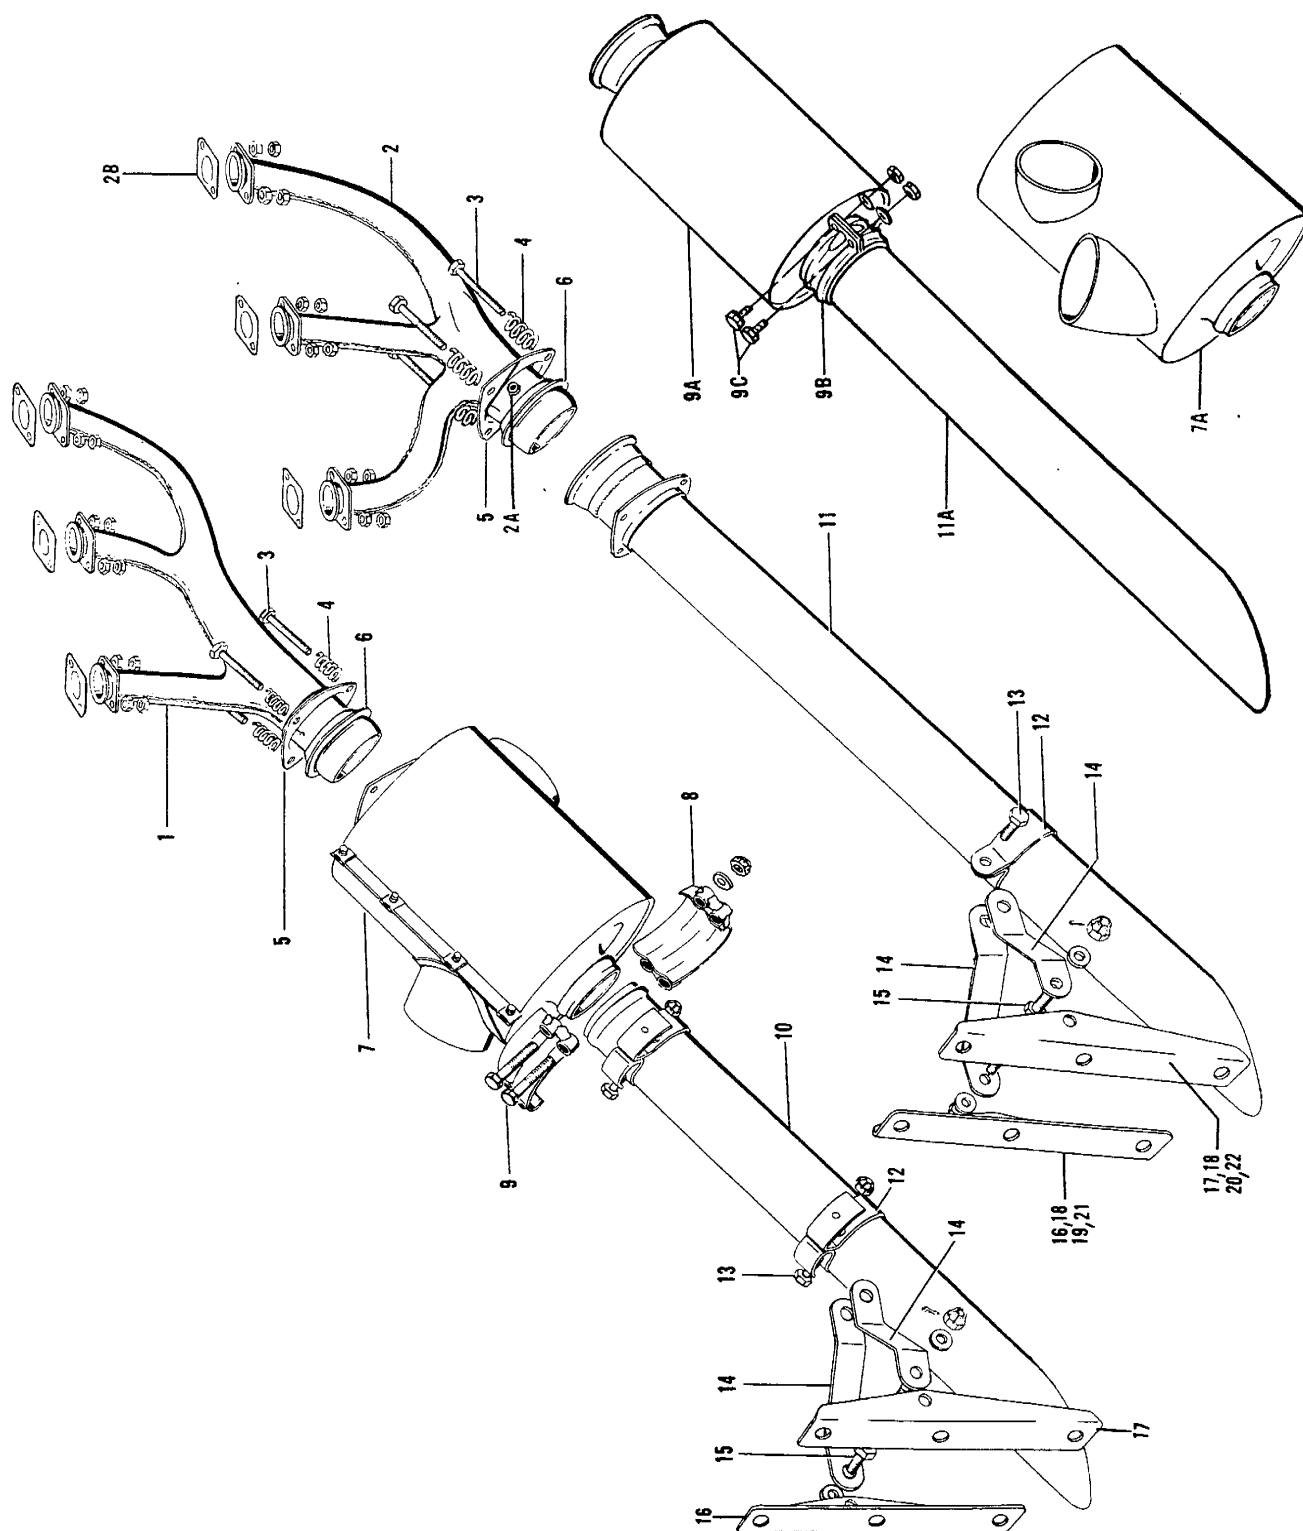


FIGURE 48. EXHAUST SYSTEM

B E E C H C R A F T
BONANZA 33 THRU E33
I L L U S T R A T E D P A R T S C A T A L O G

FIG. & ITEM NO.	PART NO.	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
48	33-950000	SYSTEM INSTL,EXHAUST /SEE FIG. 47 FOR NHA/ . . .	NP	3
	33-950000-5	SYSTEM INSTL,EXHAUST /SEE FIG. 47 FOR NHA/ . . .	NP	4
	33-950001	SYSTEM INSTL,EXHAUST /SEE FIG. 47 FOR NHA/ . . .	NP	5
- 1	35-950118	. STACK ASSY,LH EXHAUST	1	8
- 2	35-950116	. STACK ASSY,RH EXHAUST /WITHOUT ALCOR/	1	8
	33-950001-5	. STACK ASSY,RH EXHAUST /WITH ALCOR/	1	7
- 2A	MCI106-53	. . BOSS.	1	7
- 2B	350606	. GASKET,EXHAUST FLANGE	6	8
	632837	. GASKET,EXHAUST FLANGE /ALTERNATE FOR 350606/. /ATTACHING PARTS/	6	8
- 3	AN3-12 /M/ AN960-10	. BOLT. WASHER.	6 6	
- 4	100943CR-ZX020F AN310-3	. SPRING. NUT	6 6	
	MS24665-172	. PIN,COTTER.	6	
- 5	186-216	. . FLANGE,BOLT	2	8
- 6	186-6	. . COLLAR,EXHAUST TUBE	2	8
- 7	186D	. HEATER /LH ONLY/.	1	3
- 7A	186E	. HEATER /RH ONLY/.	1	4
	8003-9	. HEATER /RH ONLY/ /SUPERSEDES 8003/.	1	5
- 8	186-8A	. CLAMP,EXHAUST /ATTACHING PARTS/	1	8
- 9	AN3-4 /M/ AN960-10	. BOLT. WASHER.	4 4	
	AN310-3	. NUT	4	
	MS24665-132	. PIN,COTTER.	4	
- 9A	189	. MUFFLER /RH OR LH/. /OPTIONAL WITH SUPER SOUNDPROOFING/	1	2
- 9B	186-8A	. CLAMP,MUFFLER /RH OR LH/. /OPTIONAL WITH SUPER SOUNDPROOFING/	2	2
		/ATTACHING PARTS/		
- 9C	AN3-4 /M/ AN960-10	. BOLT. WASHER.	4 4	
	AN310-3	. NUT	4	
	MS24665-132	. PIN /SUPERSEDES AN380-2-2/.	4	
- 10	35-950133	. PIPE,LH EXHAUST	1	2
- 11	33-950000-1	. TUBE ASSY,LH EXHAUST.	1	6
- 11A	35-950133	. TUBE ASSY,RH EXHAUST. PIPE,RH EXHAUST	1 1	1 2
		/OPTIONAL WITH SUPER SOUNDPROOFING/		
- 12	33-950011	. PIPE,RH EXHAUST	1	5
- 12	35-950126	. CLAMP,EXHAUST /ATTACHING PARTS/	2	8
- 13	AN3-3 /M/ AN960-10	. BOLT. WASHER.	1 1	
	AN310-3	. NUT	1	
	MS24665-132	. PIN,COTTER /SUPERSEDES AN380-2-2/	1	
- 14	35-950132	. LINK,EXHAUST PIPE	4	3
	35-950132	. LINK,LH EXHAUST SUPPORT	2	6
	33-950010	. LINK,RH EXHAUST SUPPORT /ATTACHING PARTS/	2	6
- 15	AN3-5/M/ AN960-10L	. BOLT. WASHER.	1 3	
	AN310-3	. NUT	1	
	MS24665-132	. PIN,COTTER /SUPERSEDES AN380-2-2/	1	
	MS35489-4	. GROMMET	4	

B E E C H C R A F T
BONANZA 33 THRU E33
I L L U S T R A T E D P A R T S C A T A L O G

FIG. & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
48 - 16	35-415330-72	ANGLE,LH & RH		2	9
- 17	35-415330-73	ANGLE,LH & RH		2	9
	35-415330-72	ANGLE,LH & RH		1	10
	35-415330-73	ANGLE,LH & RH		1	10
- 18	35-415412-31	ANGLE,RH.		2	11
- 19	35-415412-53	ANGLE,RH.		1	12
- 20	35-415412-54	ANGLE,RH.		1	12
- 21	35-415412-89	ANGLE,RH.		1	6
- 22	35-415412-90	ANGLE,RH.		1	6

CODES OF EFFECTIVITY

1 CD-1 THRU CD-224, CD-233,CD-234, CD-236,CD-241, CD-246 THRU CD-250	2 CD-225 AND AFTER EXCEPT CD-233,CD-234, CD-236,CD-241, CD-246 THRU CD-250
3 CD-1 THRU CD-735	4 CD-736 THRU CD-813
5 CD-814 AND AFTER	6 CD-736 AND AFTER
7 CD-958 AND AFTER	8 CD-1 AND AFTER
9 CD-1 THRU CD-387	10 CD-388 AND AFTER
11 CD-388 THRU CD-627	12 CD-628 THRU CD-735