

Wing (Cont)

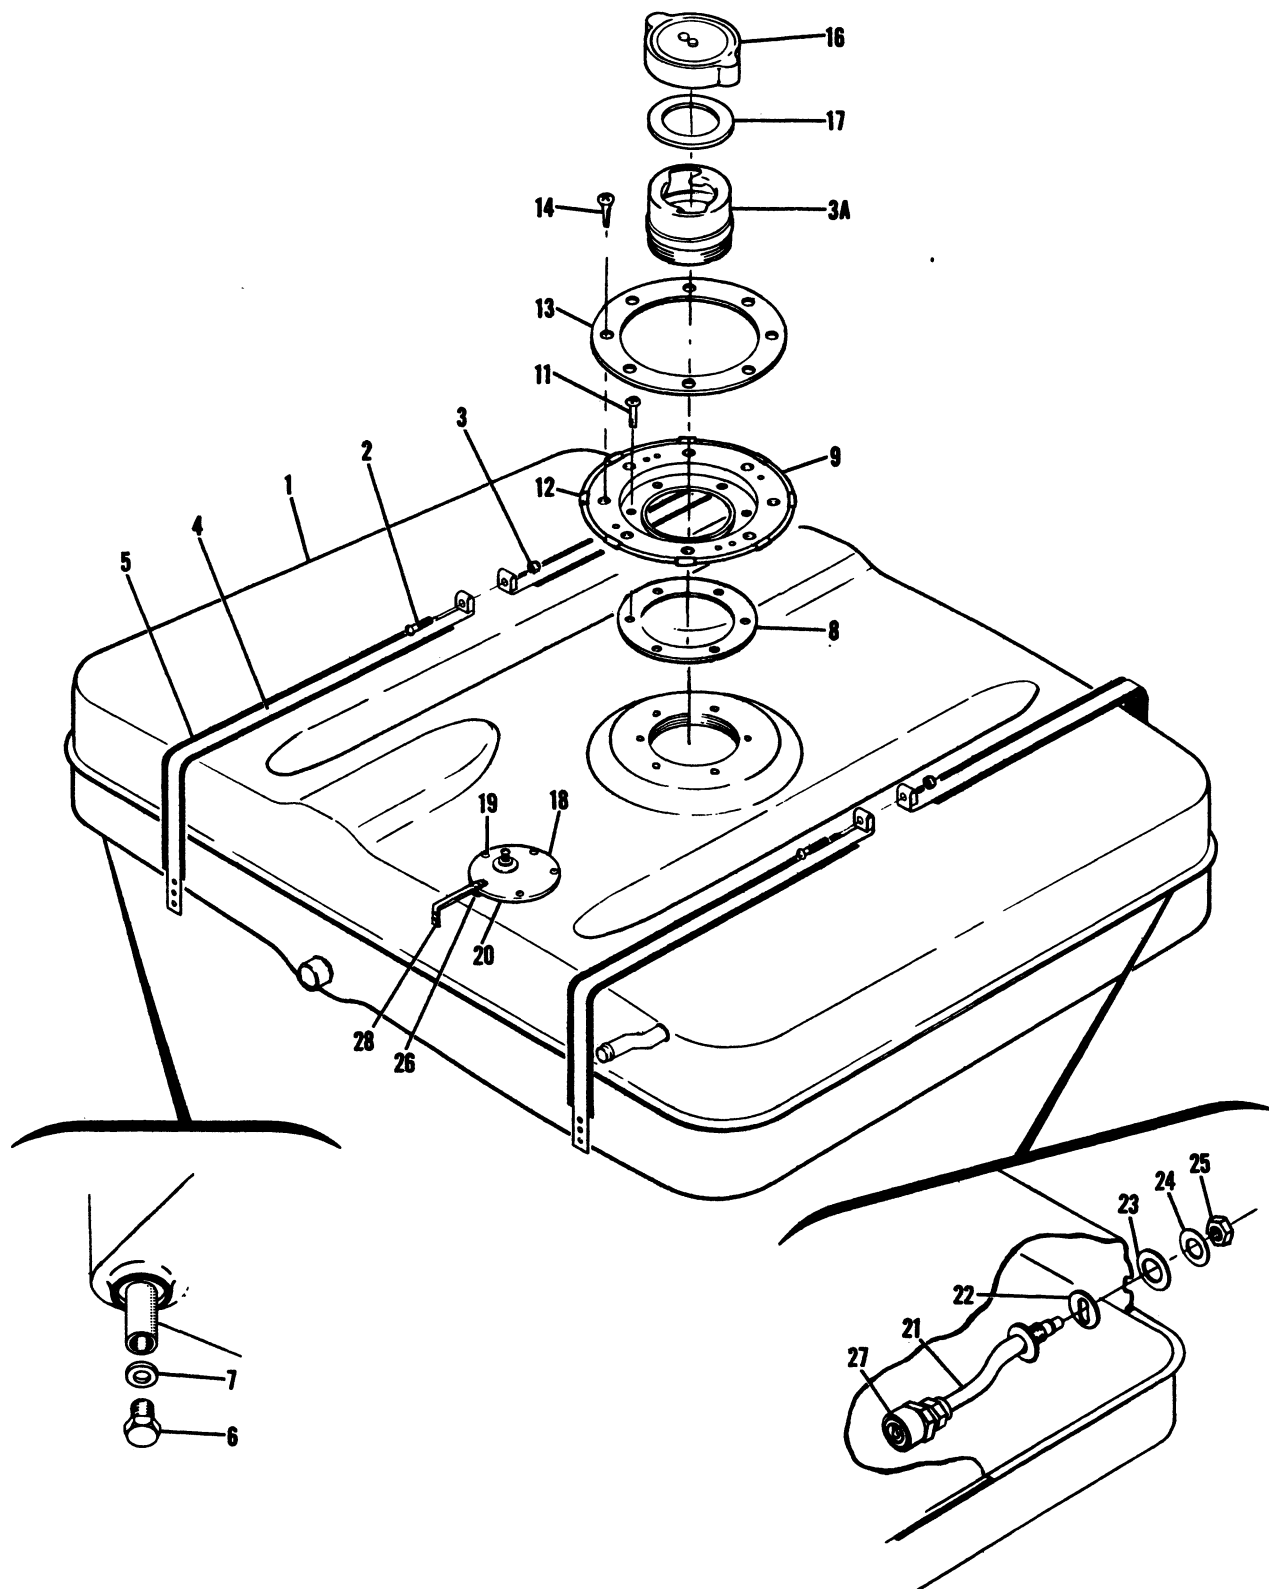


Figure 4. Fuel Tank Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
4 -		TANK INSTALLATION-FUEL LH -----	NP	
- 1	0426508-9	TANK INSTALLATION-FUEL RH -----	NP	
	0426508-10	TANK ASSEMBLY-FUEL LH -----	1	
		TANK ASSEMBLY-FUEL RH -----	1	
- 2	AN520-10R36	ATTACHING PARTS -----		
- 3	NAS679A3	SCREW -----	2	
		NUT -----	2	
- 3A	0311240-17	FILLER NECK-FUEL TANK -----	1	
- 4	0426512	STRAP ASSEMBLY-FUEL TANK -----	4	
- 5	0426512-5	PAD-NEOPRENE -----	4	
- 6	0523520-9	PLUG-DRAIN OUTLET -----	1	
		VALVE-FUEL DRAIN USED WITH SAMPLER CUP SEE FIG 4B -----	1	
- 7	MS28778-4	GASKET-DRAIN PLUG -----	1	
- 8	0523532	GASKET-FUEL TANK ADAPTER -----	2	
- 9	0523529-1	ADAPTER ASSEMBLY-FUEL TANK -----	1	
		ATTACHING PARTS -----		
-10		DELETED, NEVER USED -----		
-11	AN520-10R10	SCREW -----	6	
		NUT TIN -----	8	
-12	NAS488-7-3	SEAL-ADAPTER -----	1	
-13	0523531	SCREW CESSNA STANDARD -----	8	
-14	S102128-10	DELETED, SEE INDEX 3A -----		
-15		CAP ASSEMBLY-FUEL TANK -----	1	
-16	0311360-4	GASKET-CAP -----	1	
-17	0311360-5	TRANSMITTER-FUEL GAUGE -----	1	
-18	0426517-1	ATTACHING PARTS -----		
-19	AN520-10R8	SCREW -----	5	
	S350	WASHER CESSNA STANDARD -----	5	
	AN960D10L	WASHER -----	5	
-20	S1588-1	GASKET-TRANSMITTER -----	1	
-21	0523552-2 *	WELD ASSEMBLY-FUEL CELL VENT LH TANK ONLY -----	1	
		ATTACHING PARTS -----		
-22	0523554-1	GASKET LH TANK ONLY -----	1	
-23	0523554-2	GASKET LH TANK ONLY -----	1	
-24	0523556-1	WASHER LH TANK ONLY -----	1	
-25	AN924-6D	NUT LH TANK ONLY -----	1	
-26	0413247	GROUND-STRAP -----	1	
-27	0716124-5	VALVE ASSEMBLY-FUEL VENT WHEN EXHAUSTED USE 0716124-6 -----	1	A
		LH TANK ONLY -----		
	0716124-2	VALVE ASSEMBLY-FUEL VENT ALTERNATE LH TANK ONLY -----	1	A
	0716124-6	VALVE ASSEMBLY-FUEL VENT LH TANK ONLY -----	1	B
-28	0516006-1	STRAP-FUEL TRANSMITTER GROUND -----	1	C
NOTE. *WHEN REPLACING THIS PART ON AIRPLANES PRIOR TO SERIAL 15059351 ALSO ORDER PARTS MARKED * ON FIGURE 43. A---150 SERIAL 17001 THRU 15060699 B---150 SERIAL 15060700 & ON F150 SERIAL F150-0001 & ON C---150 SERIAL 15063441 & ON F150 SERIAL F150-0053 & ON				