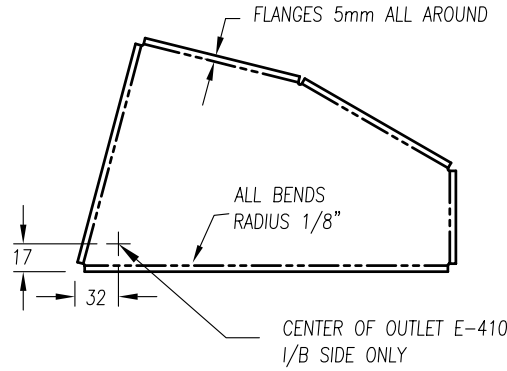
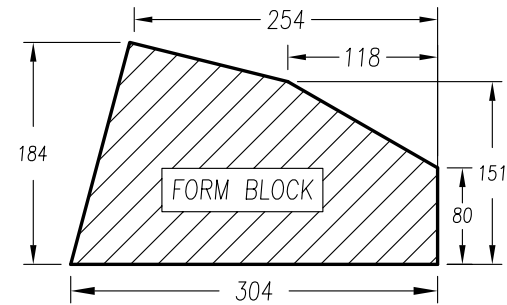
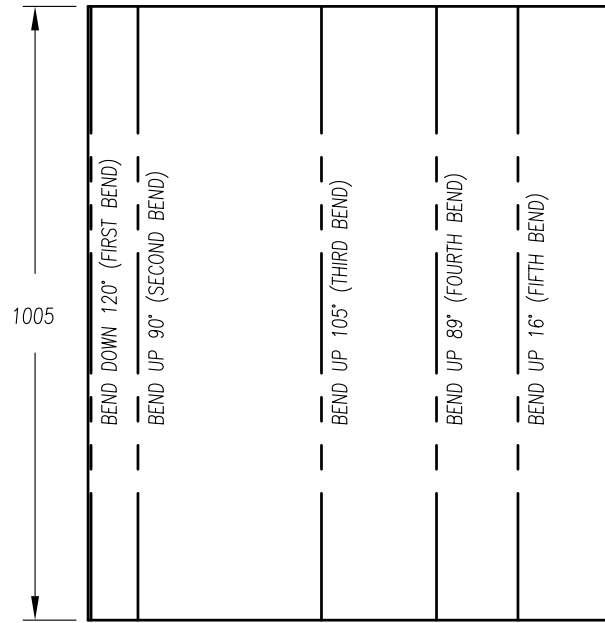


P/N E-400-000 OUTLET
6061-T6 MACHINED FITTING
(2 REQ'D EACH)

P/N E-398-000 DRAIN
6061-T6 MACHINED FITTING
(2 REQ'D EACH)

APPROXIMATE LOCATION OF FUEL TANK SENDER (POSITIONED IN LINE WITH THE LIGHTENING HOLE IN THE NOSE RIBS)

E-398-000
E-400-000

CAV-110 QUICK DRAIN
1/8" NPT, QTY=2


DX2021 FINGER SCREEN
16 MESH/INCH 3/8" NPT, QTY=2

F125-4B NIPPLE COUPLER
1/4" HOSE 1/4" NPT PIPE, QTY=2

FHC504TB HOSE CLAMPS
5/16" TO 5/8", QTY=2



FFLH-4 FUEL LINE
1/4" I/D, QTY=10FT

GLUE 1/8" x 1" CORK STRIPS TO ALL SURFACES OF FUEL TANK THAT CONTACTS THE WING STRUCTURE. MULTIPLE LAYERS MAY BE NECESSARY.

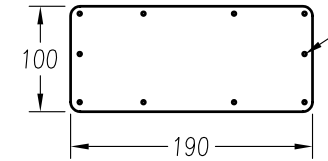


1 LE TANK
WELDED ASSEMBLY (1L+1R REQ'D)

FILLER CAP

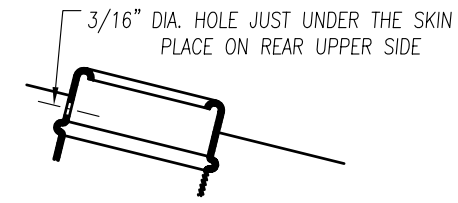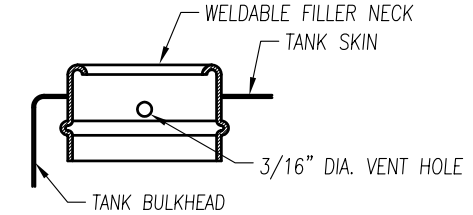



2 FINGERSCREEN ACCESS COVER
t=.040" 6061-T6 (2 REQ'D)

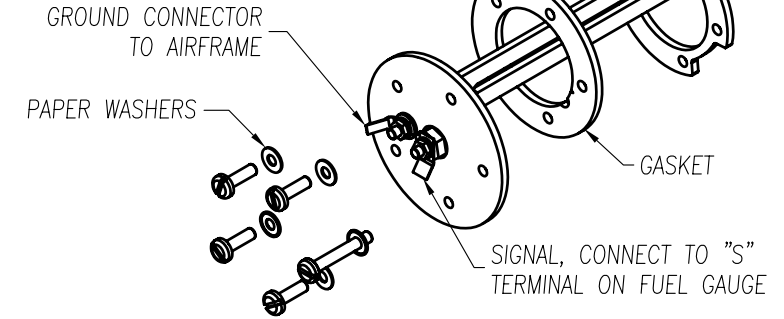

226-002 FUEL SENDER BACKING PLATE
10-180 OHMS (2 REQ'D)

FUEL TANK SKIN
t=.032" 6061-T6 (1L+1R REQ'D)


FUEL TANK ENDS
t=.032" 6061-T6 (2L+2R REQ'D)

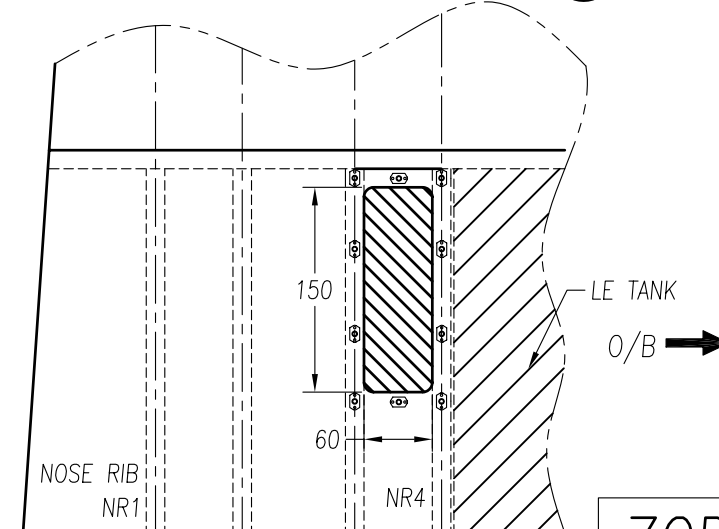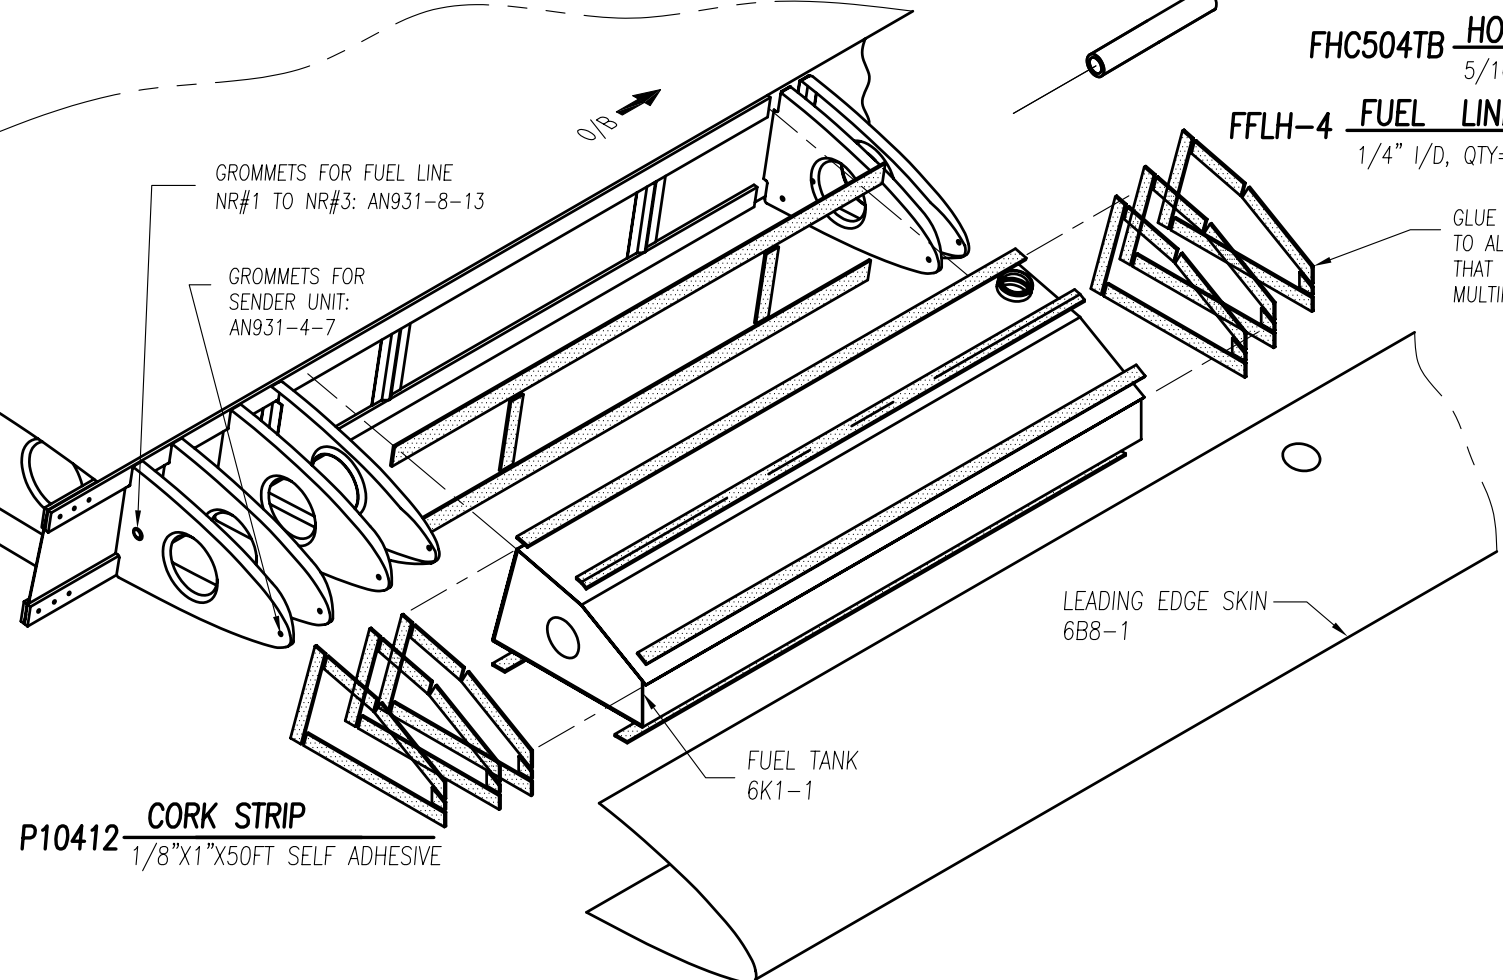

ZODIAC
CH 601 XL


LEADING EDGE WING TANKS

6-K-1

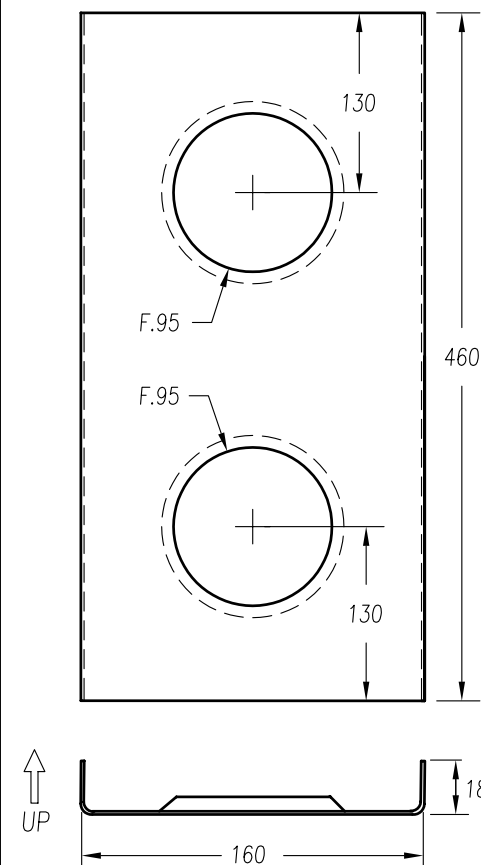



L=460
dl=193

1 SUPPORT CHANNEL
t=.025" 6061-T6 (1 REQ'D)

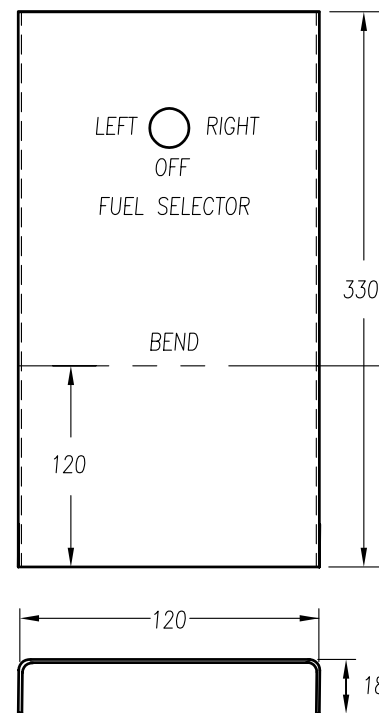


L=330
dl=153


2 CENTER CONSOLE
t=.025" 6061-T6 (1 REQ'D)

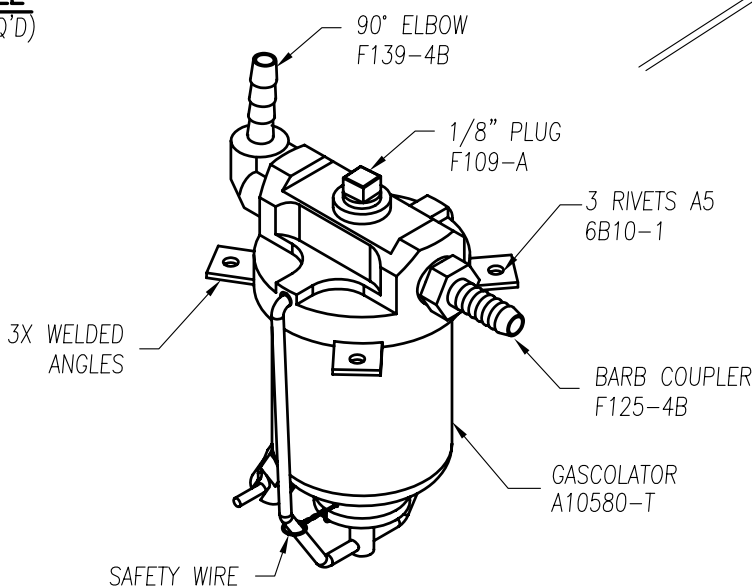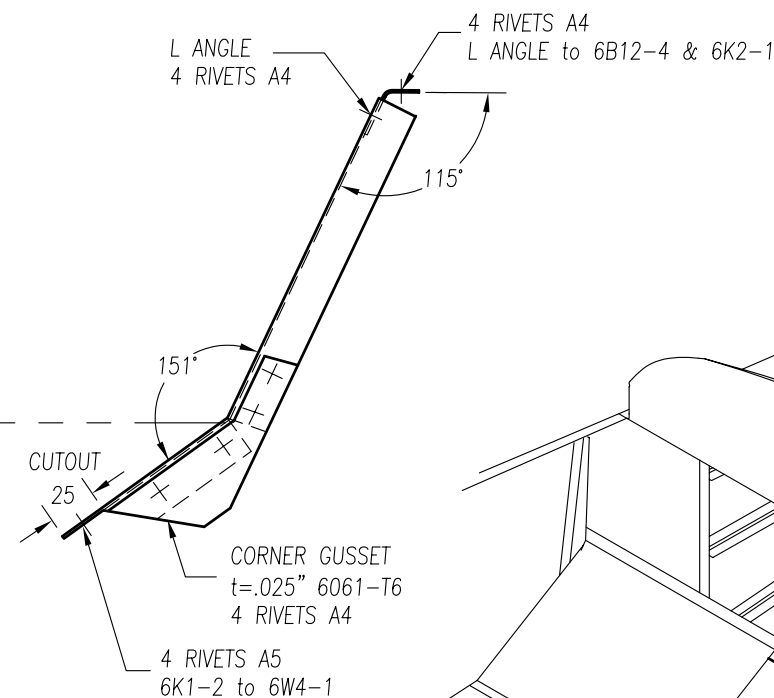

A10580-T FUEL GASCOLATOR W/ WELDED TABS
(1 REQ'D)

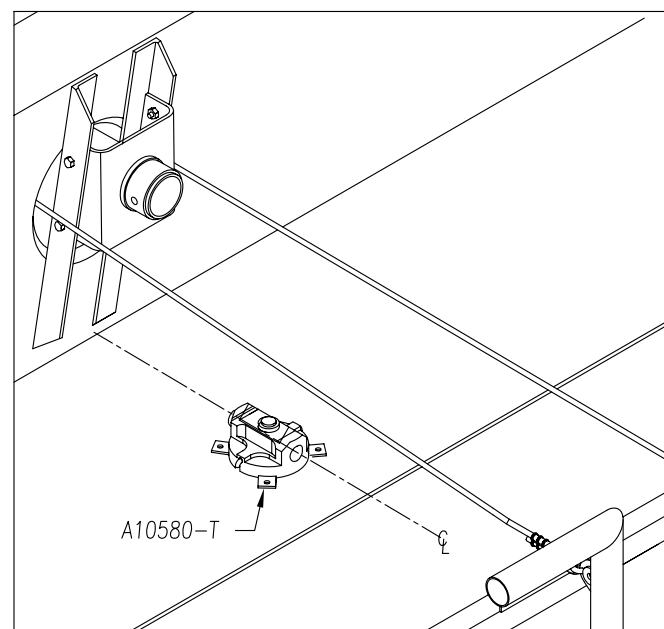


LOCATION OF GASCOLATOR
ON CABIN FLOOR 6B10-1
ON AIRCRAFT CENTER LINE

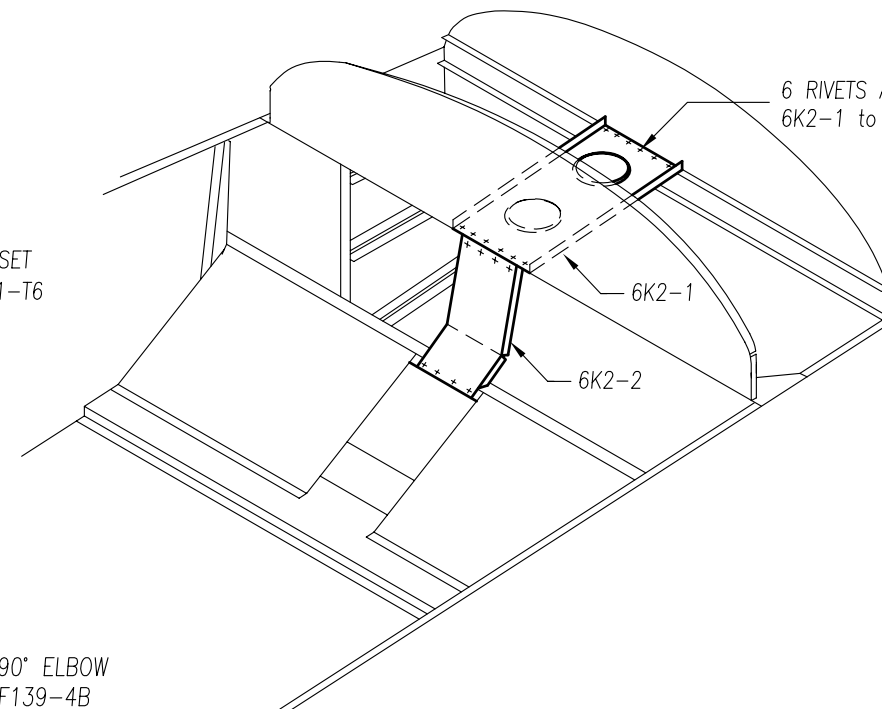

3 WAY FUEL SELECTOR
ANDAIR BALL VALVE
P/N FS20F3-F qty=1

90° ELBOW
F139-4B qty=2

BARB COUPLER
F125-4B qty=1

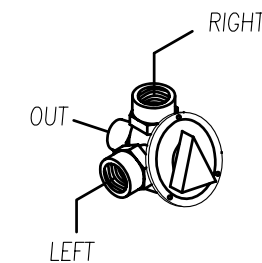

6 RIVETS A4
6K2-1 to 6B7-2

6K2-1


6K2-2

LEFT
WING TANK

GASCOLATOR

RIGHT
WING TANK

3 WAY FUEL SELECTOR
LEFT - RIGHT - OFF

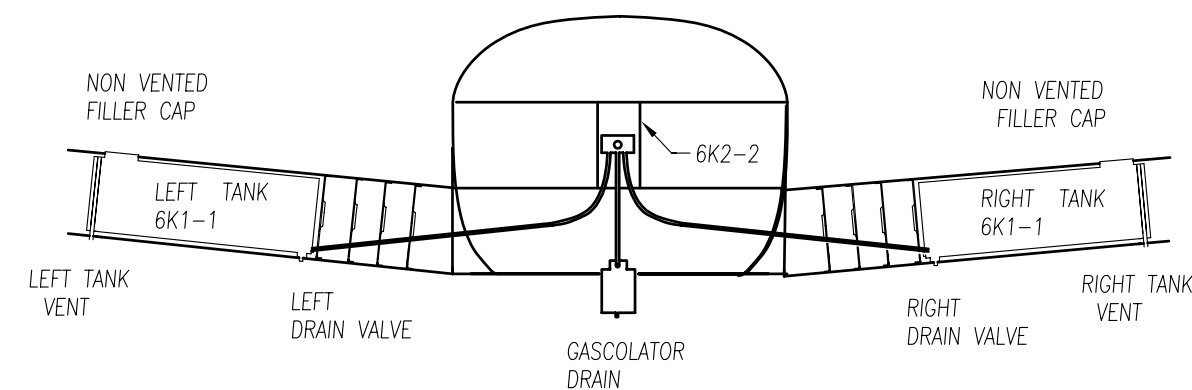

ZODIAC
CH 601 XL

CENTER CONSOLE
3 WAY FUEL SELECTOR
GASCOLATOR

6-K-2

copyright© 2002 CHRIS HEINTZ zenithair.com

DATE: 03/03