


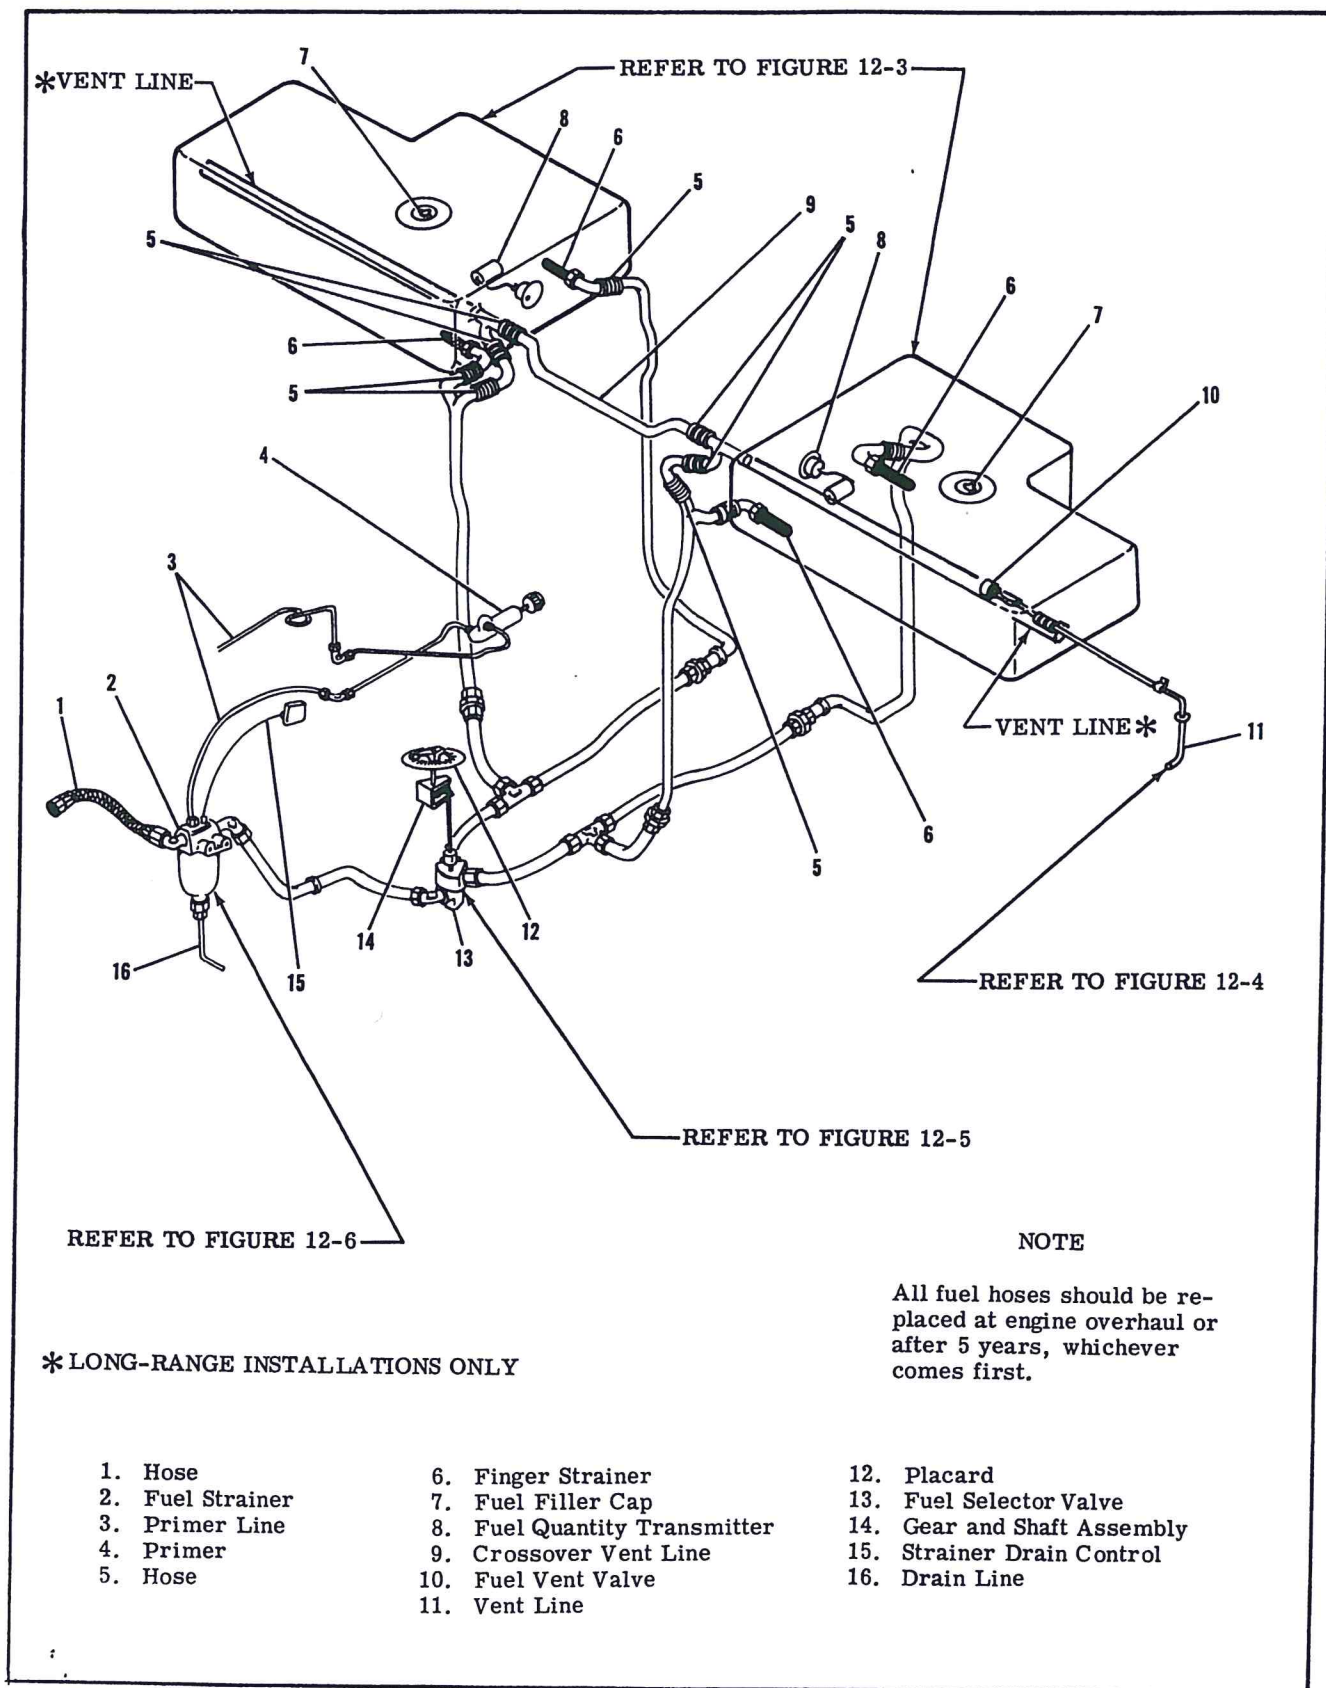


Figure 12-2. Fuel System

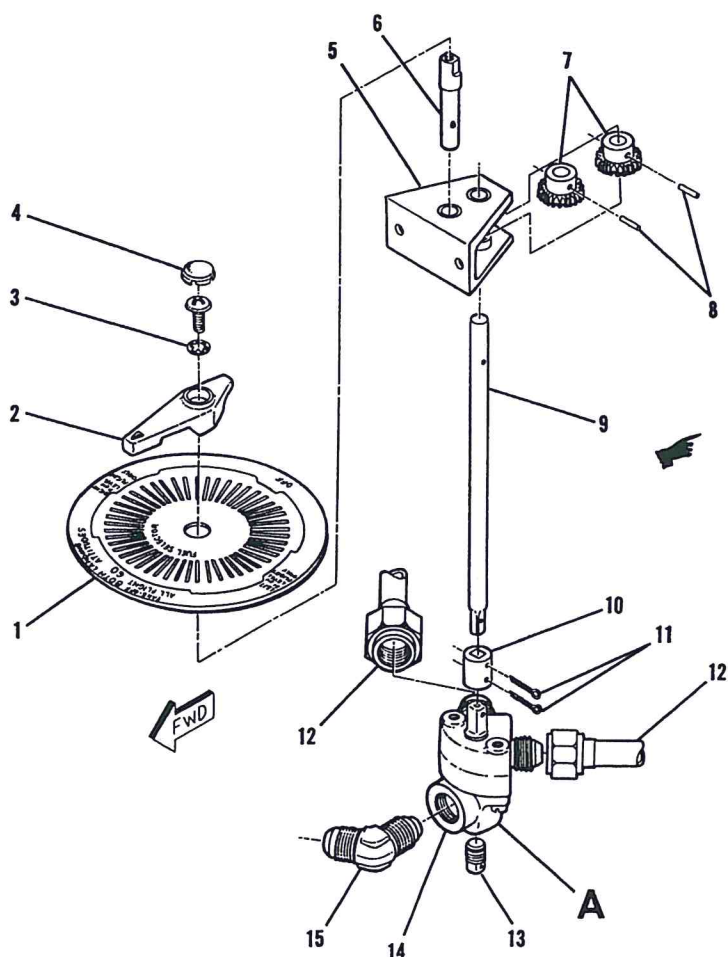


1. Placard
2. Handle
3. Washer
4. Cap
5. Gear Retainer Assembly
6. Valve Handle Shaft
7. Gear
8. Roll Pin
9. Valve Shaft
10. Coupling
11. Cotter Pin
12. Fuel Line
13. Plug
14. Fuel Selector Valve
15. Elbow

#### NOTE

Do not disassemble selector valve gear and shaft assembly (5) thru (9). Remove and replace as a unit.


Single-Engine Service Letter #SE74-1 should be consulted for inspection and alteration of some 1973 and 1974 selector valve gear and shaft assemblies.

Repair kit No. 0716613-200 is available from the Cessna Service Parts Center for replacement of seals, washer and O-rings in fuel selector valve for service parts beginning with Serial 1825399.

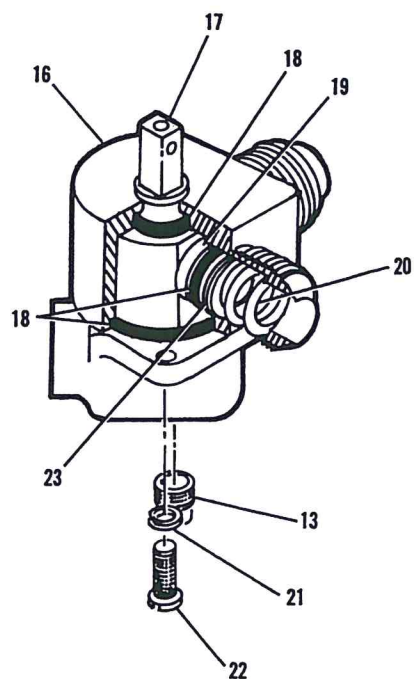

Detail A

Figure 12-5. Fuel Selector Valve

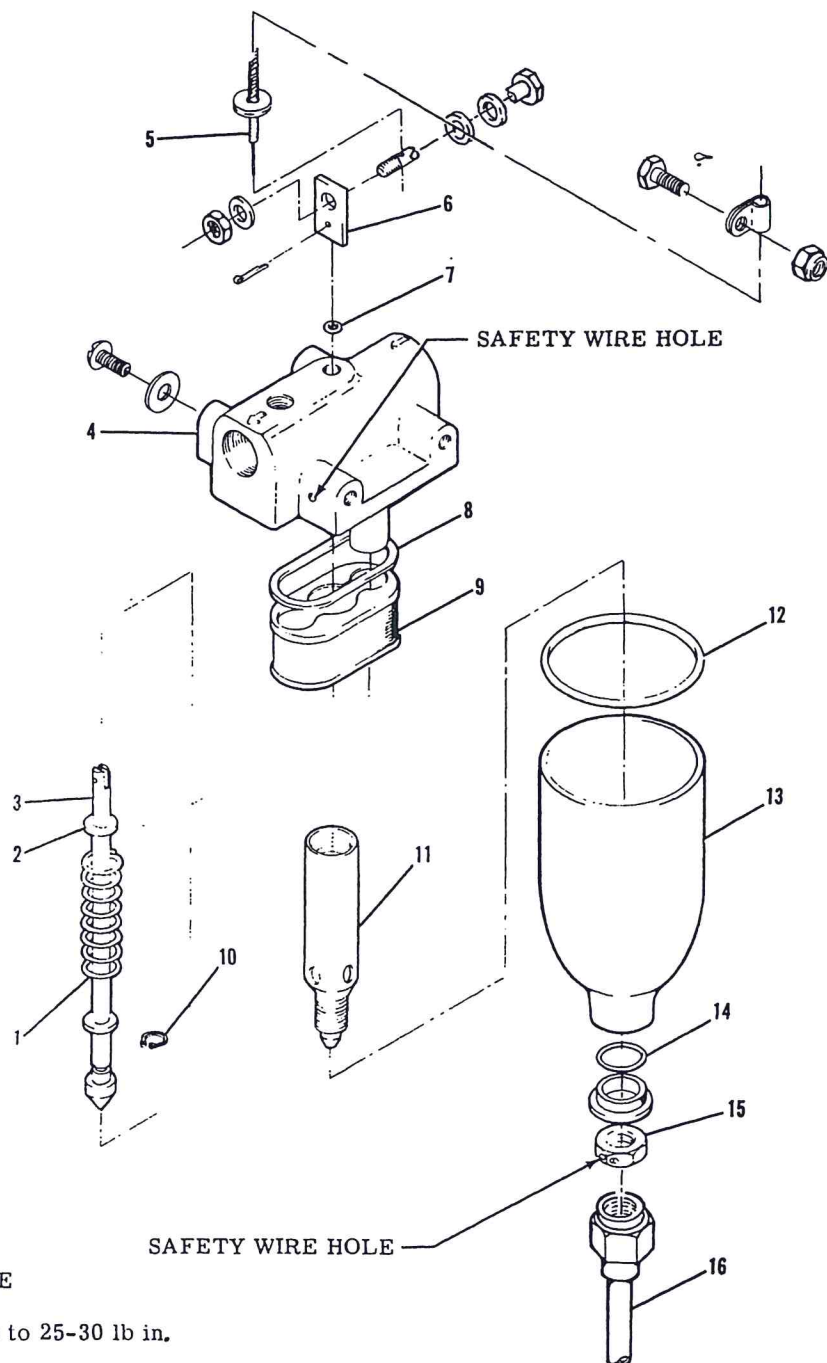

NOTE

Torque nut (15) to 25-30 lb in.

- 1. Spring
- 2. Washer
- 3. Plunger
- 4. Top
- 5. Drain Control

- 6. Plate
- 7. O-Ring
- 8. Gasket
- 9. Filter
- 10. Retainer Ring
- 11. Standpipe

- 12. O-Ring
- 13. Bowl
- 14. O-Ring
- 15. Nut
- 16. Drain Line

Figure 12-6. Fuel Strainer