



Photo 1 – View of damage to the left wing and aileron (Courtesy of Pilot)



Photo 2 – View of the post-accident tailwheel steering yoke with connector clips attached (Courtesy of El Monte Airport Operations)

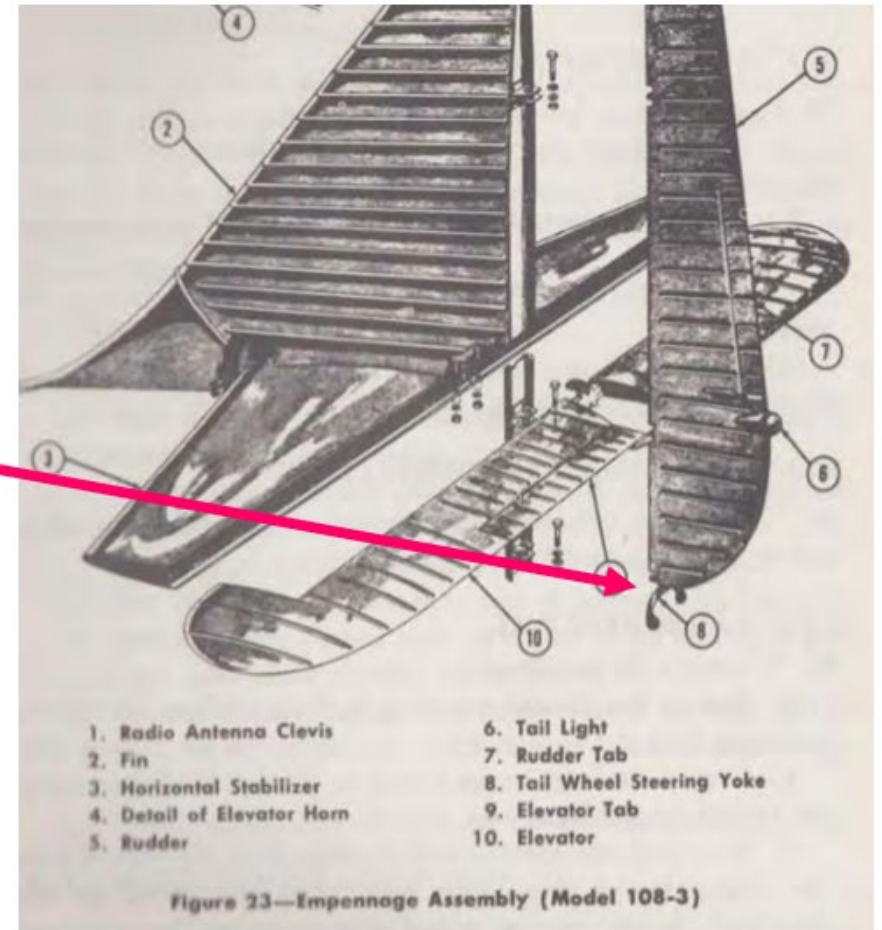


Photo 3 – View of Stinson 108-3 Tailwheel Steering Yoke Assembly (Courtesy of Manufacturer)



ITEM	PART NUMBER	DESCRIPTION	QTY
X	ABI-3224A	STD TAIL WHEEL AND FORK ASSY	X
1	ABI-3216-00	BRACKET ASSEMBLY	1
2	ABI-3241-3S	SPACER	1
3	ABI-3243-02	LEAF SPRING ADAPTER 1-1/4"	1
4	ABI-3243-01	LEAF SPRING ADAPTER 1-1/2"	1
5	ABI-3207-00	FIBER THRUST WASHER	1
6	ABI-3234-00	THRUST PLATE ASSEMBLY	1
7	ABI-3233-00	SPRING, COMPRESSION	5
8	ABI-3411-02	DUST CAP, UPPER	1
9	ABI-3206-00	THRUST WASHER	2
10	ABI-3214-00	STEERING ARM ASSEMBLY	1
11	ABI-3219-00	PAWL	1
12	ABI-3411-01	DUST CAP, LOWER	1
13	ABI-3205-00	BUSHING	1
14	ABI-3224	TAIL WHEEL FORK	1
15	A4050	CONE BEARING	3
16	A4138	BEARING RACE	3
17	1863 or ABI-7024	GREASE RETAINER	1
18	ABI-2504-1	SPACER	1
19	AN960-816	WASHER	2
20	AN320-8	NUT, SHEAR	1
21	MS24665-283	COTTER PIN	2
22	ABI-3222-00	SPRING, COMPRESSION	1
23	ABI-3258-00	SPACER	1
24	ABI-3258-01	SPACER	1
25	ABI-3257-00	PN	1
26	ABI-3236	AXLE	1
27	ABI-3225-00	TAB LOCK WASHER	1
28	ABI-3227-00	SPACER	2
29	33475-008	NUT, CASTLE	1
30	ABI-3244-00	WHEEL HALF	2
31	ABI-7024	BEARING RACE SEAL	2
32	AN4-7A	WHEEL BOLT	4
33	2.80X2.50X4	STANDARD TIRE & TUBE	1
34	33478-202	SELF LOCKING NUT	4
35	1/4" WASHER	FLAT WASHER	4
36	T7201	ZERK FITTING	1
37	ABI-232-046	DOWEL PIN	1
38	ABI-2602	GASKET	1

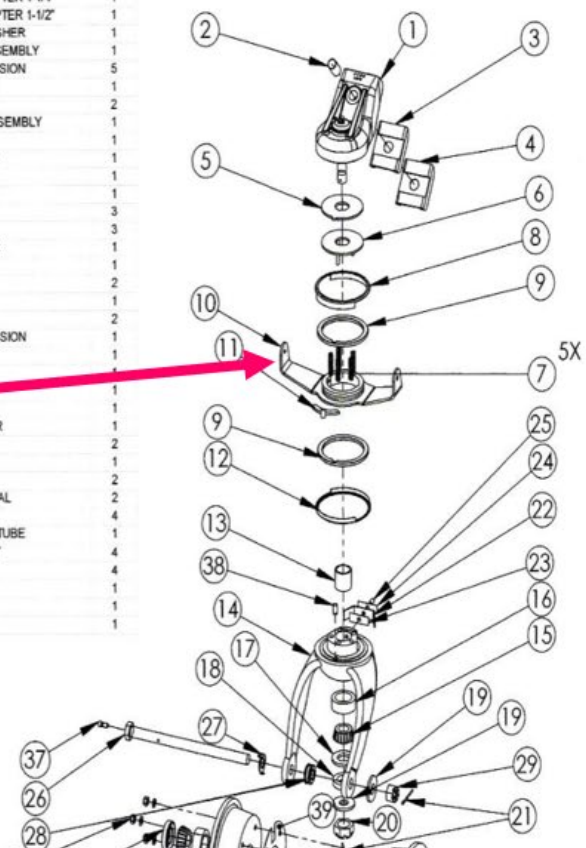


Photo 4 – View of the Stinson 108-3 Steering Arm Assembly (Courtesy of FAA PMA)